



LAP-C Pro

LOGIC ANALYZER

USER GUIDE

V2.4 Aug. 2020



Table of Content

| | |
|-------------------------------------------------|-----------|
| Precautions | 14 |
| 1. Introduction..... | 15 |
| 1.1. Preface..... | 15 |
| 1.2. About this document..... | 15 |
| 1.3. Product Introduction..... | 16 |
| 1.4. Package Content..... | 16 |
| 1.5. System Requirements | 17 |
| 1.6. Product Specifications | 18 |
| 2. Installation and Setup | 23 |
| 2.1. Software Installation | 23 |
| 2.2. Hardware Setup..... | 24 |
| 2.3. Trigger In/Out | 25 |
| 2.4. Operating Environment and Maintenance..... | 26 |
| 3. User Interface | 27 |
| 4. Software Operations | 30 |
| File..... | 30 |
| 4.1. Menu Layout..... | 30 |
| 4.2. New | 30 |
| 4.3. Open | 31 |
| 4.4. Close | 31 |
| 4.5. Save | 31 |
| 4.6. Save As | 31 |
| 4.7. Export..... | 32 |
| 4.8. Screen Capture | 38 |
| 4.9. Print..... | 39 |
| 4.10. Print Preview | 40 |



| | |
|-----------------------------------|-----------|
| 4.11. Options | 41 |
| 4.12. Exit | 52 |
| Acquisition | 53 |
| 4.13. Menu Layout | 53 |
| 4.14. Add Channel | 53 |
| 4.15. Add Bus | 54 |
| 4.16. Add Protocol Decoder | 57 |
| 4.17. Acquisition Setup | 60 |
| 4.18. Trigger Setup(quick) | 68 |
| 4.19. Trigger Setup(manual) | 77 |
| 4.20. Trigger Options | 81 |
| 4.21. Trigger Level | 82 |
| 4.22. Protocol Trigger | 82 |
| 4.23. Single Capture | 83 |
| 4.24. Repeated Capture | 84 |
| 4.25. Stop | 85 |
| 4.26. Autocapture | 85 |
| Analysis | 85 |
| 4.27. Menu Layout | 85 |
| 4.28. Active Range | 86 |
| 4.29. Bars | 86 |
| 4.30. Find | 87 |
| 4.31. Go To | 90 |
| 4.32. Highlight Data | 91 |
| 4.33. Files Comparison | 93 |
| 4.34. Image Decode | 95 |
| 4.35. Math Operations | 96 |
| 4.36. Noise Filter | 99 |
| 4.37. Draw Analog Waveform | 100 |
| 4.38. Signal Activity | 102 |



| | |
|--------------------------------------|------------|
| Options | 104 |
| 4.39. Menu Layout..... | 104 |
| 4.40. Protocol Analyzer Setting..... | 104 |
| 4.41. Long-time Record | 106 |
| 4.42. Pattern Generator | 109 |
| View | 110 |
| 4.43. Menu Layout..... | 110 |
| 4.44. Cursor Type..... | 110 |
| 4.45. Display Type..... | 111 |
| 4.46. Refresh..... | 121 |
| 4.47. Zoom | 122 |
| 4.48. Control Panel..... | 122 |
| 4.49. Memory View..... | 124 |
| 4.50. Navigator | 126 |
| 4.51. Packet List..... | 127 |
| 4.52. Statistics | 131 |
| 4.53. LTR Monitor..... | 134 |
| 4.54. Find Results..... | 135 |
| 4.55. Timing Bar | 135 |
| 4.56. Arrange Windows | 136 |
| 4.57. Split Screen | 137 |
| 4.58. Numeric Base / Encoding | 137 |
| Help | 138 |
| 4.59. Menu Layout..... | 138 |
| 4.60. About ZP-Logic..... | 138 |
| 4.61. About Zeroplus | 139 |
| 4.62. Help..... | 139 |
| 4.63. Hot Keys..... | 139 |
| 4.64. Send Feedback..... | 143 |
| 5. Contact Us | 146 |



Table of Figures

| | |
|-----------------------------------------------------------|----|
| Figure 1-1 Top view of the LAP-C Pro..... | 18 |
| Figure 1-2 LAP-C Pro pin overview | 21 |
| Figure 1-3 Cable connections to the LAP-C Pro..... | 22 |
| Figure 2-1 Main installation window..... | 23 |
| Figure 2-2 Probe connected to the LAP-C Pro | 24 |
| Figure 2-3 Probe and USB cable connection..... | 25 |
| Figure 3-1 ZP-Logic user interface | 27 |
| Figure 3-2 Reposition/hide sector; right-click menu | 28 |
| Figure 3-3 Repositioning the Control Panel example..... | 29 |
| Figure 4-1 File drop-down menu | 30 |
| Figure 4-2 Export Waveform dialog box | 33 |
| Figure 4-3 Export Packet List dialog box | 35 |
| Figure 4-4 Packet Filter Settings dialog box | 36 |
| Figure 4-5 Export Memory View dialog box | 37 |
| Figure 4-6 Screen capture dialog box..... | 38 |
| Figure 4-7 Print Setup dialog box | 40 |
| Figure 4-8 General settings dialog box..... | 41 |
| Figure 4-9 Start-up settings dialog box..... | 43 |
| Figure 4-10 Quick Access toolbar dialog box | 45 |
| Figure 4-11 Color settings dialog box | 48 |
| Figure 4-12 Waveform settings dialog box | 49 |



| | |
|-------------------------------------------------------------------|----|
| Figure 4-13 Hot Key settings dialog box | 50 |
| Figure 4-14 Save Options dialog box | 51 |
| Figure 4-15 Acquisition drop-down menu | 53 |
| Figure 4-16 Add Channel dialog box | 54 |
| Figure 4-17 Add Bus dialog box | 55 |
| Figure 4-18 Add Bus / Advanced Settings dialog box..... | 56 |
| Figure 4-19 Add Protocol Decoder dialog box | 57 |
| Figure 4-20 I2C Protocol Decoder Setup dialog box..... | 58 |
| Figure 4-21 Bus/Signal Setup dialog box..... | 60 |
| Figure 4-22 LAP-C Pro sampling Setup dialog box | 61 |
| Figure 4-23 Trigger Level dialog box for Low Voltage Probes | 63 |
| Figure 4-24 Connection diagram with logic analyzer as master..... | 64 |
| Figure 4-25 Connection diagram with logic analyzer as slave | 65 |
| Figure 4-26 DSO Connection dialog box | 66 |
| Figure 4-27 Waveform trigger dialog box..... | 68 |
| Figure 4-28 Waveform trigger preview dialog box | 69 |
| Figure 4-29 Levels with tolerance example | 69 |
| Figure 4-30 Pattern trigger dialog box | 70 |
| Figure 4-31 Bus/Signal dialog box..... | 70 |
| Figure 4-32 Condition dialog box..... | 71 |
| Figure 4-33 Trigger on channel edge rising dialog box | 72 |
| Figure 4-34 Trigger on channel edge falling dialog box | 72 |
| Figure 4-35 Trigger on channel edge either dialog box..... | 73 |



| | |
|-------------------------------------------------------------------------------|-----|
| Figure 4-36 Trigger on channel edge and pattern dialog box..... | 73 |
| Figure 4-37 Hold time trigger dialog box..... | 74 |
| Figure 4-38 Trigger delay dialog box..... | 75 |
| Figure 4-39 Trigger Setup(manual) dialog box | 78 |
| Figure 4-40 Trigger Options dialog box | 81 |
| Figure 4-41 Protocol Trigger dialog box for I2C | 83 |
| Figure 4-42 Repeated Capture dialog box..... | 84 |
| Figure 4-43 Analysis drop-down menu | 85 |
| Figure 4-44 Easy Find dialog box..... | 88 |
| Figure 4-45 Advanced Find dialog box | 89 |
| Figure 4-46 Advanced Find examples show | 90 |
| Figure 4-47 Go To dialog box..... | 90 |
| Figure 4-48 Go To example; the File bar shows that page 3 is shown..... | 91 |
| Figure 4-49 Highlight Data dialog box | 92 |
| Figure 4-50 Highlight Data example; packets with Data Min = 0 are orange..... | 92 |
| Figure 4-51 Files Comparison dialog box | 93 |
| Figure 4-52 Files Comparison ex; differences marked in the lower window | 95 |
| Figure 4-53 Image Decode for 7-Segment LED..... | 95 |
| Figure 4-54 Arithmetic operation dialog box | 96 |
| Figure 4-55 Arithmetic operation example; ADD A0 and A1 | 97 |
| Figure 4-56 Boolean Operation dialog box | 98 |
| Figure 4-57 Boolean waveform example: A0 AND A1 | 99 |
| Figure 4-58 Noise Filter dialog box..... | 100 |



| | |
|--------------------------------------------------------------------------|-----|
| Figure 4-59 Draw Analog Waveform dialog box | 101 |
| Figure 4-60 Draw Analog Waveform example | 102 |
| Figure 4-61 Real-time frequencies window..... | 103 |
| Figure 4-62 Signal Statuses window | 103 |
| Figure 4-63 Options drop-down menu | 104 |
| Figure 4-64 Protocol Analyzer dialog box..... | 105 |
| Figure 4-66 Protocol Analyzer Control Panel..... | 106 |
| Figure 4-67 Long-time Record dialog box..... | 107 |
| Figure 4-68 LTR Go to the timestamp dialog box | 109 |
| Figure 4-69 Pattern Generator dialog box | 109 |
| Figure 4-70 View drop-down menu..... | 110 |
| Figure 4-71 Waveform view..... | 112 |
| Figure 4-72 Waveform area; right-click menu | 112 |
| Figure 4-73 Find Pulse-width dialog box..... | 113 |
| Figure 4-74 Channel/Bus column; right-click menu | 114 |
| Figure 4-75 Signal inversion example; signal A3 is inverted | 115 |
| Figure 4-76 Trigger colum; right-click on channel menu | 116 |
| Figure 4-77 Trigger column; right-click on bus menu..... | 117 |
| Figure 4-78 Bar; right-click menu..... | 117 |
| Figure 4-79 Example of trace formatting (ch. A1 has 3pt thickness) | 118 |
| Figure 4-80 State List view | 119 |
| Figure 4-81 State List view; right-click menu in the number area..... | 120 |
| Figure 4-82 Show changes in data only example (I2C) | 121 |



| | |
|-------------------------------------------------------------------------|-----|
| Figure 4-83 Channel/Bus (State List view); right-click menu..... | 121 |
| Figure 4-84 Action Wheel..... | 123 |
| Figure 4-85 Time between two edges is displayed inside the traces | 124 |
| Figure 4-86 Memory View window showing an SPI protocol..... | 125 |
| Figure 4-87 Memory View options dialog box..... | 126 |
| Figure 4-88 Navigator window example showing the AC97 protocol | 127 |
| Figure 4-89 Packet List window example showing an SPI protocol | 128 |
| Figure 4-90 Packet List / Found item highlighted..... | 129 |
| Figure 4-91 Packet List Settings..... | 129 |
| Figure 4-92 Packet List Right-click menu | 130 |
| Figure 4-93 Packet List / Set as trigger condition | 131 |
| Figure 4-94 Statistics window example showing an SPI protocol..... | 131 |
| Figure 4-95 Statistics / Channel selection dialog box..... | 132 |
| Figure 4-96 Statistics / Customize dialog box..... | 133 |
| Figure 4-97 Statistics / Filter dialog box..... | 133 |
| Figure 4-98 Statistics / Highlight signals dialog box..... | 133 |
| Figure 4-99 TLR Monitor window..... | 134 |
| Figure 4-100 Find Results window | 135 |
| Figure 4-101 Timing Bar..... | 135 |
| Figure 4-102 Help drop-down menu | 138 |
| Figure 4-103 About ZP-Logic information window | 138 |
| Figure 4-104 Send Feedback dialog box..... | 144 |



Table of Tables

| | |
|---------------------------------------------------------------------------------------|----|
| Table 1:1 LAP-C Pro package content | 16 |
| Table 1:2 Supported operating systems | 17 |
| Table 1:3 PC hardware requirements and recommendations | 17 |
| Table 1:4 LAP-C Pro specifications | 19 |
| Table 1:5 LAP-C Pro Available memory depths..... | 19 |
| Table 1:6 LAP-C Pro Optional features | 20 |
| Table 1:7 LAP-C Pro power specifications | 20 |
| Table 1:8 LAP-C Pro input channel specifications | 21 |
| Table 1:9 LAP-C Pro pin overview..... | 22 |
| Table 2:1 General advices for cleaning, operation and storage | 26 |
| Table 3:1 UI description; “Area” refers to the letter codes on the figure above | 28 |
| Table 3:2 Reposition/hide sector; right-click menu description | 28 |
| Table 4:1 Export Waveform dialog box description..... | 34 |
| Table 4:2 Export Packet List dialog box description | 36 |
| Table 4:3 Export Memory View dialog box description | 38 |
| Table 4:4 Screen capture dialog box description | 39 |
| Table 4:5 Print Setup dialog box description | 40 |
| Table 4:6 General settings dialog box description | 42 |
| Table 4:7 Start-up settings dialog box description | 44 |
| Table 4:8 Quick Access Toolbar dialog box description..... | 45 |
| Table 4:9 Quick Access toolbar icons..... | 47 |



| | |
|---------------------------------------------------------------------|----|
| Table 4:10 Color settings dialog box description | 48 |
| Table 4:11 Waveform settings dialog box description..... | 50 |
| Table 4:12 Hot Key settings dialog box description | 51 |
| Table 4:13 Save settings dialog box description..... | 52 |
| Table 4:14 Add Bus / Advanced Settings dialog box description | 57 |
| Table 4:15 Built-in protocol decoders | 60 |
| Table 4:16 Bus/Signal Setup dialog box description..... | 61 |
| Table 4:17 LAP-C Pro sampling Setup dialog box description..... | 62 |
| Table 4:18 Trigger Level dialog box description | 63 |
| Table 4:19 DSO Connection dialog box description | 67 |
| Table 4:20 Supported oscilloscope models | 67 |
| Table 4:21 DSO driver needed for the DSO connection | 68 |
| Table 4:22 Acquisition/Trigger Setup dialog box description..... | 77 |
| Table 4:23 Trigger Setup(manual) dialog box description..... | 80 |
| Table 4:24 Trigger Options dialog box description..... | 82 |
| Table 4:25 Protocol Trigger dialog box for I2C description | 83 |
| Table 4:26 Repeated Capture dialog box description | 84 |
| Table 4:27 Description of the five standard bars..... | 86 |
| Table 4:28 Easy Find dialog box description | 88 |
| Table 4:29 Advanced Find dialog box description | 90 |
| Table 4:30 Highlight Data dialog box description..... | 92 |
| Table 4:31 Files Comparison dialog box description..... | 95 |
| Table 4:32 Arithmetic operation dialog box description..... | 97 |



| | |
|------------------------------------------------------------------------------|-----|
| Table 4:33 Boolean Operation dialog box description..... | 98 |
| Table 4:34 Draw Analog Waveform dialog box description..... | 101 |
| Table 4:35 Protocol Analyzer dialog box | 105 |
| Table 4:36 Protocol Analyzer Control Panel description | 106 |
| Table 4:37 Long-time Record dialog box..... | 108 |
| Table 4:38 Standard PC requirements for the LTR function | 108 |
| Table 4:39 Pattern Generator dialog box description..... | 109 |
| Table 4:40 Waveform area; right-click menu description | 113 |
| Table 4:41 Find Pulse-width dialog box description..... | 114 |
| Table 4:42 Channel column; right-click menu description..... | 115 |
| Table 4:43 Trigger column; right-click on channel menu description..... | 116 |
| Table 4:44 Bus Trigger dialog box description..... | 117 |
| Table 4:45 Bar; right-click menu description..... | 118 |
| Table 4:46 State List example; change of channel state..... | 119 |
| Table 4:47 State List view; right-click menu in the number area | 120 |
| Table 4:48 Channel/Bus (State List view); right-click menu description | 121 |
| Table 4:49 Control Panel description..... | 123 |
| Table 4:50 Action Wheel description | 124 |
| Table 4:51 Memory view description | 125 |
| Table 4:52 Memory View options dialog box description | 126 |
| Table 4:53 Packet List Items description | 128 |
| Table 4:54 Packet List Settings description | 130 |
| Table 4:55 Packet List Right-click menu description..... | 130 |



| | |
|-------------------------------------------------------|-----|
| Table 4:56 Statistics window description | 132 |
| Table 4:57 LTR Monitor window dialog box | 135 |
| Table 4:58 Find Results window description | 135 |
| Table 4:59 Timing Bar description | 136 |
| Table 4:60 Available data formats | 137 |
| Table 4:61 Hot Key descriptions | 143 |
| Table 4:62 Send Feedback dialog box description | 145 |
| Table 5:1 Sales department contact info | 146 |
| Table 5:2 Technical support contact info | 146 |



Precautions

Users are advised to carefully review this section to avoid potential hazards to persons, this product and other products connected to it.

- *To protect the instrument and the Device under Test (DUT), grounding is required during signal acquisition.*
- *Follow the “Operating environment” recommendations from Table 2:1.*
- *Protect the logic analyzer from static discharge.*
- *Avoid direct impacts and rough handling.*
- *The logic analyzer is an IEC 61010-1 Level 2 instrument. The relevant pollution caution is: “Normally only non-conductive pollution occurs. But temporary conductivity caused by the occasional condensation must be kept in mind.”*
- *Do not place heavy objects on the logic analyzer.*
- *As a Class A product, the LAP-C Pro may cause radio interference in a domestic environment.*
- *Do not disassemble the logic analyzer as this will void the warranty and may affect its operation.*



1. Introduction

1.1. Preface

This User Guide presents the ZeroPlus* logic analyzer, its operation and software. The purpose of the User Guide is to help users understand and get familiar with the operations of the instrument and the software. Throughout the document, the instrument software is referred to as ZP-Logic and the instruments as LAP-C Pro.

ZeroPlus attaches great importance to users' suggestions. Users are welcome to give us feedback by email or telephone. Thank you for purchasing the logic analyzer.

* ZeroPlus is short for ZeroPlus Technology Co., Ltd.

1.2. About this document

This User Guide is organized as follows: First, the characteristics of the logic analyzer are presented, followed by installation and setup procedures. The next section familiarizes the user with the software user interface. Section 4 then goes in-depth on the software functions.

NOTE The software functions in chapter 4 are sorted by their locations on the ZP-Logic Main Menu.

NOTE The latest version of this document can be downloaded from the ZeroPlus website.

NOTE Right-click menus are found under the corresponding view modes in chapters 4.45.1 and 4.45.2.

NOTE The newest software UI might differ from the illustrations herein.



1.3. Product Introduction

The LAP-C Pro is a multi-purpose PC-based logic analyzer. It offers uncompromised breadth in one single instrument: high sample rate, large channel count and deep memory.

But the LAP-C Pro is not only about GHz and Mb. The extensive protocol library consisting of more than 120 protocol decoders, direct streaming to disk, channel folding, user-friendly software and a host of other functions make debugging a joy. All of these functions are described in chapter 4.

1.4. Package Content

All items contained in the package are listed in Table 1:1. If any of the items is missing or damaged, please contact your distributor as soon as possible.

| Item | LAP-C Pro | LAP-C Pro | Detail |
|--------------------------------|---------------|---------------|--------------------|
| Channels | 16 ch. | 32 ch. | |
| Logic analyzer | 1 | 1 | |
| USB flash drive(software) | 1 | 1 | |
| 2 x 5 pin Probe(short) | 2 | 4 | 10cm |
| 2 x 5 pin Probe(long) | 2 | 4 | 25cm |
| 1 pin Probe(gray) | 4 | 4 | 25cm |
| 1 pin Probe(block) | 1 | 1 | 25cm |
| Clip-on connector | 20 | 40 | |
| USB 3.0 cable; PC-to-LAP-C Pro | 1 | 1 | A to B type; 1.5 m |

Table 1:1 LAP-C Pro package content



1.5. System Requirements

1.5.1. Operating System Requirement

The ZP-Logic supports operating systems from Microsoft only. See Table 1:2 Supported operating systems

below for a list of supported operating systems. Please contact our Technical Support team if you have questions about older operating systems.

| Supported OS | Versions |
|--------------|------------------------------|
| Windows 10 | 32- and 64-bit (Recommended) |
| Windows 8.1 | 32- and 64-bit (Recommended) |
| Windows 7 | 32- and 64-bit |

Table 1:2 Supported operating systems

1.5.2. Hardware Requirements

| Item | Value | Type |
|--------------------|-------------|---------------------------|
| CPU | 2 GHz | Minimum |
| Memory | | |
| RAM | 4 GB | Minimum |
| RAM | 8 GB | Recommended |
| Hard disk | 80 GB | Minimum |
| Interface | | |
| | USB 3.0 | Recommended support |
| | USB 2.0 | Recommended compatibility |
| Display | | |
| Display size | 17" | Recommended |
| Display resolution | 1,024 x 768 | Minimum |
| Display card | 8 Mb SDRAM | Recommended |

Table 1:3 PC hardware requirements and recommendations

1.6. Product Specifications

1.6.1. Product Photo



Figure 1-1 Top view of the LAP-C Pro

1.6.2. Specifications

| Item | Characteristic |
|-----------------------------|------------------------------------------------|
| Supported operating systems | See Table 1:2 Supported operating systems |
| Acquisition Channels | 16 or 32 |
| Interface | USB 3.0 (2.0 compatible) |
| Sampling Frequency | |
| Internal (Timing) | 2 GHz |
| External (State) | 250 MHz (Dual-edge) |
| Memory/channel | |
| | 4, 8, 16, 32, 64, 128, 256, 512Mb, 1G |
| Trigger | |
| Trigger Channels | 16 or 32 |
| Trigger Events | Pattern / Edge / Pulse-width / Interval (Time) |
| Trigger Delay | Yes |
| Trigger Sequence Levels | 256 |



| | |
|-----------------------------|----------------------------------------------------------------------|
| Trigger Pass | 1-65,535 |
| Trigger Voltage | 4 simultaneous levels; 1 for each of the 4 ports |
| Auxiliary Cursors | 250 |
| Protocol Triggers (HW) | I2C, I2S, SPI, SVID, UART, CAN2.0B |
| Software functions | |
| Languages | English, Chinese (Traditional), Chinese (Simplified) |
| Zooming & Panning | Two cursor modes |
| Waveform & UI customization | Modify the appearance of channels, menus, traces, windows etc |
| State List & Waveform View | Present the samples as a list of 1s and 0s or as a waveform |
| DSO Connection | Connect to and import signals from DSOs |
| Files Comparison | Compare 2 files to quickly see where and how they differ |
| Navigator | Instantly navigate to distant parts of the waveform |
| Memory View | See what the memory looks like; what is read/written to each address |
| Packet List | Breakdown of all packets in list form |
| Statistics | Table view of number of periods, periods that satisfy conditions etc |
| Find Results | Set conditions, look up the information meets the requirements |
| Real-time Signal Activity | Live view of probe activity |
| Protocol Decoders | More than 120 free, built-in protocol decoders |
| Miscellaneous | |
| Power | USB 5 V |
| Dimensions | 125 x 92 x 25 mm |
| Certifications | FCC/CE/WEEE/RoHS/REACH |

Table 1:4 LAP-C Pro specifications

NOTE The external sampling frequency requires the shortest probe, otherwise the ground wire added to each signal probe must be twisted.

1.6.3. Available Models

| Model | Channels | Memory depths available |
|-----------|----------|-------------------------|
| LAP-C Pro | 16 | 64 Mb /channel |



LAP-C Pro 32 64, 128, 256Mb /channel

Table 1:5 LAP-C Pro Available memory depths

1.6.4. Optional Features

Table 1:6 lists the optional features; see chapters 4.40, 4.41 and 4.42.

| Feature | Description |
|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Protocol Analyzer Setting | This function is used to stream samples directly to disk; see chapter 4.42 for details. |
| Long-Time Record | This function is used to stream samples directly to disk. The speed can reach 200MB/s using USB 3.0. The Long-Time Record function can be used to acquire signals for 7 hours to 35 days depending on the acquisition setup and available storage; see chapter 4.41 for details. |
| Pattern Generator | Using 4 channels, it can simulate I2C, SPI, UART, CAN digital signals. Please see chapter 4.42 for details. |

Table 1:6 LAP-C Pro Optional features

1.6.5. Electrical Specifications

| Item | Power Supply |
|----------------------|--------------|
| Working Voltage (DC) | 5V |
| Working Current | 0.6A |
| Working Power | 3W |

Table 1:7 LAP-C Pro power specifications

1.6.6. Probe Specifications

The following probe are also available for the LAP-C Pro.

| Item | Description |
|----------------|--------------|
| Signal Type | Single-ended |
| Channels (Max) | 32 + 4CK |



| | |
|--------------------------|--------------------------------|
| Input Impedance | 200 kohm |
| Capacitance | 7 pF |
| Input Bandwidth (Max) | 250 MHz |
| Trigger Level | User-defined |
| Trigger Level Range | -6 to 6V |
| Trigger Level Resolution | 10mV/STEP |
| Reference Level Accuracy | $\pm 100\text{mV} + 5\%V_{th}$ |
| Input DC V (Max) | $\pm 30\text{ V}$ |

Table 1:8 LAP-C Pro input channel specifications

NOTE The Input Bandwidth (Max) requires the shortest probe, otherwise the ground wire added to each signal probe must be twisted.

1.6.7. Port Overview

Figure 1-2 shows the pin overview of the LAP-C Pro.



Figure 1-2 LAP-C Pro pin overview



| Port | Number | Description |
|------------------|--------|--------------------------------------------------------------------|
| Signal Channels | 32/16 | USB connections to probes for signal acquisition. |
| CLK IN | 4/2 | External clock input for State mode acquisitions; see chapter 4.17 |
| T_O | 1 | Send output signal upon triggering. |
| T_I | 1 | Trigger in |
| Pattern Generate | 4 | Pattern output |
| USB | 1 | Connection to the PC; both USB 3.0 and 2.0 are supported. |
| EXPAND | 1 | Reserved |

Table 1:9 LAP-C Pro pin overview

In Figure 1-3, cables are connected to the LAP-C Pro ports listed above. Some of the 32 signal channel ports are seen in the left part of the picture.



Figure 1-3 Cable connections to the LAP-C Pro





2. Installation and Setup

2.1. Software Installation

NOTE For users who have internet access, we recommend that you download the latest version of the ZP-Logic software from our website: www.zeroplus.com.tw.

Close all other programs and connect the logic analyzer to the PC via USB. Insert the ZP-Logic Software USB flash drive into the PC. Open the set.exe file manually. The dialog box from Figure 2-1 will be shown.



Figure 2-1 Main installation window

Choose the Application Setup as this option will install both the software and the instrument driver. The Driver Setup is for driver reinstallation.

Before the installation starts you will be asked to read the License Agreement carefully. "I accept the terms of the license agreement" must be checked to continue.



Clicking “Next” throughout the installation to install the standard version is recommended, but options for customizing the installation are also available for users who want that. Upon completion, the user will be prompted to restart the computer; it is recommended to do so.

2.2. Hardware Setup

Connect the probe to the instrument; see Figure 2-2.



Figure 2-2 Probe connected to the LAP-C Pro



Connect the LAP-C Pro to the PC using the USB. The power lamp indicated in Figure 2-3 turns on when the power is connected.



Figure 2-3 Probe and USB cable connection

2.3. Trigger In/Out

The LAP-C Pro can be connected to a DSO (or another instrument) for external or internal triggering.

NOTE It is also possible to display the analog waveform of a connected DSO in ZP-Logic. This is described in chapter .

2.3.1. Trigger In

The LAP-C Pro can be triggered by an external source, most commonly a DSO or another logic analyzer. The external trigger should then be connected to the STACK port of the LAP-C Pro and the External Trigger checkbox in the Trigger Setup must be selected.



2.3.2. Trigger Out

When the trigger conditions have been met the LAP-C Pro can emit a signal that can be used to trigger another instrument. This signal can be sent on the occurrence of three different events. The signal is sent from the BNC port.

To trigger out, the “Send output signal upon triggering” must be checked in the Trigger Options dialog box (Figure 4-37) .

2.4. Operating Environment and Maintenance

Please follow the below instructions when using, cleaning or storing your logic analyzer and probes. Please also see the Precautions chapter prior to the Introduction.

| Type | Description | |
|------------------------------|-----------------------------------------------------------------------------------------------------------|--------------|
| Cleaning | | |
| | Clean with a soft, damp cloth using a mild detergent. | |
| | Do not spray any liquid on the logic analyzer. | |
| | Do not immerse the logic analyzer in any liquid. | |
| | Do not use harsh chemicals or cleaners containing substances such as benzene, toluene, xylene or acetone. | |
| Operating environment | | |
| Temperature (Working) | Min: 5° C | Max: 35° C |
| Temperature (Storage) | Min: -20° C | Max: 60° C |
| Rel. humidity (Working) | Min: 20% | Max: 85% |
| Rel. humidity (Storage) | - | Max: 90% |
| Altitude | - | Max: 2,000 m |
| Insolation | Avoid direct sunlight. | |
| Environment | Use in a dust free, non-conductive environment. | |

Table 2:1 General advices for cleaning, operation and storage



3. User Interface

The ZP-Logic user interface is shown in Figure 3-1.

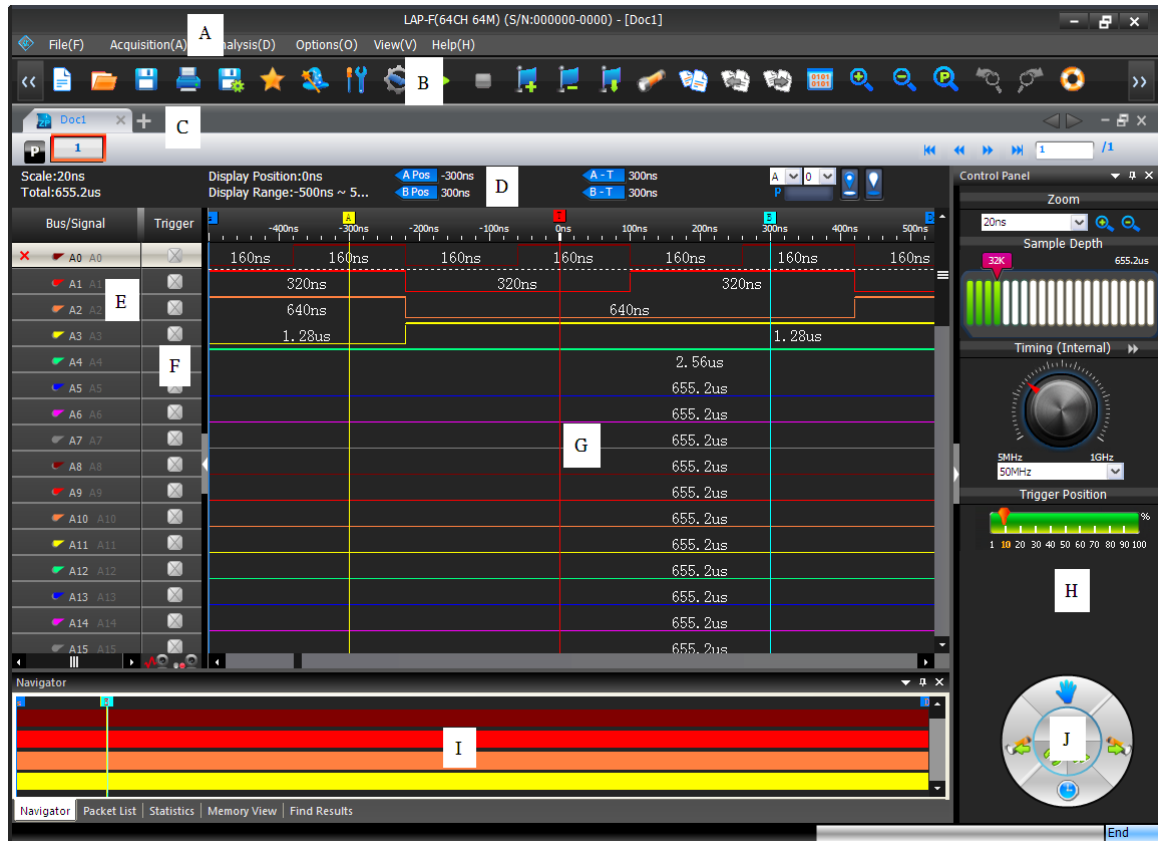


Figure 3-1 ZP-Logic user interface

The ZP-Logic window can be divided into sections; see Table 3:1. Note that many functions can be accessed with Hot Key combinations.

| Name | Area | Description |
|----------------------|------|------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Main Menu | A | All operations can be accessed from the Main Menu bar. The organization of chapter 4 corresponds to that of the Main Menu; see chapter 4 for details. |
| Quick Access Toolbar | B | The Quick Access Toolbar provides convenient access to frequently used functions; see chapter 4.11.3 for details. |
| File Bar | C | The File Bar consists of File Page, Memory Page and Show All. The File Page displays the new added files. File Page can be minimized, restored and closed. |
| Timing Bar | D | Facilitates quick reading of the samples and traces; see 4:55 for |



| | | |
|-------------------|---|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | | details. |
| Channel Column | E | See and edit channels; see Figure 4-73 for details. |
| Trigger Column | F | Set trigger conditions; Figure 4-75 for details. |
| Waveform Area | G | Displays the captured signals as traces or as a numeric list; see chapter 4.45 for details. |
| Control Panel | H | The Control Panel gives quick access to acquisition settings; see chapter 4.48 for details. |
| Secondary Display | I | Area where the Navigator, Packet List, Statistics, Memory View, LTR Monitor are shown and Find Results; see chapters 4.49, 4.50, 4.51, 4.52, 4.53 and 4.56. |
| Action Wheel | J | The Action Wheel provides shortcuts to functions related to acquisition and searching; see Figure 4-83 for more details. |

Table 3:1 UI description; “Area” refers to the letter codes on the figure above

NOTE The Control Panel and the Secondary Display can be repositioned or hidden. Right-click to bring up the menu from Figure 3-2.



Figure 3-2 Reposition/hide sector; right-click menu

| Item | Description |
|----------|-------------------------------------------------------------------------------------------------------------------|
| Floating | Move the Control Panel/Secondary Window freely; see Figure 3-3 for an example. |
| Docking | Fix the Control Panel/Secondary Window to its position. |
| Autohide | The control panel hides in the right edge, users could move the cursor to the icon of “Control Panel” to show it. |
| Hide | Don’t show the Control Panel/Secondary Window; use the View menu to have it appear again. |

Table 3:2 Reposition/hide sector; right-click menu description



Figure 3-3 shows an example where the Control Panel is “floating”; if the user un-clicks the mouse when hovering over one of the arrows the Panel will be repositioned to the corresponding transparent/blue area (in the example the user is holding the mouse over the upward arrow).

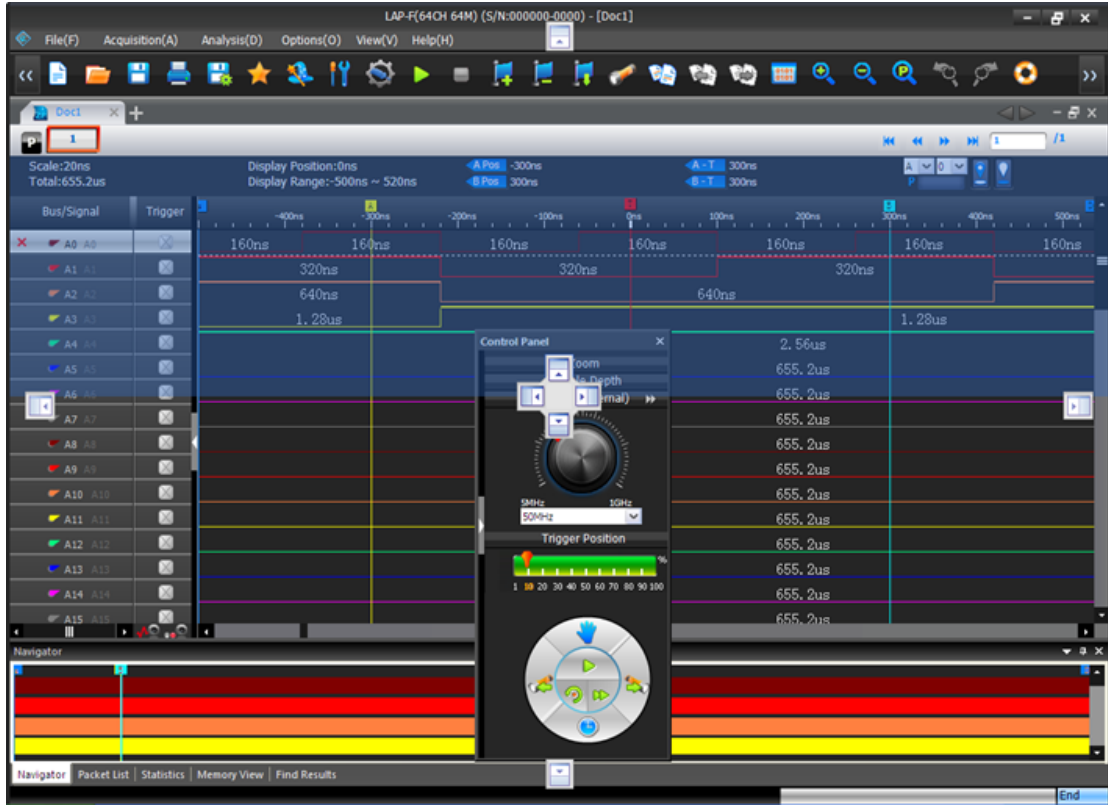


Figure 3-3 Repositioning the Control Panel example



4. Software Operations

This chapter follows the ZP-Logic Main Menu organization. Each section starts off by showing the corresponding drop-down menu from the Main Menu. The functions are presented one by one in the succeeding subchapters.

NOTE ZP-Logic will automatically check online for updates upon startup.

File

Press ALT + F to open this Main Menu item with the keyboard.

4.1. Menu Layout

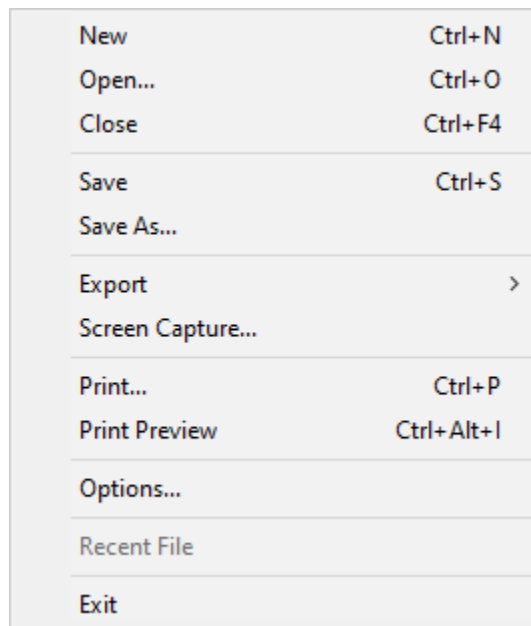


Figure 4-1 File drop-down menu

4.2. New

Create a new, empty file.



Hot Key: CTRL + N.

4.3. Open

Open an existing file. When selecting a file in the Open file dialog box, file information such as author name, creation date, project title will be shown in the lower part of the dialog box. Some of this information is user-added to the file when saving; the rest is automatically added by ZP-Logic.

Hot Key: CTRL + O.

4.4. Close

Close the active file. When closing a file that has previously not been saved, ZP-Logic prompts the users to save it before closing.

Hot Key: CTRL + F4.

4.5. Save

Save the active file. If the file has not been saved before, the Save As dialog box will open; see chapter 4.6.

Hot Key: CTRL + S.

4.6. Save As

Save As is useful for users who wish to save a file under a different name or type or change the destination folder. The Save As dialog box also opens when the user saves a file for the first time so that these parameters can be defined.

The Save As dialog box lets users input file information such as author name and a note. This information is used for previews in the Open file dialog box; see chapter 4.3.



In the Store Settings the user can chose which section of the data to store; this can be particularly useful for long acquisitions with a limited amount of interesting data.

NOTE Acquisitions are stored as temporary files that are instantly available to the user for most software functions. These temporary acquisition files need to be processed before they can be saved.

NOTE Since file processing slows down the software, users can choose not to process the temporary acquisition files automatically. If chosen, users who try to save a file (or initiate certain other functions) will be informed that the acquired data needs to be processed to proceed. This setting is accessed under General in the Options dialog box as “Automatically process acquired data (NB: Slower)”.

4.7. Export

Users can choose between three types of exports: Waveform, Packet List or Memory View. The characteristics of each type are presented below.

4.7.1. Waveform

This chapter treats the export of waveforms; please refer to chapter 4.45.1 for more details on the Waveform View itself. The Export Waveform dialog box is shown in Figure 4-2.

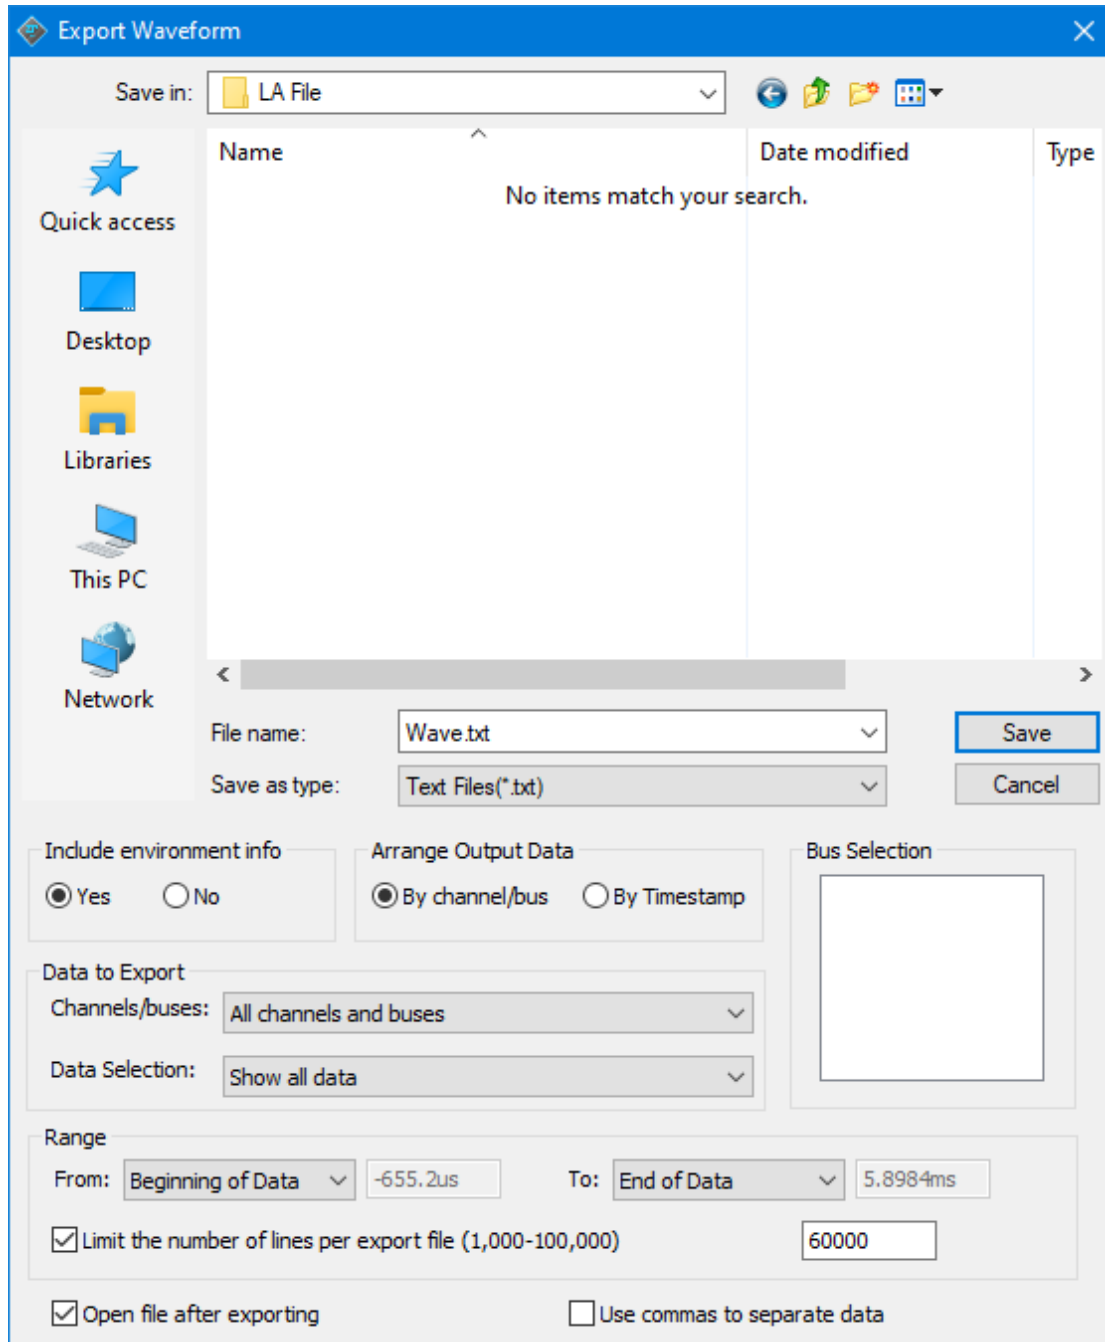


Figure 4-2 Export Waveform dialog box

| Item | Description |
|--------------------------|-----------------------------------------------------------------------------|
| File name | Input the file name; the default is Wave. |
| Save as type | Save the file as .txt or .csv; the default is .txt. |
| Include environment info | Include acquisition parameters etc. in the export file; checked by default. |

Arrange Output Data

| | |
|----------------|---------------------------------------------------------------|
| By channel/bus | Each column in the export file contains data for one channel; |
|----------------|---------------------------------------------------------------|



| | |
|-------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| | default option. |
| By Timestamp | Each column in the export file contains data for one timestamp. |
| Data to Export | |
| All channels and buses | Export channel, bus and protocol decoder data. |
| All buses (excl. channels) | Export bus and protocol decoder data. |
| Buses with PD (incl. channels) | Export protocol decoder data (channel data included). |
| Buses with PD (excl. channels) | Export protocol decoder data (channel data not included). |
| Data Selection | |
| All Data | Export all data. |
| Show changes in state only | Export data for timestamp X only if at least one signal has changed state from timestamp X-1 to timestamp X. |
| Show changes in data only | Export data for timestamp X only if at least one data has changed state from timestamp X-1 to timestamp X (for buses only). |
| Bus Selection | Select buses to be included in the export file. |
| Range | |
| From, To | Select the range for the data to be exported; the measure for the range is time. |
| Limit the number of lines per export file | Limit the size of exported files; if there are data don't fit on the amount of lines selected by the user then multiple files will be created. |
| Open file automatically after exporting | Open the exported file once it is ready; activated by default. |
| Use tabs to separate data (Faster) | When selected, blank spaces in the export file are replaced by tabs; this increases the writing by up to 50%; selected by default. |

Table 4:1 Export Waveform dialog box description

NOTE To export a waveform, the temporary acquisition file must be processed; see note in chapter 4.6 for details.



4.7.2. Packet List

This chapter treats the export of Packet Lists; please refer to chapter 4.51 for more details on the Packet List function itself. The Export Packet List dialog box is shown in Figure 4-3.

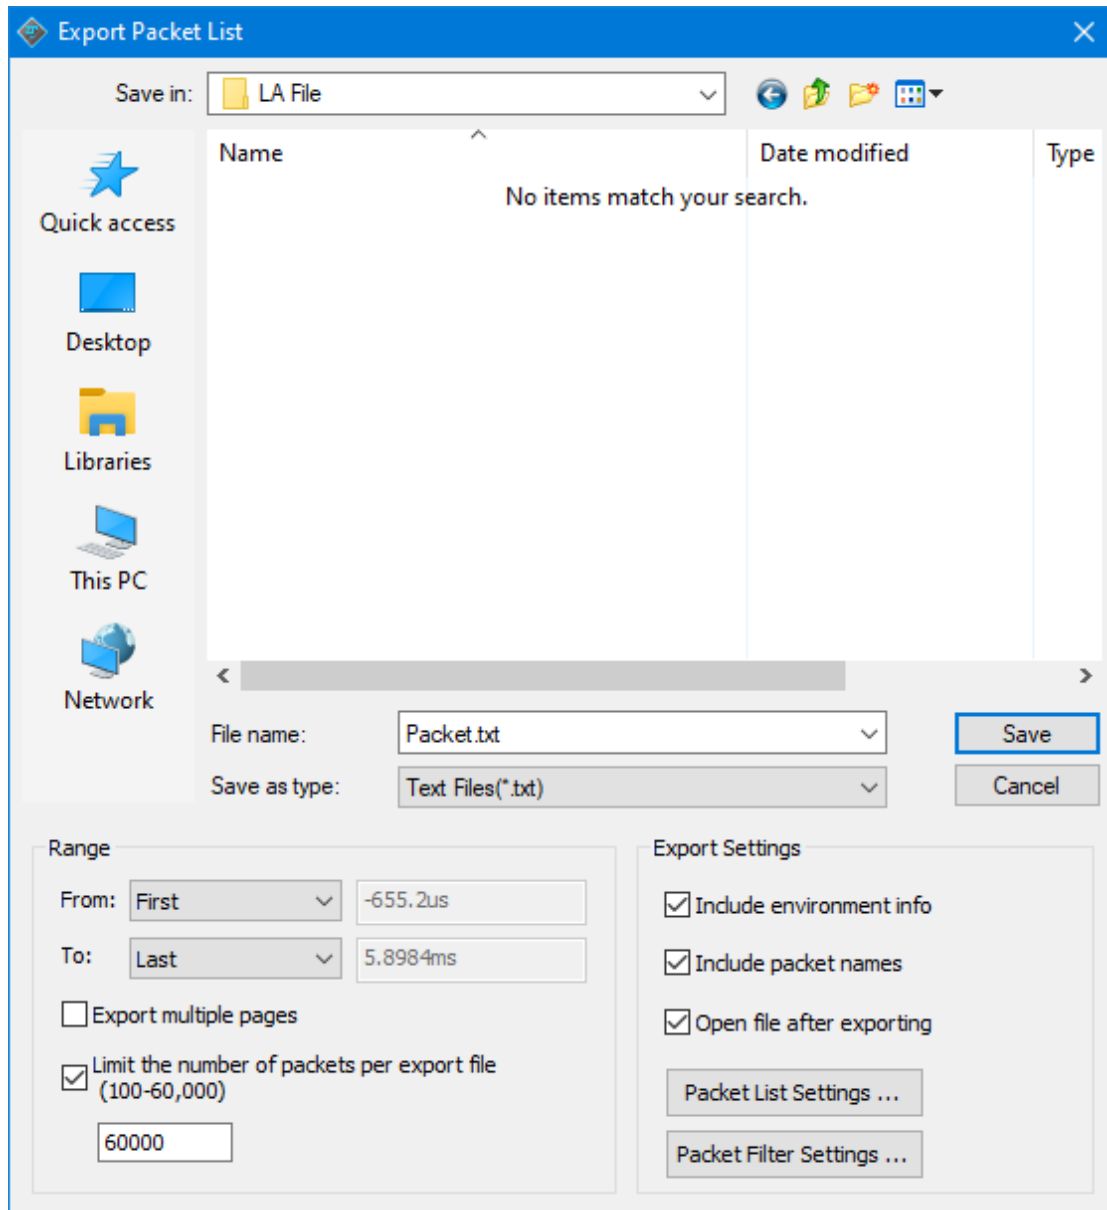


Figure 4-3 Export Packet List dialog box

| Item | Description |
|--------------|-----------------------------------------------------|
| File name | Input a file name; the default is Packet. |
| Save as type | Export in .csv or .txt format; the default is .txt. |

Range



| | |
|---------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| From, To | Select the range for the data to be exported; the range is measured in pages. |
| Export multiple pages | If the file to be exported comprises more than one Memory Page these can be exported together; unchecked by default. |
| Limit the number of packets per export file (100-5,000) | Set the maximum quantity of lines per export file; if the file length overshoots the limitation then several files will be created; selected by default. |

Export Settings

| | |
|---------------------------|----------------------------------------------------------------------------------------------|
| Include environment info | Include acquisition parameters etc. in the export file; checked by default. |
| Include packet names | Include packet titles in the export; unselected by default. |
| Open file after exporting | Open the exported file once it is ready; activated by default. |
| Packet List Settings | Open the Packet List Settings dialog box; see details in Figure 4-90. |
| Packet Filter Settings | It is only applied to protocol bus, export the packet meet the condition by Filter settings. |

Table 4:2 Export Packet List dialog box description

Exporting the protocol bus, user can set the filter settings, and click Match whole condition only to export data matching the all setting conditions.

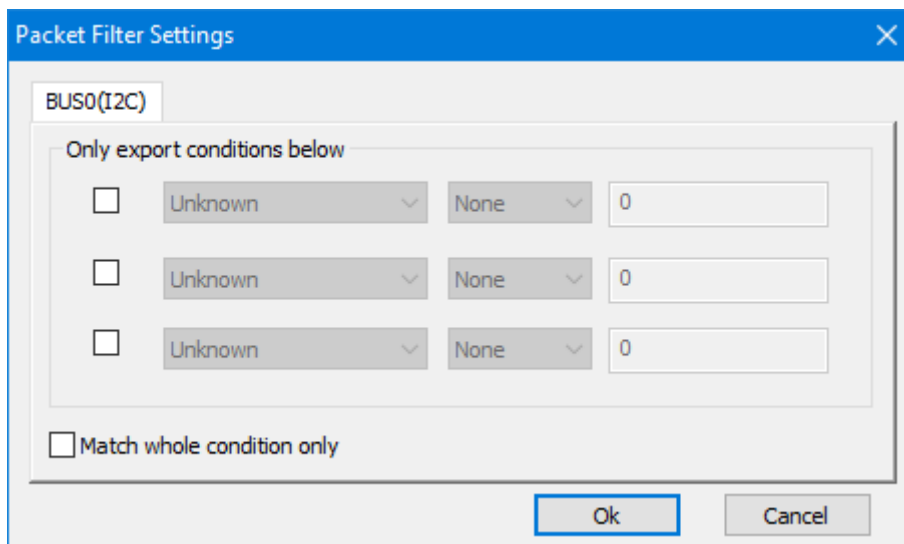


Figure 4-4 Packet Filter Settings dialog box

4.7.3. Memory View

This chapter is about exporting the Memory View; please refer to chapter 4.49 for more details on the Memory View function itself. The Export Memory View dialog box is shown in figure 4-5.

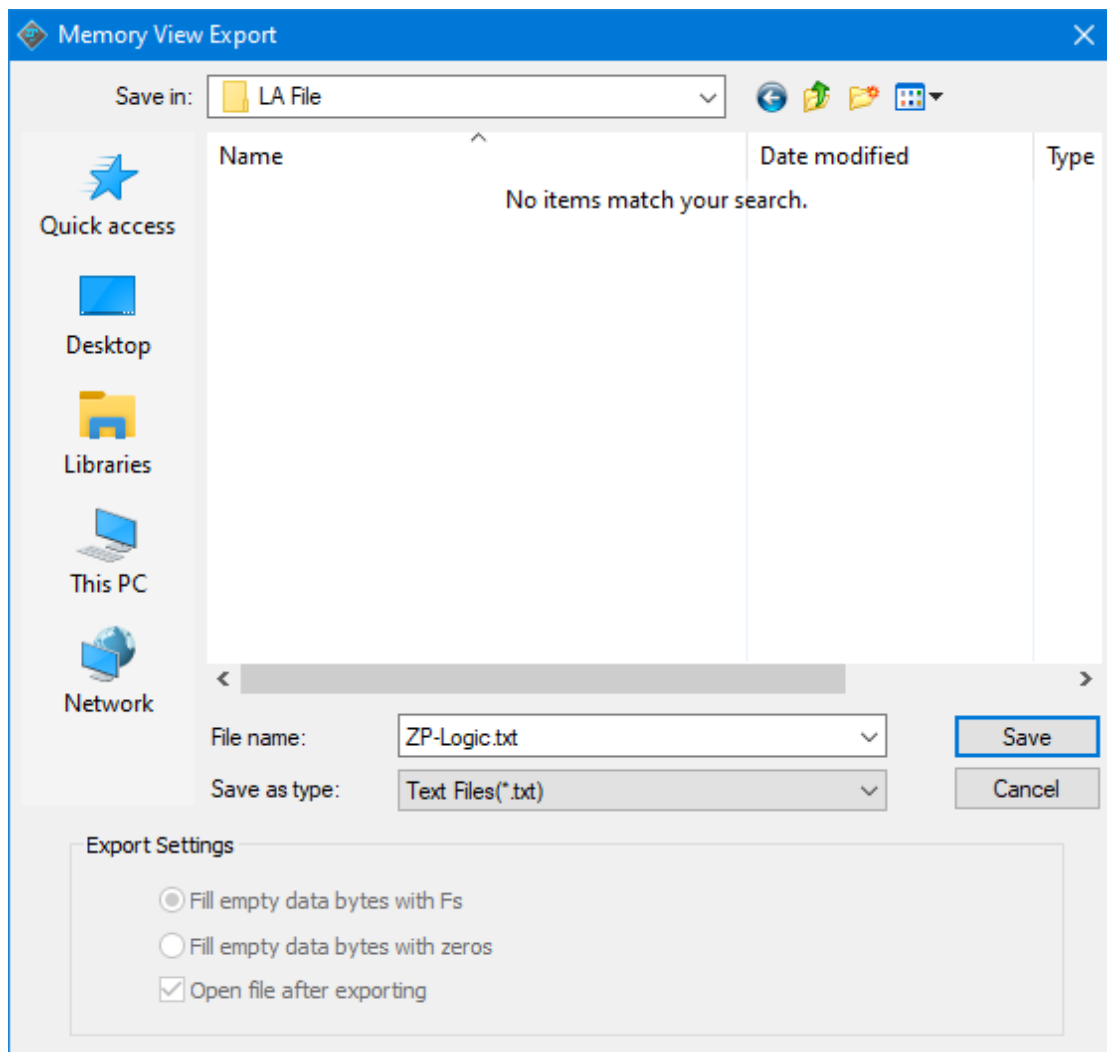


Figure 4-5 Export Memory View dialog box

| Item | Description |
|------------------------|------------------------------------------------------------------|
| File name | Choose a name for the file to be saved; the default is ZP-Logic. |
| Save as type | Export in .txt, .csv or .bin format; the default is .txt. |
| Export Settings | Available for .bin exports. |



| | |
|----------------------------------|---------------------------------------------------------------|
| Fill empty data bytes with Fs | Fill empty spaces with the letter F; selected by default. |
| Fill empty data bytes with zeros | Fill empty spaces with the number 0. |
| Open file after exporting | Open the exported file once it is ready; selected by default. |

Table 4:3 Export Memory View dialog box description

4.8. Screen Capture

Select a part of the screen – or all of it – and store it as a file or a picture; see the dialog box in figure 4-6. If Clipboard is selected the file will be stored in the RAM. Some level of customization is possible as described in Table 4:4.

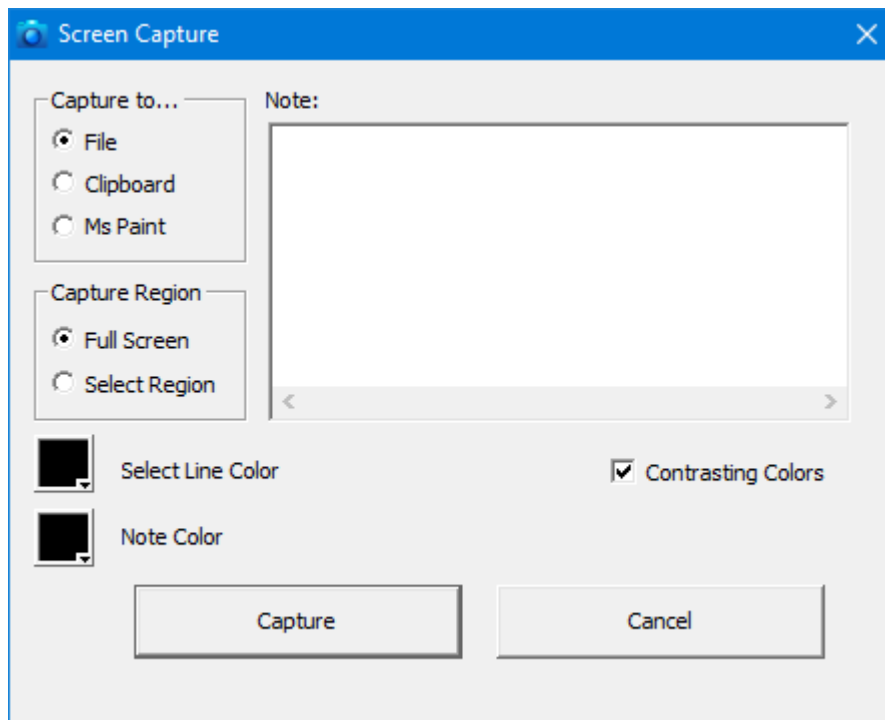


Figure 4-6 Screen capture dialog box

| Item | Description |
|-------------------|--------------------------------------------------------------------------|
| Capture to | |
| File | Save the captured region in .bmp or .jpeg format. |
| Clipboard | Copy the captured region to the clipboard for editing in other software. |
| MS Paint | Open the captured region in MS Paint. |

Capture Region



| | |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Full Screen | Capture the full screen. |
| Select Region | Select a part of the screen to be captured by dragging a square with the left mouse button. |
| Note | Users can enter text to accompany the screen capture; if the field is not empty a blank area will be added below the screen capture where the text will be displayed. |
| Note Color | Change the color of the Note text. |
| Line Color | Change the color of the Select Region frame; by default this is black. |
| Invert Colors | The Select Region frame color is the opposite of Line Color; selected by default. |


Table 4:4 Screen capture dialog box description

4.9. Print

The print function works on the part of the waveform or state list that is viewed at the moment of printing. The Timing Bar (above the waveform) and the Channel Column with the trigger conditions is also printed. The Waveform/State List background is printed as white and an extra field containing the file name, date and page number is added to the top of the page.

The print option dialog box has a standard layout that lets the user choose what to print and also gives access to other printer properties; see figure 4-7.

Hot Key: CTRL + P.

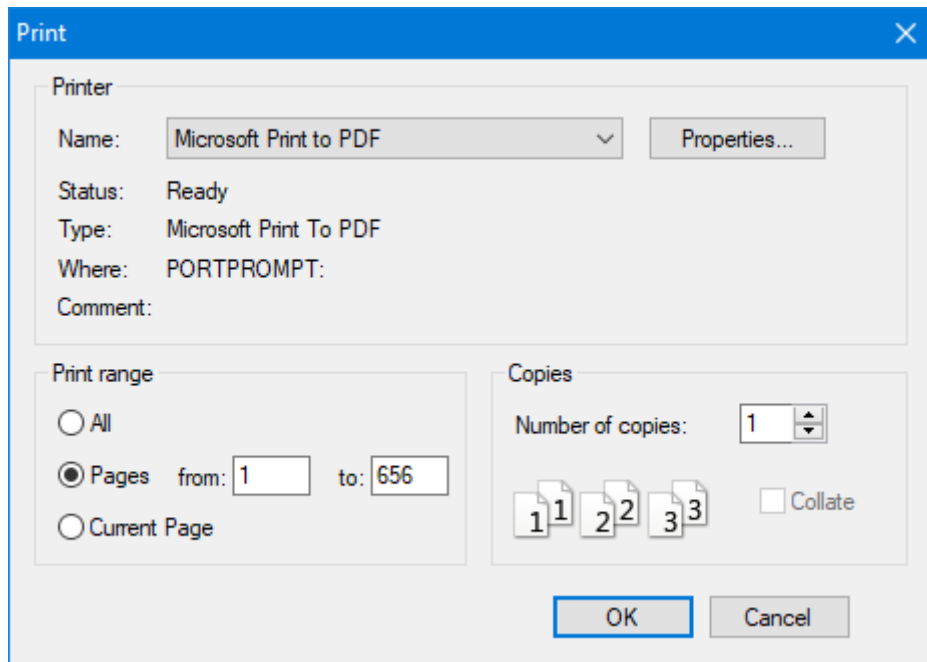**Figure 4-7 Print Setup dialog box**

| Item | Description |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Name | Select a printer. |
| Properties | Open the Print Properties dialog box for more print options. |
| Print range | |
| All | Print the entire waveform or state list. |
| Pages | Print parts of the waveform or state list. What is currently being viewed is regarded as one page. |
| Current Page | Print the current view. |
| Copies | |
| Number of copies | Number of copies to be printed. |
| Collate | Organization of multiple copies. Ex: 2 copies of 3 pages will print 1, 2, 3, 1, 2, 3 when collate is checked (default option) and 1, 1, 2, 2, 3, 3 when unchecked. |

Table 4:5 Print Setup dialog box description

4.10. Print Preview

Preview what the printed file will look like. When opening the Print Preview, a new toolbar will appear above the preview; this is used for zooming and navigation between pages. Press Esc to leave the Print Preview.



Hot Key: Press CTRL + ALT + I.

4.11. Options

The appearance and behavior of the user interface and functions can be customized. Configurations, options and settings are gathered under this menu item.

4.11.1. General

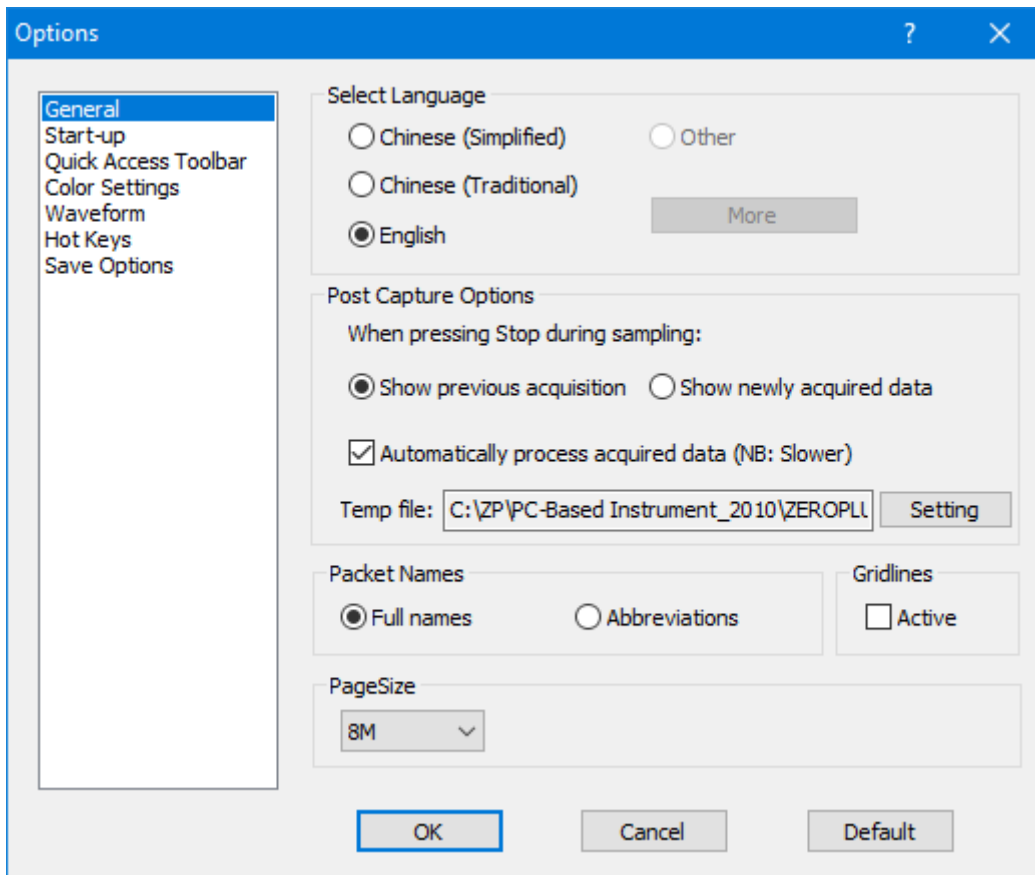


Figure 4-8 General settings dialog box

| Item | Description |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Select Language | Choose between English, Chinese (Simplified) and Chinese (Traditional); the one selected during installation is the default. The <i>More</i> option is used by customers who have developed a proprietary language pack. |

Post Capture Options

Show previous This option governs the software behavior when the user presses



| | |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| acquisition | Stop in the middle of an acquisition. If this option is selected then the previous acquisition will be displayed again. |
| Show newly acquired data | When pressing Stop during an acquisition, the data acquired up until the Stop moment is displayed; this is the default option. |
| Automatically process acquired data (NB: Slower) | Process the data upon finalizing acquisitions; if unchecked the ZP-Logic will prompt the user to process data when launching certain functions. See a more detailed explanation in chapter 4.6. The function is turned on by default. |
| Temp | Location of temporary acquisition files. |
| Gridlines | Show vertical gridlines in the waveform area; unchecked by default. |
| Packet Name | |
| Full names | Display the full names of packets; this is the default option. |
| Abbreviations | Display packet names abbreviated to a single letter: Data is shown as D etc. This option lets users see the packet type for short packets where the full name would otherwise not be shown due to space limitations (which is a combination of packet size and zoom level). |
| Keyboard | Open an on-screen keyboard when inputting numbers. The on-screen keyboard is operated with the mouse; by default it is not shown. |
| PageSize | PageSize relates to our <i>Memory Page</i> feature. To speed up the loading of waveforms, large acquisitions are divided into <i>pages</i> . The PageSize determines the size of these pages. Ex: A 16 Mb acquisition will be split into 8 pages if the PageSize is set to 2 Mb. 1½ pages are displayed at a time and the user moves between pages by means of the File Bar; see Figure 3-1 for the location of this. It is also possible to navigate between pages using the Go To function; see chapter 4.31. |

Table 4:6 General settings dialog box description

4.11.2. Start-up

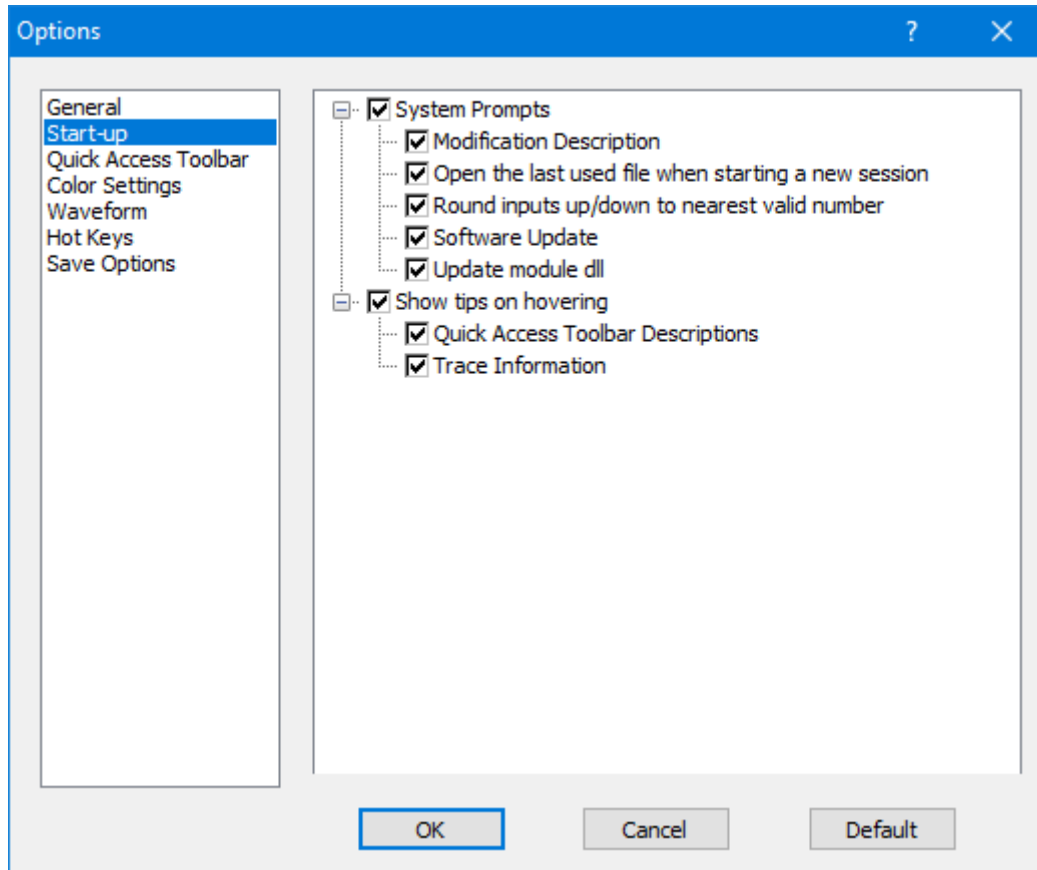


Figure 4-9 Start-up settings dialog box

| Item | Description |
|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| System Prompts | |
| Modification Description | Show modification descriptions. |
| Open the last used file when starting a new session | The last saved file is opened when ZP-Logic starts; selected by default. |
| Round inputs up/down to nearest valid number | Illegal input values are automatically rounded to the nearest valid value; selected by default. |
| Show Tips on Hovering | |
| Quick Access icon names | Show function names when hovering over the Quick Access Toolbar icons; selected by default. |
| Trace Information | Show channel name, signal state and trace information when hovering over a trace in the waveform view; selected by default. |



Table 4:7 Start-up settings dialog box description

4.11.3. Quick Access Toolbar

The Quick Access Toolbar consists of shortcut icons to commonly used functions. It is located below the Main Menu and is shown by default. Table 4:9 lists all functions that can be placed on the Quick Access Toolbar.

Users can customize the Quick Access toolbar by organizing the icons into groups. ZP-Logic comes with pre-defined groups; a Standard group and one group for each of the Main Menu items. The Standard group consists of a selection of common functions; the second type provides shortcut icons to all the functions under a Main menu item. Users can modify the Quick Access Toolbar in three ways:

- By selecting the group or groups that are displayed
- By adding or removing items from the pre-defined groups
- By creating a custom group

These modifications are done from the Quick Access Toolbar dialog box shown in figure 4-10.

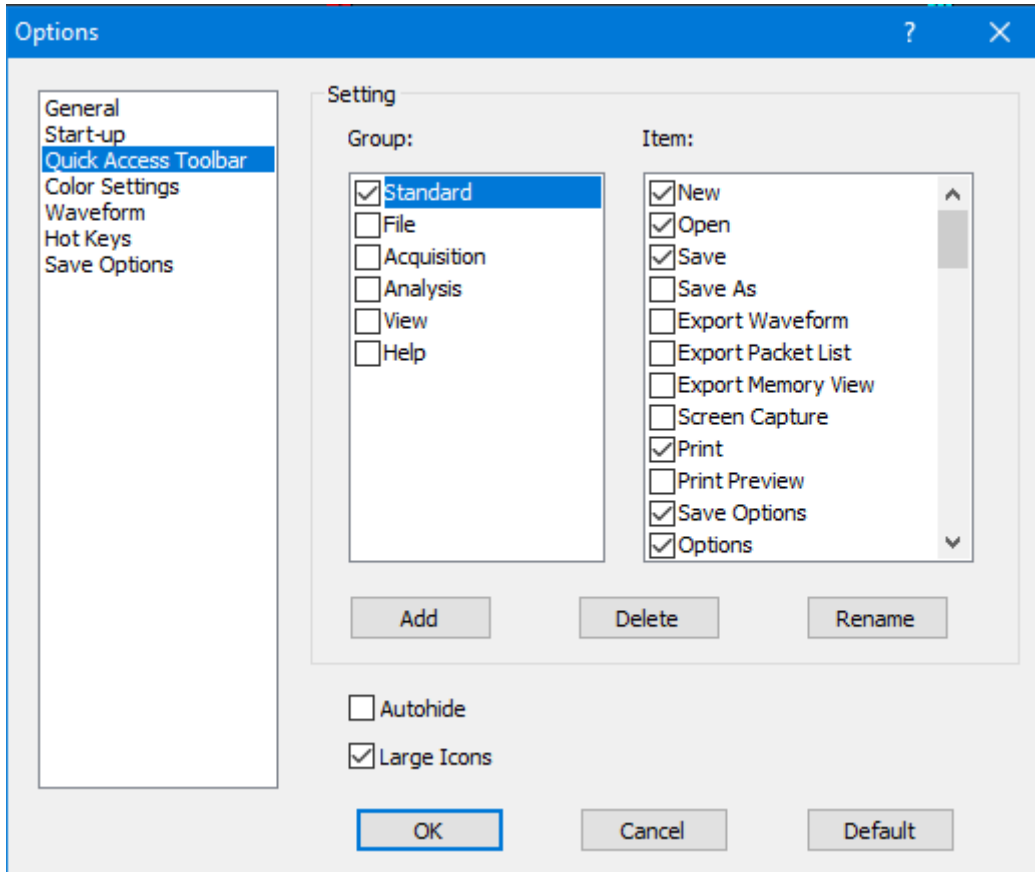






































Figure 4-10 Quick Access toolbar dialog box

| Item | Description |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Group | Select the group or groups to be displayed as large shortcut icons below the Main Menu; the Standard group is selected by default. Groups can be added, deleted or renamed (with exception of the Standard group). |
| Item | Check/uncheck items to add/remove them from the selected group (in blue in the left column). |
| Autohide | The Quick Access toolbar is hidden whenever the mouse cursor does not hover over it; this option is unchecked by default. |
| Large Icons | Set the icon size to 32x32 px; the default size is 24x24 px. |

Table 4:8 Quick Access Toolbar dialog box description

Table 4:9 below shows all the icons that can be placed on the Quick Access Toolbar and which function they link to.



| Icon | Function | Icon | Function |
|-------------------------------------------------------------------------------------|--------------------|-------------------------------------------------------------------------------------|------------------------|
|  | Create File |  | Analog Display |
|  | Open File |  | Pointer |
|  | Save File |  | Hand |
|  | Save File As |  | Zoom Out |
|  | Save Settings |  | Zoom In |
|  | Export Waveform |  | Display All Waveform |
|  | Export Packet List |  | Previous Zoom |
|  | Export Memory View |  | Cancel Previous Zoom |
|  | Screen Capture |  | Add Bar |
|  | Print file |  | Delete Bar |
|  | Single Capture |  | Reposition Bar |
|  | Repeated Capture |  | Customize |
|  | Stop |  | Highlight Data |
|  | Sampling Setup |  | Don't Show Information |
|  | Find |  | Frequencies |
|  | Find previous |  | Number of Samples |
|  | Find next |  | Time |
|  | Add Channel/Bus |  | Waveform |

































| | | | |
|-------------------------------------------------------------------------------------|-------------------------|-------------------------------------------------------------------------------------|--------------------------|
|  | DSO Connection |  | State List |
|  | Active Range |  | Real-time Frequencies |
|  | Noise Filter |  | Navigator |
|  | Files Comparison |  | Packet List |
|  | Previous Difference |  | Statistics |
|  | Next Difference |  | Memory View |
|  | Boolean Operation |  | Show on Both Screens |
|  | Arithmetic Operation |  | Show on Primary Screen |
|  | Go To |  | Show on Secondary Screen |
|  | Level Status |  | Image Decode |
|  | Center display on A-bar |  | Refresh |
|  | Center display on B-bar |  | Help |
|  | Center display on T-bar |  | Hot Keys Map |
|  | About ZEROPLUS |  | Send Feedback |
|  | About ZP-Logic |  | Trigger Level |

Table 4:9 Quick Access toolbar icons

4.11.4. Colors

Users can customize the colors of bars, texts, traces and other elements of the user interface. To change the color of an element, click the corresponding color bar in the Color column of the dialog box shown in figure 4-11 to access the color palette.

Proceed to select a predefined color or define a custom color for the element.

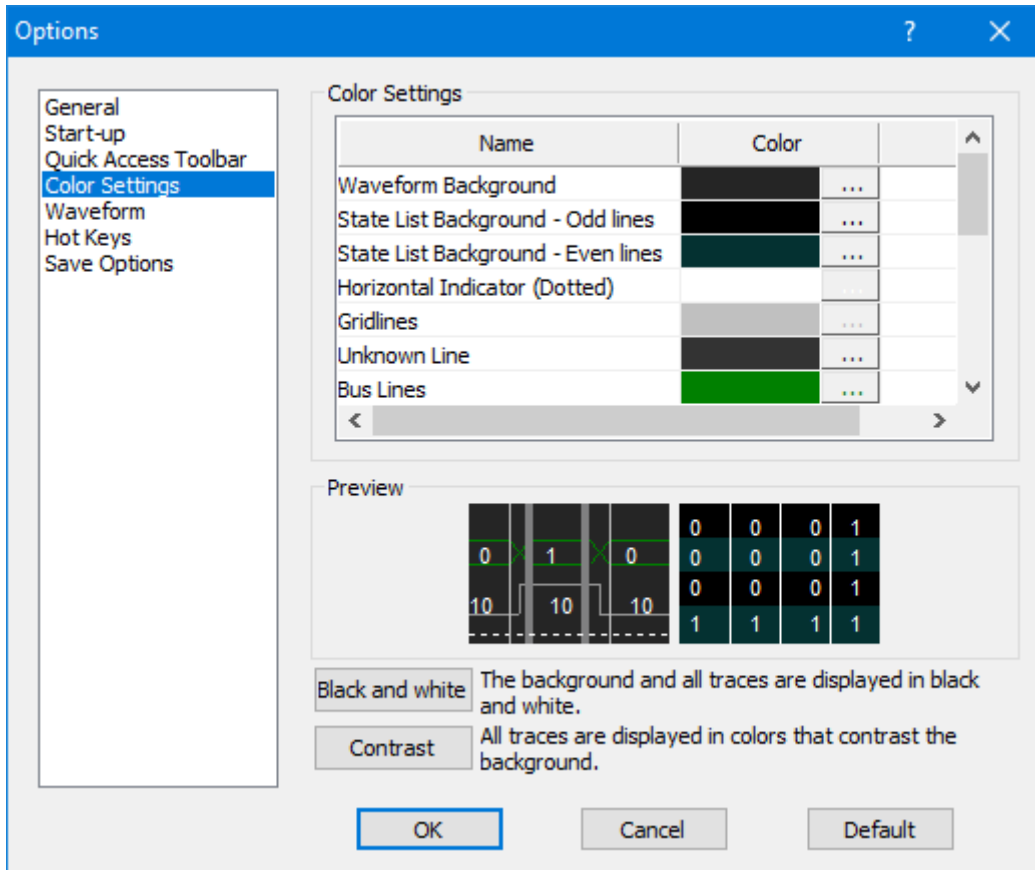


Figure 4-11 Color settings dialog box

| Item | Description |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Color Setting | |
| Name | Show frequencies between two edges. The frequency of full period (rising to rising edge) is displayed. See Table 4:50 for more details on the Trace Information. |
| Color | No information is shown inside the traces; this is the default option. |
| Preview | Set the trace amplitude from 22 to 180 px; the default is 26. |
| Black and white | The center of the screen is fixed at 0 sec. |
| Contrast | Bars snap automatically to the nearest trace edge when being repositioned. |

Table 4:10 Color settings dialog box description

4.11.5. Waveform

The appearance of the traces and surrounding information can be changed from the dialog box in figure 4-12.

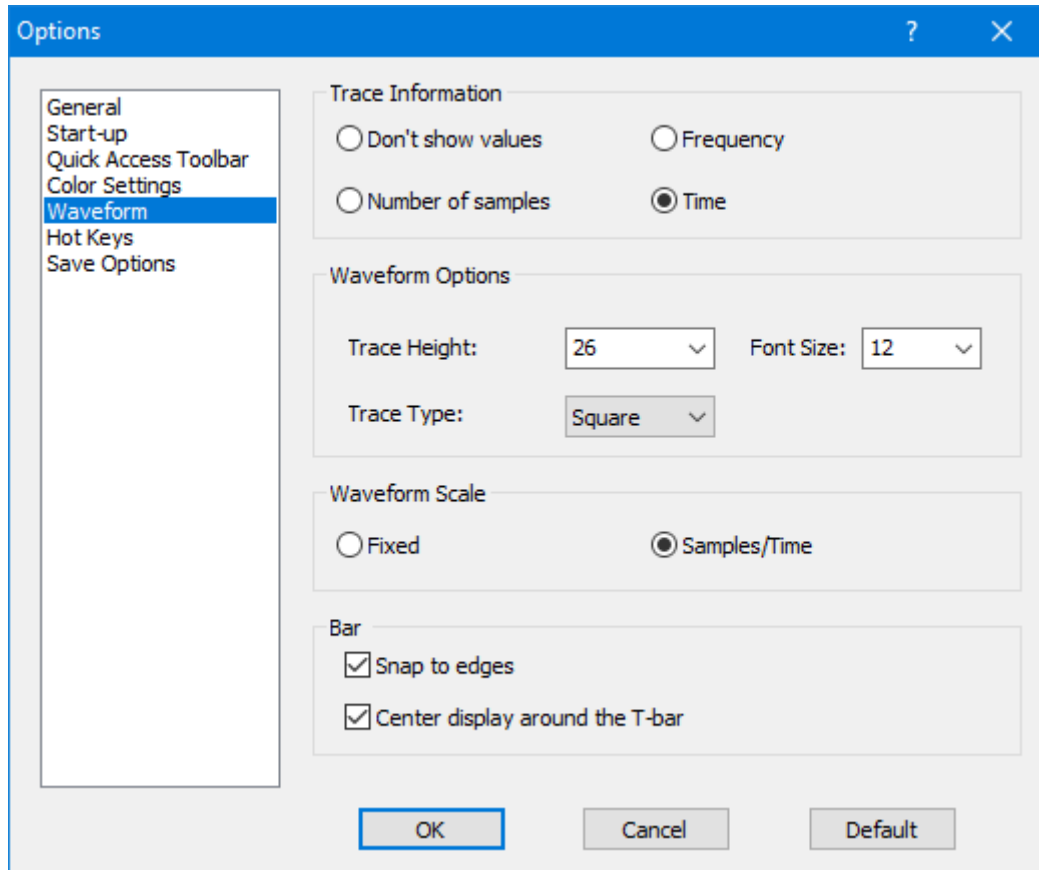


Figure 4-12 Waveform settings dialog box

| Item | Description |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trace Information | |
| Frequency | Show frequencies between two edges. The frequency of full period (rising to rising edge) is displayed. See Table 4:50 for more details on the Trace Information. |
| Number of samples | Show number of samples between two edges. |
| Time | Show the time between two edges. |
| Don't show values | No information is shown inside the traces; this is the default option. |
| Waveform Options | |
| Trace Height | Set the trace amplitude from 22 to 180 px; the default is 26. |
| Font Size | Set the font size from 6 to 60. The default is 12. |
| Waveform Mode | Choose between saw tooth- and square-shaped traces. |
| Waveform Scale | |
| Fixed | The center of the screen is fixed at 0 sec. |
| Samples/Time | Second is defined as the trigger event; this is the default option. |

Bar

Snap to edges Bars snap automatically to the nearest trace edge when being repositioned.

Center display around the T-bar Center the waveform area around the T-bar when the trigger condition is met.

Table 4:11 Waveform settings dialog box description

4.11.6. Hot Keys

In ZP-Logic, Hot Keys are keyboard combinations that invoke a function. See figure 4-13 for a complete description of all Hot Keys. Table 4-12 shows the dialog box used to customize the Hot Keys.

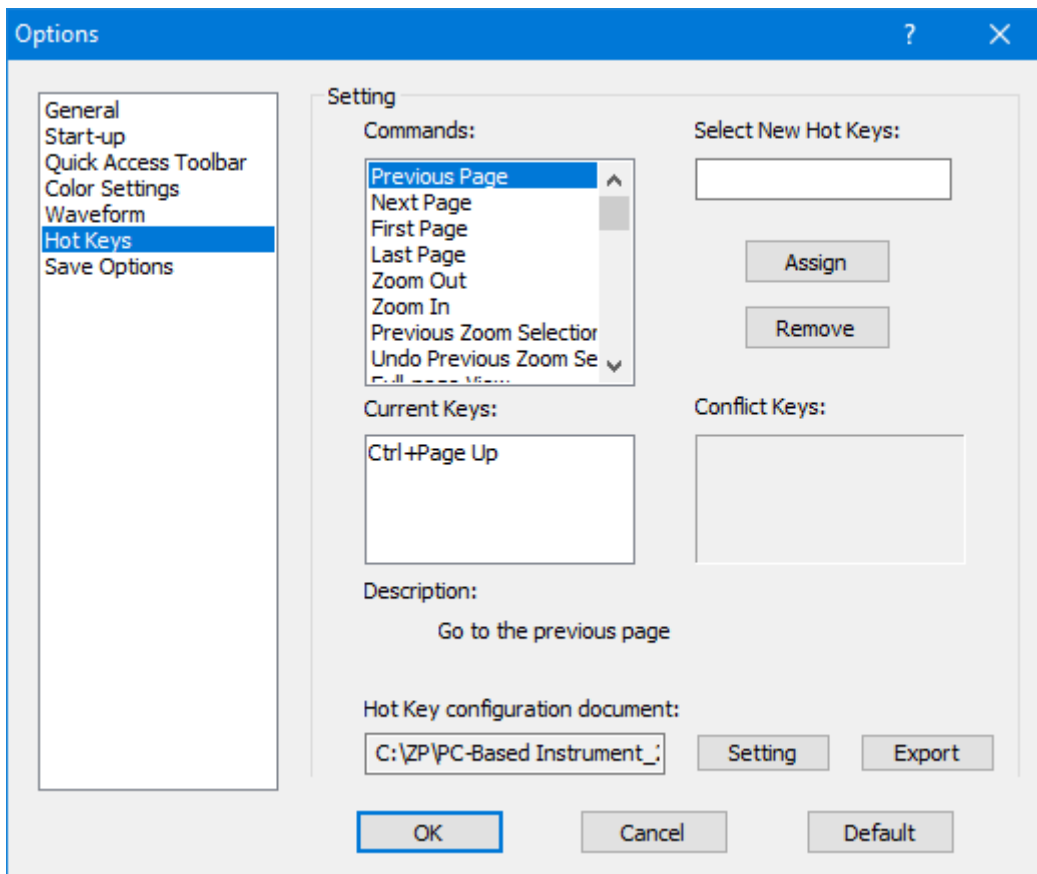


Figure 4-13 Hot Key settings dialog box

| Item | Description |
|---------------------|------------------------------------------------------------------|
| Commands | Select a Command (function) for which a Hot Key can be assigned. |
| Select New Hot Keys | Input the new Hot Keys combination (or single key) and |

| | |
|----------------------|-----------------------------------------------------------------------------------------|
| | click Assign to make the change effective. |
| Current Keys | Displays the current Hot Keys for the selected command. |
| Conflict Keys | If the new Hot Keys are already in use, the command currently using them will be shown. |
| Description | Displays a brief description of the selected command. |
| Shortcut-key Setting | Export the Hot Keys configuration document or load a document |
| document | different one. |

Table 4:12 Hot Key settings dialog box description

4.11.7. Save Options

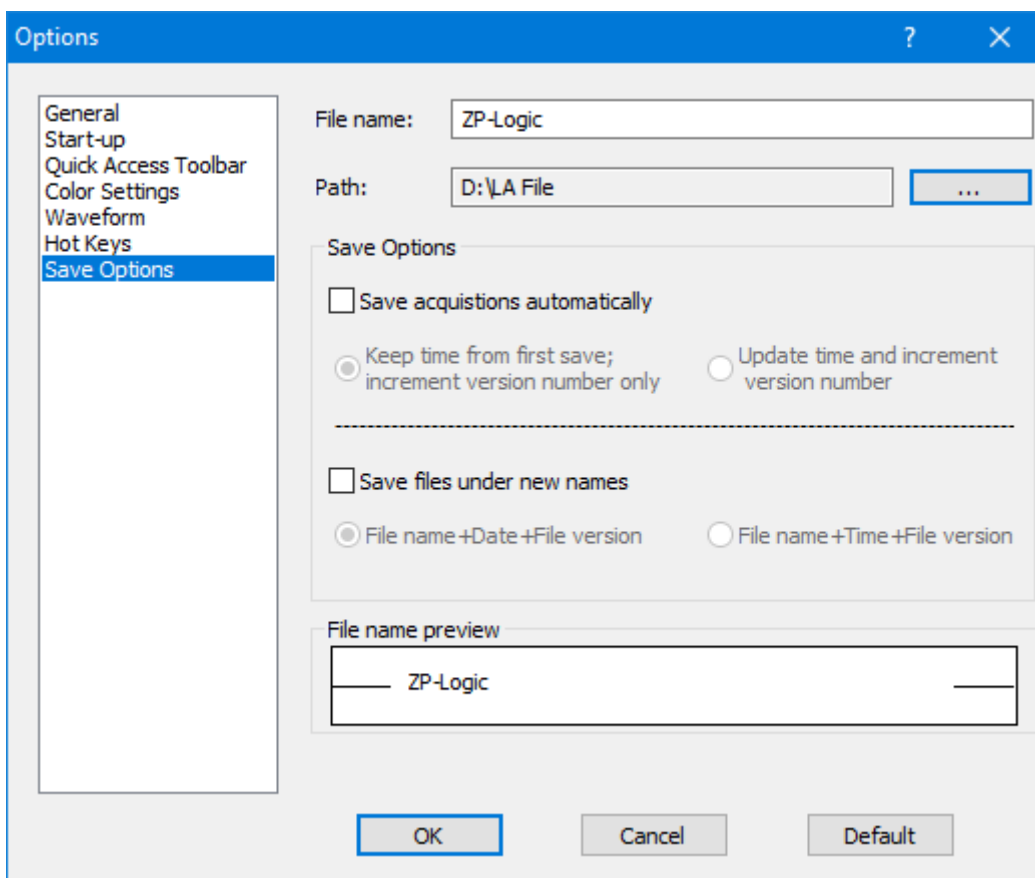


Figure 4-14 Save Options dialog box

| Item | Description |
|-----------|------------------------------------------------------------------------------------------------------------|
| File name | Choose a name for the files to be saved; the default is ZP-Logic. |
| Path | Choose where to save files; the default is C:\Documents and settings\Administrator\ My Documents\ ZP-Logic |



| | |
|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | Data (if C: is the system disk). |
| Save Options | |
| Save acquisitions automatically | Auto-save all acquisitions. |
| Keep time from first save; increment version number only | When saving multiple acquisitions the file names will all preserve the time of the first save and only change version number. If the first acquisition was made 3:45:12 pm and the next 3:55:47 the names will become; FileName154500 and FileNameTime154500(1). This can be useful for sorting the files. |
| Update time and increment version number | In the example above the file names would become; FileName154512 and FileName155547(1); this is the default selection. |
| Save files under new names | Files will overwrite each other if this option is not checked. It is therefore common to combine this option with the Save As function. |
| File Name + Date + File Version | Add the date [Year, Month, Day] and version number after the file name. Ex: August 25 th 2015 becomes ZP-Logic_20150825(1). |
| File Name + Time + File Version | Add the time (Hour, Minute, Second) and the version number after the file name. Ex: 13:45:02 pm becomes ZP-Logic_134205(1); default selection. |
| File Name Preview | Preview the name of files to be saved. |

Table 4:13 Save settings dialog box description

If the “Auto Add the Serial No” and is not activated, “Keep time from first save; increment version number only” and “Update time and increment version number” will be disabled. In other words, any new file that is saved will overwrite the existing file.

4.12. Exit

Exit ZP-Logic. The software prompts users to save unsaved files.

Hot Key: ALT + F4.



Acquisition

Press ALT + A to open this Main Menu item with the keyboard.

4.13. Menu Layout

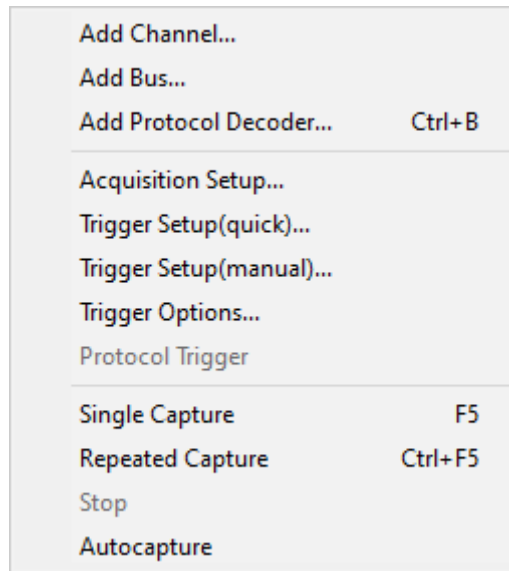


Figure 4-15 Acquisition drop-down menu

4.14. Add Channel

To add one or several channels, select the channels to be included and bring them over to the right column using the arrow. The CTRL and SHIFT keys can be used to mark several channels at the same time. Using the lower arrows channels can also be removed. To finalize the inclusion of new channels the user must choose whether he wants all other channels to be deleted or not. The select channels dialog box is shown in figure 4-16 where four channels have been added.

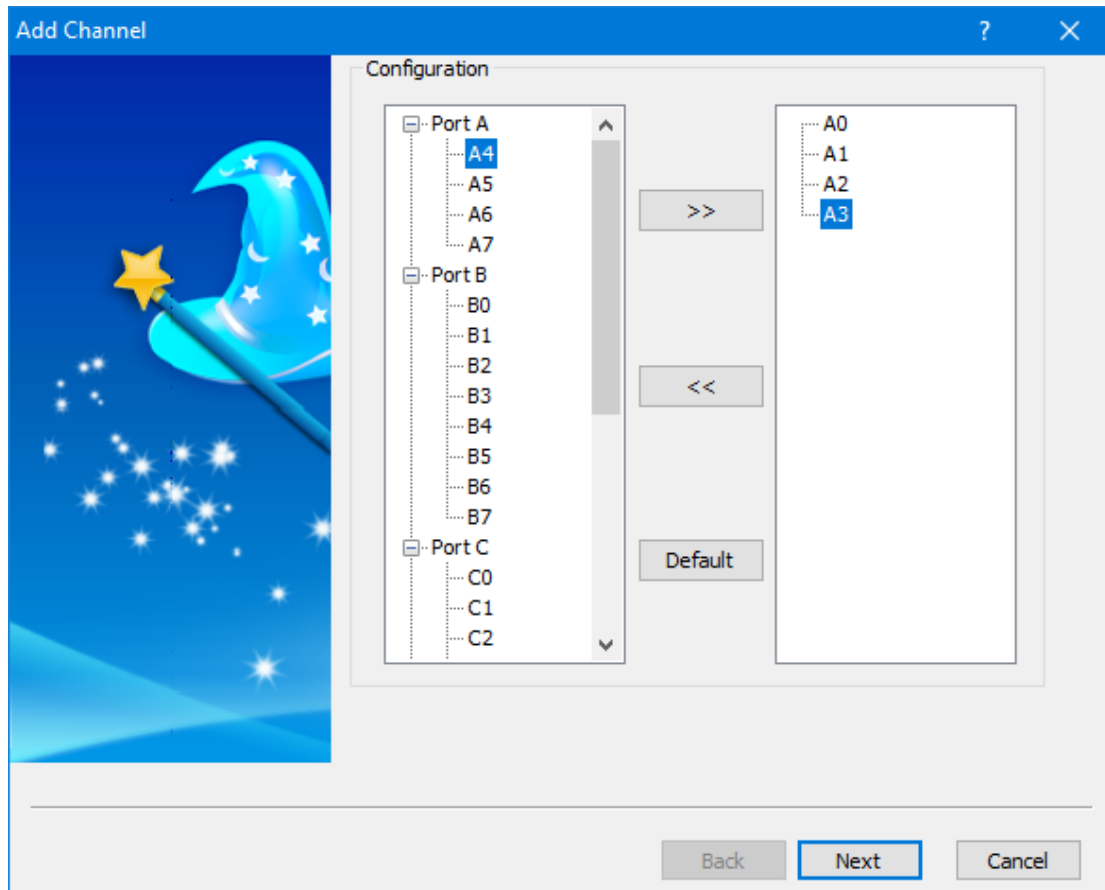


Figure 4-16 Add Channel dialog box

4.15. Add Bus

Adding a bus follows the same routine as adding a channel (chapter 4.14), but the dialog box differs slightly; see Figure 4-17. First, it links to the Advanced Settings dialog box; see Figure 4-18. Second, the right-most column indicates which is the most significant bit and which is the least. Show caution to ensure that channels are added in the correct sequence; the first channel added will become the LSB and the final addition will be the MSB.

Hot Key: CTRL + B.

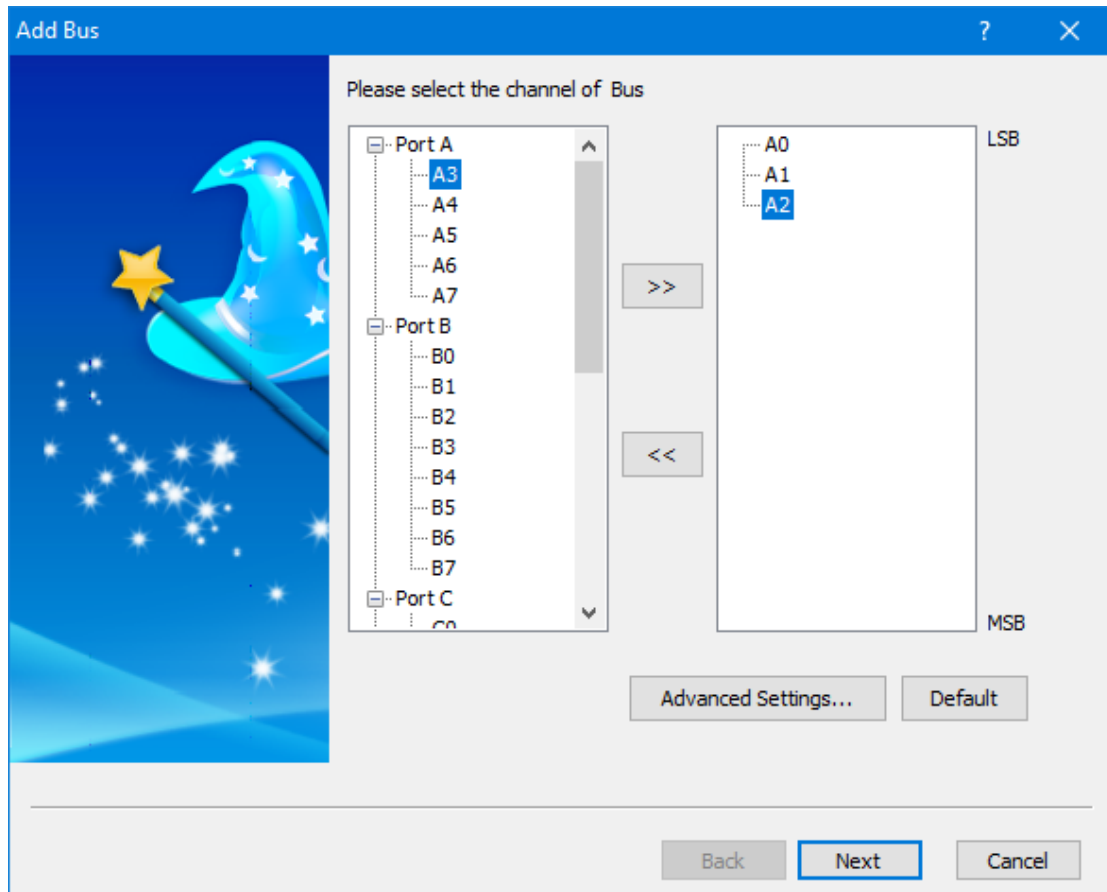


Figure 4-17 Add Bus dialog box

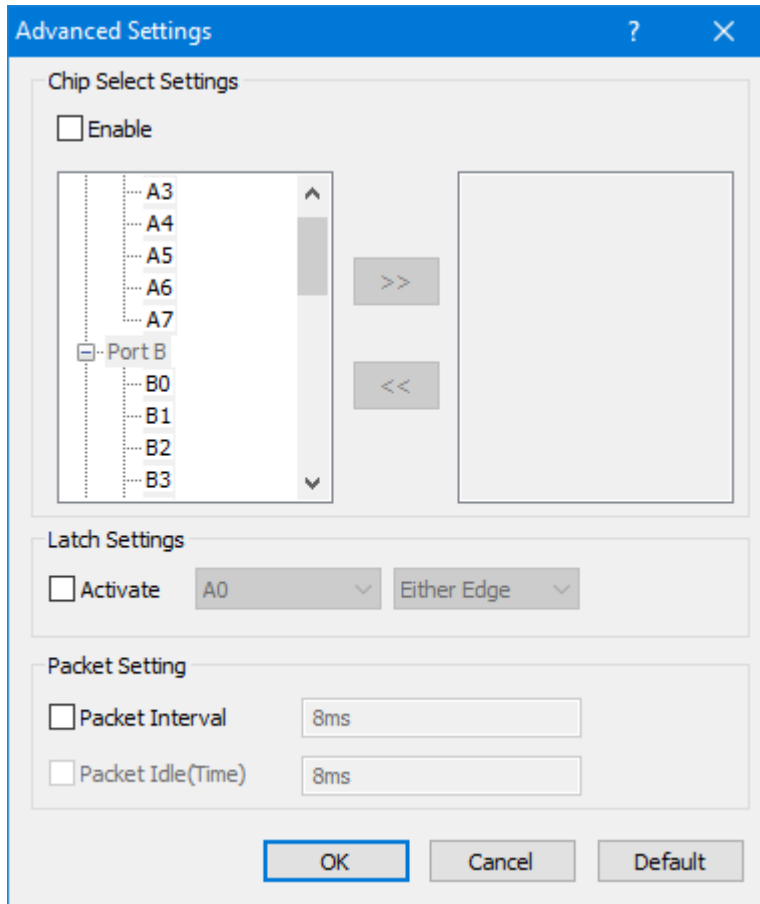


Figure 4-18 Add Bus / Advanced Settings dialog box

| Item | Description |
|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Chip Select (Channel and Level) | The Chip Select function emulates a real chip select. The function is similar to the Latch function (below) in that it decodes bus data, but it only does so when all the conditions are met. |
| Latch Settings (Channel and Event) | The Latch function is used to analyze/decode bus activity that does not use a specific protocol (referred to simply as a Bus in ZP-Logic). When selecting a channel and an event (for instance A0 and Falling Edge), the bus data will be decoded and displayed at every occurrence of this event. |
| Packet Setting Packet Interval | Set the Interval time of Packets for buses. Unchanged bus signals that meet the Interval time value are decoded as a packet. Eg: Set 8 ms as Interval time, if the unchanged signal exceeds 8ms the signal would be resolved to one 8 ms packet. |



Packet Idle (Time) Set the Idle time of bus packets. Unchanged bus signals that meet the Idle time value would be decoded as one packet instead of being resolved.

Table 4:14 Add Bus / Advanced Settings dialog box description

4.16. Add Protocol Decoder

Select the desired Protocol Decoder from the dialog box shown in Figure 4-19. The protocol decoders are arranged by industry in a list where each section can be collapsed/expanded using the minus/plus symbol to the left of the protocol decoder names. The right part of the dialog box shows a brief description of the selected protocol decoder.

NOTE Right-click on a decoder to add it to the topmost Favorites list.

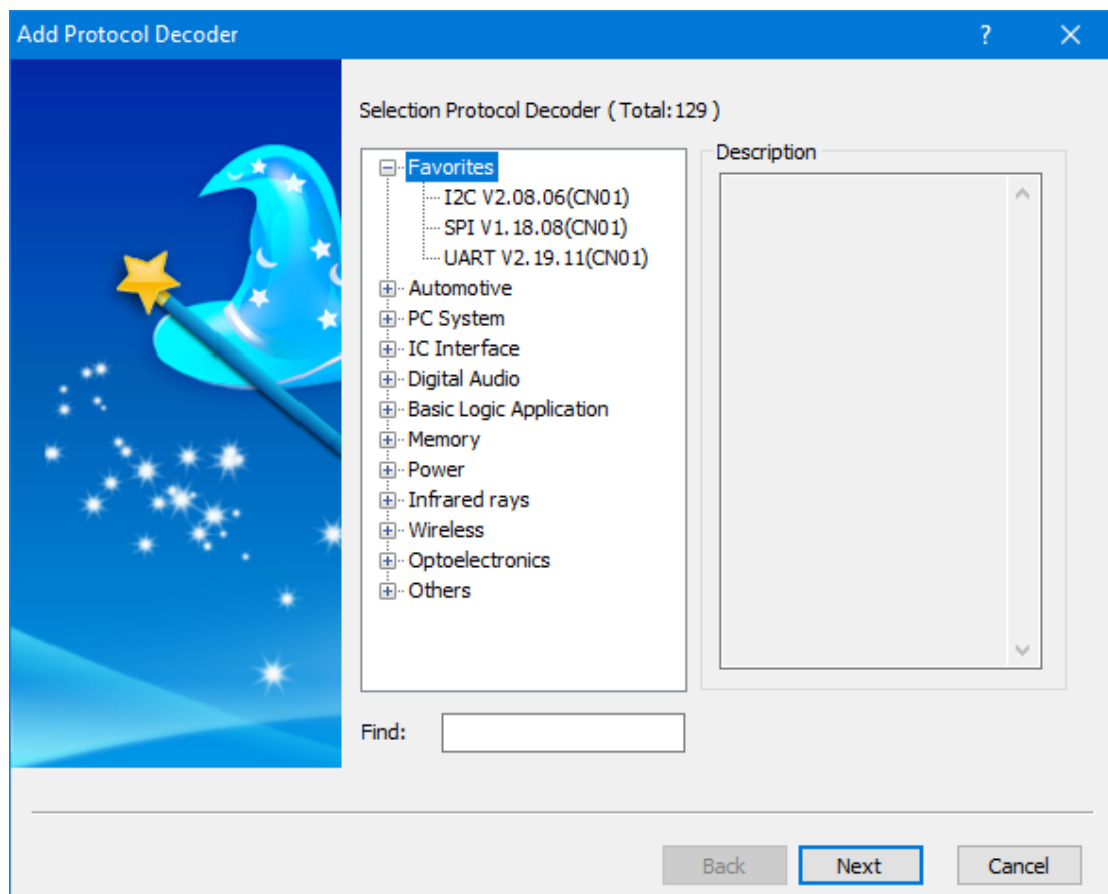


Figure 4-19 Add Protocol Decoder dialog box



The ZP-Logic comes with more than 120 free protocol decoders; these are listed in Table 4:15. The protocol decoders are individual modules that are separated from the ZP-Logic software.

The protocol decoder dialog box shown in figure 4-20 is an example that shows the I2C decoder setup. Note that all protocol decoder dialog boxes have distinct designs.

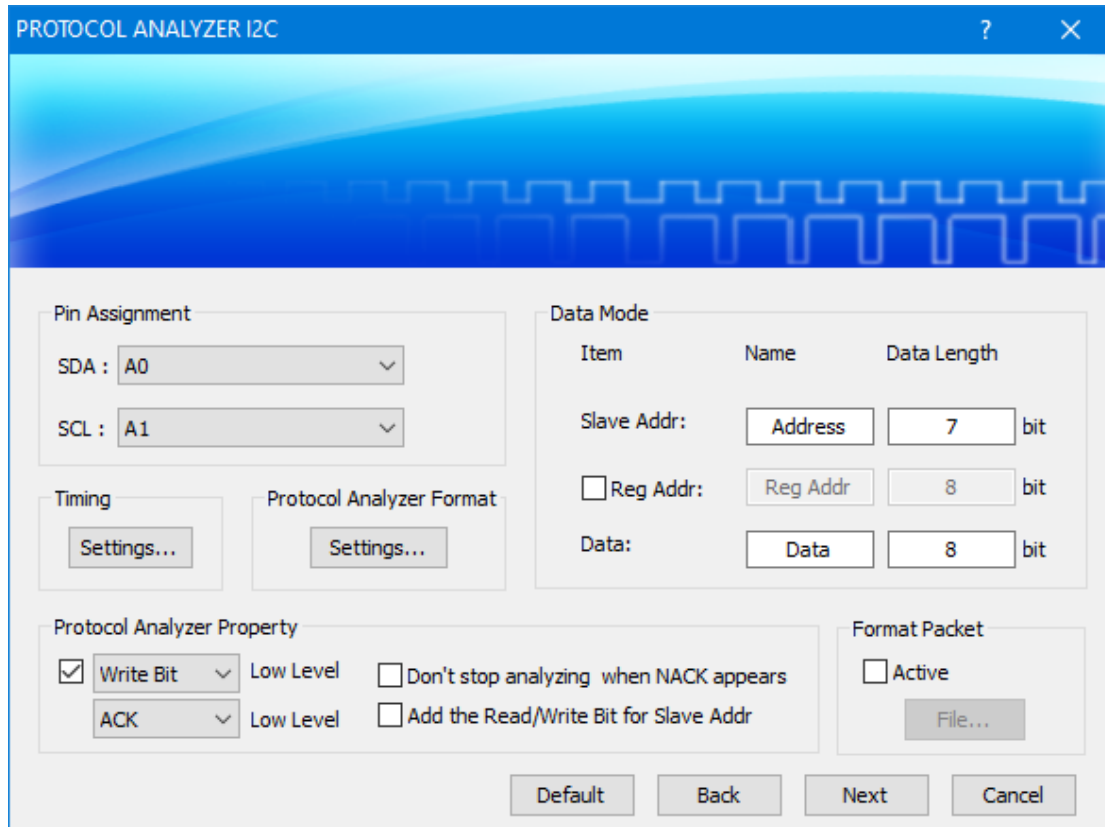


Figure 4-20 I2C Protocol Decoder Setup dialog box

Table 4:15 lists the protocol decoders available in ZP-Logic.

| Built-in Protocol Decoders | | |
|----------------------------|---------|---------------|
| 1-WIRE | I2S | Philips RC-6 |
| 1-WIRE (Advanced) | I3C | PMBus 1.1 |
| 3-WIRE | I80 | PROFI BUS |
| 7-SEGMENT LED | IO-Link | PS/2 |
| AC97 | IDE | PSB Interface |
| AES_EBU | IRDA | PT2262/PT2272 |



| | | |
|-------------------------|------------------------|------------------------------|
| AMD_SVI2 | ISO7816 UART | QI |
| ARITHMETICAL LOGIC | JK FLIP-FLOP | Quad SPI |
| BDM | JTAG 2.0 | RGB Interface |
| BMS | KEELOQ Code Hopping | S/PDIF |
| CAN 2.0B | KNX | S2Cwire/AS2Cwire |
| CAN FD | LCD1602 | SAMSUNG K9 (NAND Flash) |
| CCIR601 | LCD12864 | SCCB |
| CCIR656 | LED Pitch Array | SD2.0/SDIO |
| CMOS IMAGE | LG4572 | SD3.0 |
| Compact Flash 4.1 | LIN 2.1 | SDIO3.0 |
| DALI Interface | Line code | SDQ |
| DDC EDID | Low Pin Count | Serial GPIO IBPI |
| Differential Manchester | LPC-SERIRQ | Serial Wire Debug (SWD) |
| DIGITAL LOGIC | LPT | SHT11 |
| DigRF | MANCHESTER | SIGNIA 6210 |
| DM114/DM115 | MCU-51 DECODE | SLE4442 |
| DMX512 | MDDI | SMBus 2.0 |
| DP AUX Channel | MHL-CBUS | SoundWire |
| DS1302 | MICROWIRE | SPI |
| DS18B20 | MICROWIRE (EEPROM 93C) | SPI PLUS |
| DSA Interface | MIDI | SPI Compatible(Atmel Memory) |
| DSI Bus | MII | SSI Interface |
| FLEXRAY 2.1A | MILLER | ST7669 |
| eMMC | MIL-STD-1553 | STBus |
| eSPI | MIPI DSI | SVID |
| FWH | MIPI RFFE | SWP |
| GPIO | MIPI_CSI-2 | UART |
| HART | ModBus | UNI/O |
| HD Audio | MODIFIED MILLER | UPDOWNCOUNTER |
| HDLC | MODIFIED SPI | USB 1.1 plus |
| HDMI CEC | MVB | USB 2.0 |
| HDQ | NEC PD6122 | USB PD3.0 |



| | | |
|--------------------------------|---------------|---------------|
| HID Over I2C | OPENTHERM 2.2 | Wiegand |
| HPI | PCI | WTB |
| I2C | PCM | WWV/WWVH/WWVB |
| I2C (EEPROM 24L) | PECI | YK-5 |
| I2C (EEPROM24LCS61/24LCS62) | Philips RC-5 | |

Table 4:15 Built-in protocol decoders

4.17. Acquisition Setup

Acquisition/Trigger Setup choices such as channel assignment, Sampling mode and the Trigger Setup dialog box. This is also where users can adjust the voltage threshold for triggering and configure a DSO connection.

4.17.1. Bus/Signal

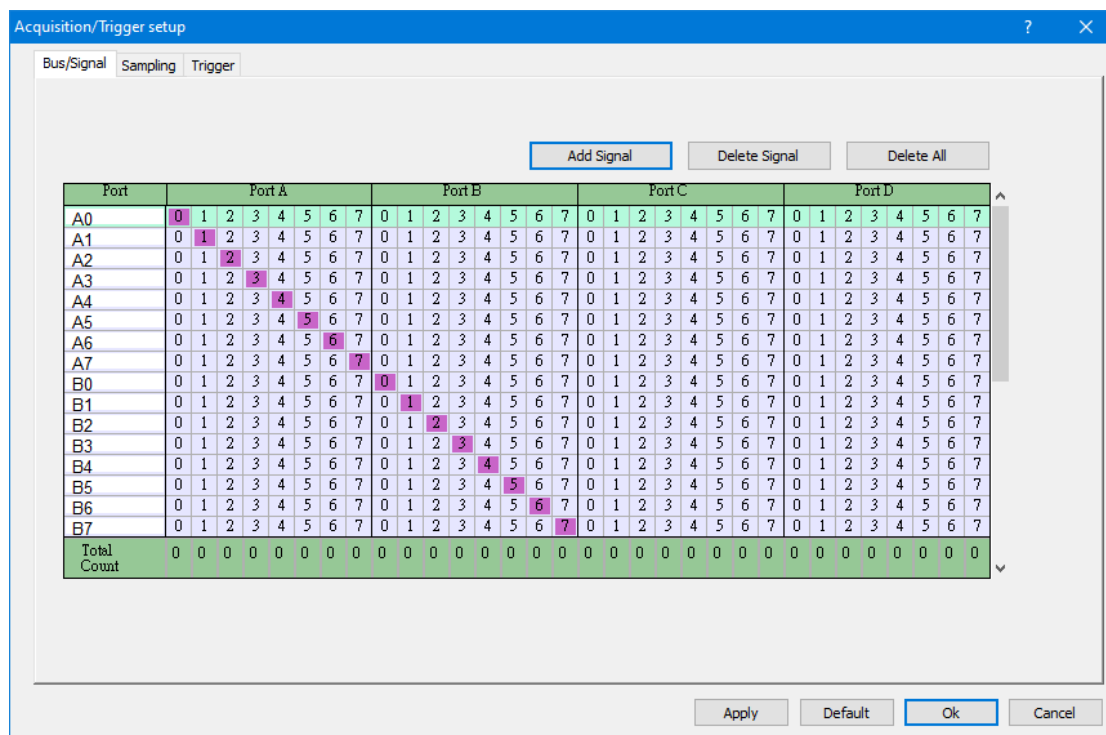


Figure 4-21 Bus/Signal Setup dialog box

| Item | Description |
|------------|--------------------------------------------------------------------------------------------------------------------------------------|
| Bus/Signal | One probe is connected to each of the channel ports of the LAP-F1 and each probe samples one signal. By default, Port A0 (Probe0) is |

| | |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | linked with channel A0 in the software etc. Channels can be renamed and rearranged: The left column shows the channel name in ZP-Logic and the purple coloring determines which of the ports/probes is linked to the channel. |
| Add Signal | Add a channel. The user must define which probe the new channel should be linked to; by default it's unassigned. |
| Delete Signal | Delete the selected channel. |
| Delete All | Delete all channels. |

Table 4:16 Bus/Signal Setup dialog box description

4.17.2. Sampling

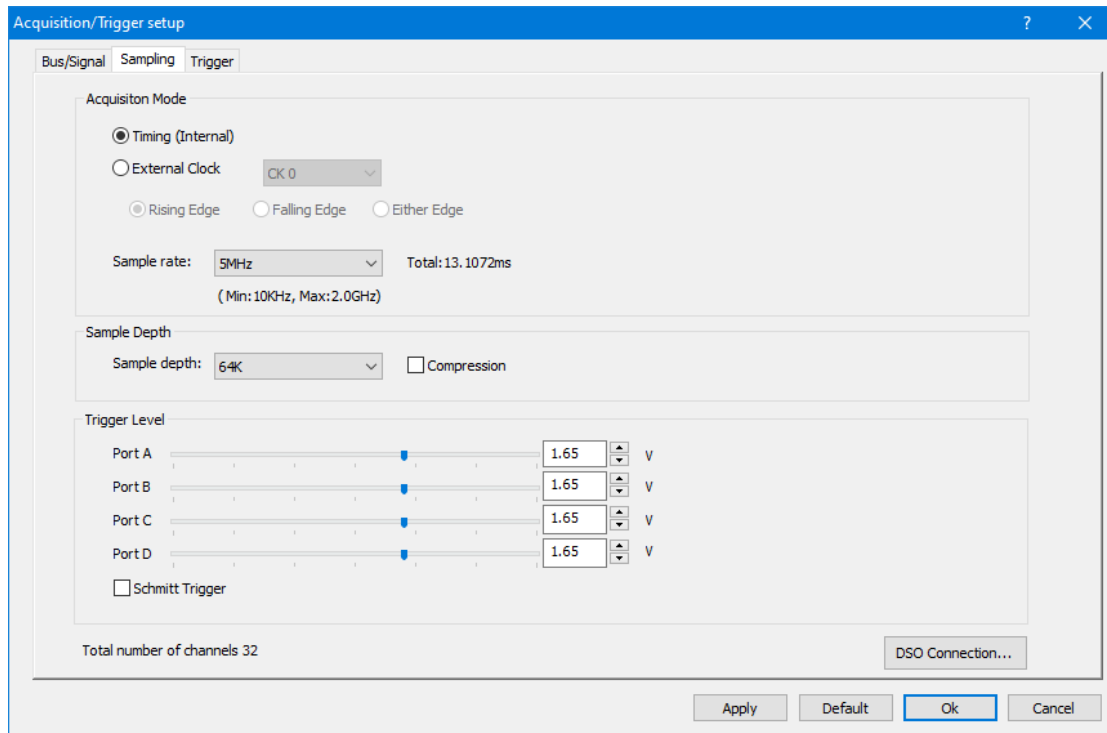


Figure 4-22 LAP-C Pro sampling Setup dialog box

| Item | Description |
|------|-------------|
|------|-------------|

Acquisition Mode

| | |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| State (External Clock) | In State mode (also called synchronous acquisition) the clock that governs when to sample data is provided by the DUT. State mode provides a view of how the system is executing. One sample is taken per clock cycle and the user must specify whether he wants to sample on rising or falling DUT clocks, or on either. The State mode |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|



| | |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | sample rate goes from 0.001 Hz to 200 MHz. |
| Timing (Internal Clock) | In Timing mode (also called asynchronous acquisition) the input signals are sampled and stored at equal time intervals based on LAP-C Pro's internal clock. The Timing mode sample rate goes from 5 MHz to 1 GHz. |
| Sample Rate | The sample rate or acquisition frequency determines how often samples are taken. Press CTRL + U to increase the sample rate and CTRL + D to decrease it. |

Acquisition Choices

| | |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Sample Depth | Determine the amount of data to be acquired per channel; it is set to 32 k by default. |
| Extended Mode | Set up folding or compression |
| Trigger Level | See chapter 4.21. |
| Schmitt Trigger | Port C(V_{YH}) and Port A(V_{TL}) to transfer function, shown on Port A. Port D(V_{YH}) and Port B(V_{TL}) to transfer function, shown on Port B. |
| DSO Connection | Set up a DSO Connection; see chapter 4.37. |

Table 4:17 LAP-C Pro sampling Setup dialog box description

➤ 4.17.2.1. Trigger Level

The Trigger Level defines when a signal changes state. In other words; if the voltage of a signal is inferior to the Trigger Level it will be regarded as 0 (Low), and vice versa. Similarly, when the signal voltage rises from below to above the Trigger Level, the LAP-F1 will consider that a change of state from Low to High has occurred and that the new state is 1 (High). The Trigger Level is sometimes referred to as Trigger Voltage or Threshold Level.

The LAP-F1 lets users use up to 4 different Trigger Levels at a time; one for each of the four port A, B, C and D. For each port, three pre-defined levels are available: 1.2/1.5/1.8 IO voltages. It is also possible to user-define the Trigger Level. See the dialog box in figure 4-24.

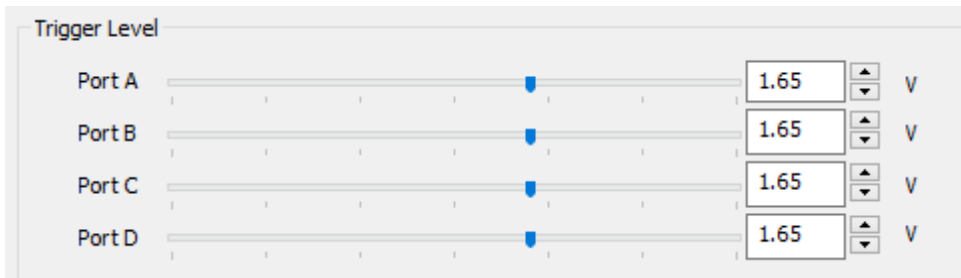


Figure 4-23 Trigger Level dialog box for Low Voltage Probes

| Item | Description |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Probe Type | For LAP-F1. All currently available probe types (TTL, Low-voltage, Negative Logic and eMMC) are all defined as in this menu. |
| Trigger Level | |
| Port | The 4 ports can have individual trigger voltage levels. (Port A has ch. A0-A15 etc). |
| Probe Type | Select the probe type being used: P100TL is the TTL probe, P120LV the Low-voltage probe and P120NE the Negative Logic probe. |
| IO Type | Choose between four pre-set trigger levels. |
| Threshold | Adjust the duty cycle; voltages below the threshold are defined by the LAP-F1 as Low or 0, and voltages above are defined as High or 1. |

Table 4:18 Trigger Level dialog box description

➤ 4.17.2.2.DSO Connection

A DSO Connection can be set up when users want to import and display a DSO signal in the ZP-Logic software. This can be useful since the logic analyzer does not have the ability to capture analog signals. The supported DSO models are listed in Table 4:20.

Two operation modes are possible; the connection can be set up with logic analyzer as master or slave depending on which instrument the user wants to provide the trigger signal. The two modes are described in continuation.

➤ *Logic analyzer as Master*

When the logic analyzer is the master the DSO is the slave. In this mode, the Trigger Out of the logic analyzer connects with the Trigger In of the DSO. When the trigger event occurs, the logic analyzer sends a trigger signal to the DSO which, upon receiving the signal, starts to capture data. See the complete connection diagram in Figure 4-24.

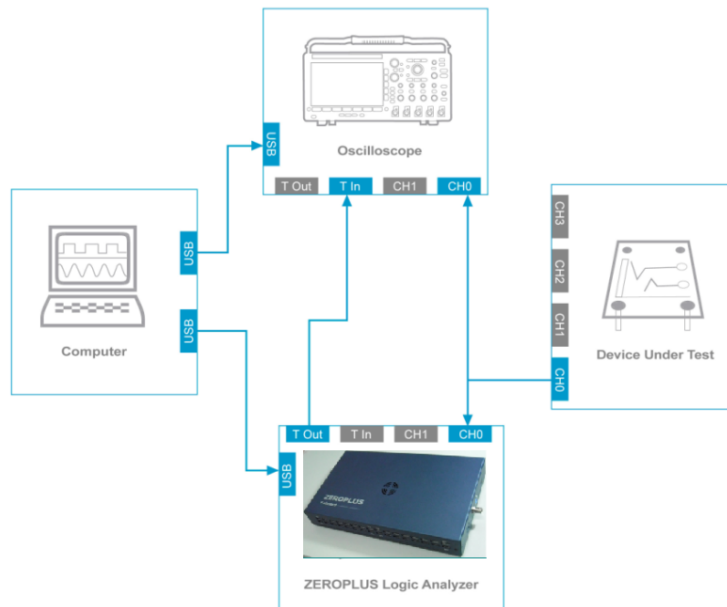


Figure 4-24 Connection diagram with logic analyzer as master

➤ *Logic analyzer as Slave*

When the logic analyzer is the slave the DSO is the master. In this mode, the Trigger Out of the DSO connects with the Trigger In of the logic analyzer. When the trigger event occurs, the DSO sends a trigger signal to the logic analyzer which, upon receiving the signal, starts to store data. See the complete connection diagram in Figure 4-25.

Users can try to connect the DSO Trigger Out to any regular channel of the logic analyzer if the BNC connector is occupied by another instrument.

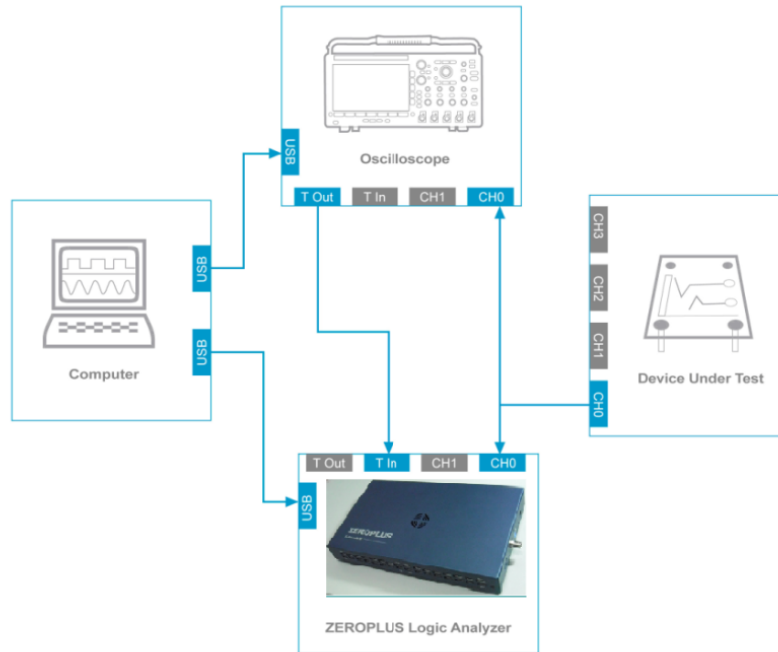


Figure 4-25 Connection diagram with logic analyzer as slave

➤ ***Settings***

Up to 4 analog signals can be shown; see the settings dialog box in Figure 4-26.

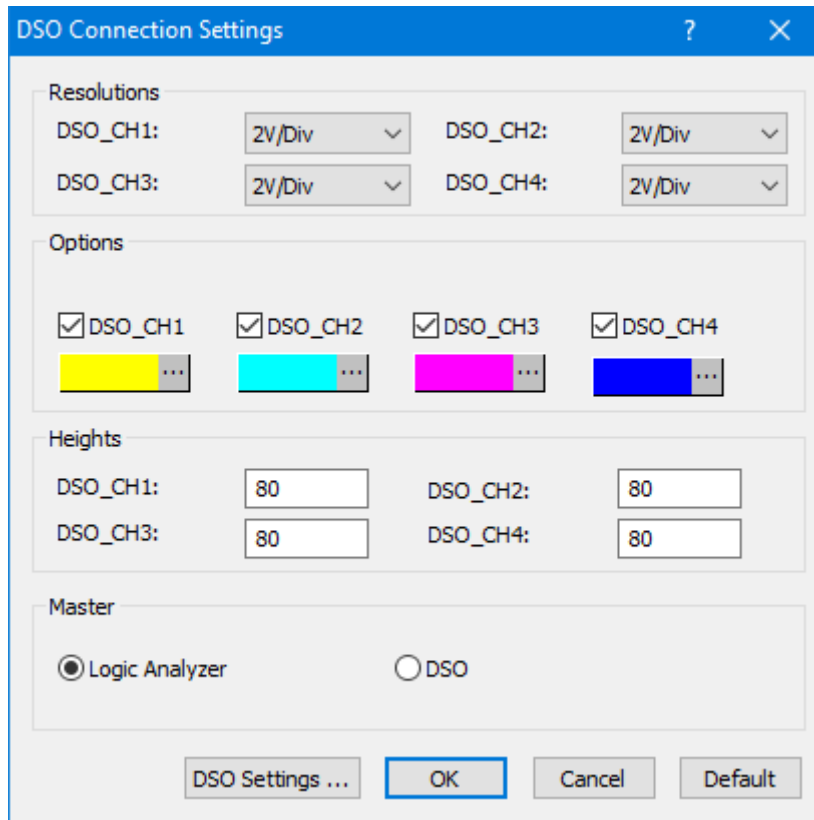


Figure 4-26 DSO Connection dialog box

| Item | Description |
|----------------------|------------------------------------------------------------------------------------------------------------------------------|
| Resolutions | |
| DSO_Ch1-4 | Adjust the vertical resolution of the input signals in Volts/Division ranging from 3V/Div to 2mV/Div in a total of 11 steps. |
| Options | |
| Show DSO signal only | Choose which DSO signals to display in the waveform area and their colors. |
| DSO_Ch1-4 | |
| Heights | |
| DSO_Ch1-4 | Set the trace height in pixels. 30-180 pixels can be chosen; the default is 80 px. |
| Master | |
| Logic Analyzer | The Logic analyzer is master and the DSO slave; see chapter 4.17.2.2.; default option. |
| DSO | The Logic analyzer is master and the DSO slave; see chapter 4.17.2.2. |



DSO Settings Open the DSO Settings dialog box; the interface will depend on the DSO brand.

Table 4:19 DSO Connection dialog box description

➤ ***Supported Oscilloscope Models***

The supported DSO models are listed in Table 4:20.

| Manufacturer | Model | Connection Mode |
|--------------|--------------------------|-------------------|
| Tektronix | TDS1000 Series | USB |
| | TDS2000 Series | USB |
| | TDS3000 Series | USB, TCP/IP, GPIB |
| | TDS5000 Series | GPIB |
| | TDS6000 Series | Built-in GPIB |
| | DPO7000 Series | USB, TCP/IP |
| OWON | SDS7102 Model | USB |
| PicoScope | 3206B Series | USB |
| GwInstek | GDS-1000A Series | USB |
| | GDS-3000 Series | USB |
| Agilent | DSO5000 Series | USB |
| BK Precision | 2540B, 2542B, 2540B-GEN, | USB |
| | 2542B-GEN | |
| RIGOL | DS4034 | USB |

Table 4:20 Supported oscilloscope models

To use the logic analyzer with any of the DSOs listed above it is necessary to install software from the manufacturer; see Table 4:21 for details.

| Brand | Driver | Website |
|--------------|--------------------------------------|-----------------------------------------------------------------------|
| Agilent | Windows USB Driver | www.chem.agilent.com |
| BK Precision | Windows USB Driver | http://www.bkprecision.com/ |
| GwInstek | Windows USB Driver | www.gwinstek.com |
| Owon | Windows USB driver | www.owon.com.cn |
| PICO | Windows USB driver | www.picotech.com |
| Tektronix | Tekvisa Connectivity Software V3.3.4 | www.tektronix.com |
| RIGOL | Windows USB Driver | http://www.rigol.com/ |



Table 4:21 DSO driver needed for the DSO connection

4.17.3. Trigger

See chapter 4.18.

4.18. Trigger Setup (quick)

4.18.1. Trigger mode

Trigger mode has Waveform trigger and Pattern trigger.

➤ *Waveform trigger*

In the UI of waveform trigger, clicking the button “Show the waveform area” and box choose waveform need to trigger, the Preview result as Figure 4-29.

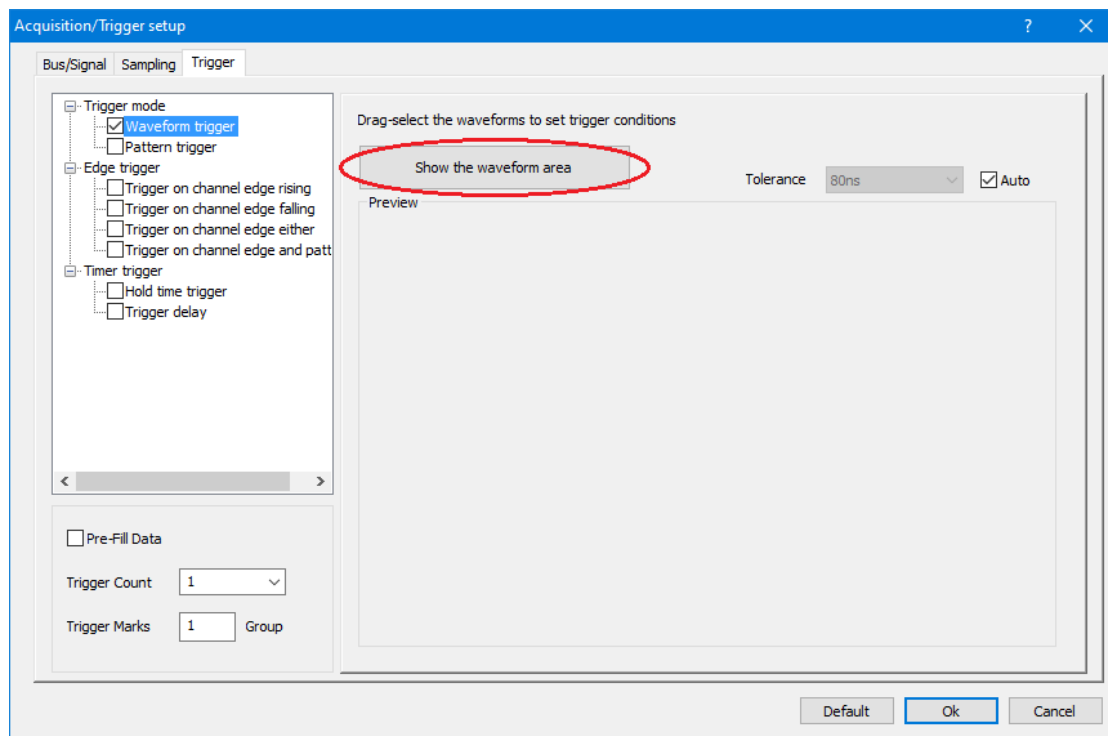


Figure 4-27 Waveform trigger dialog box

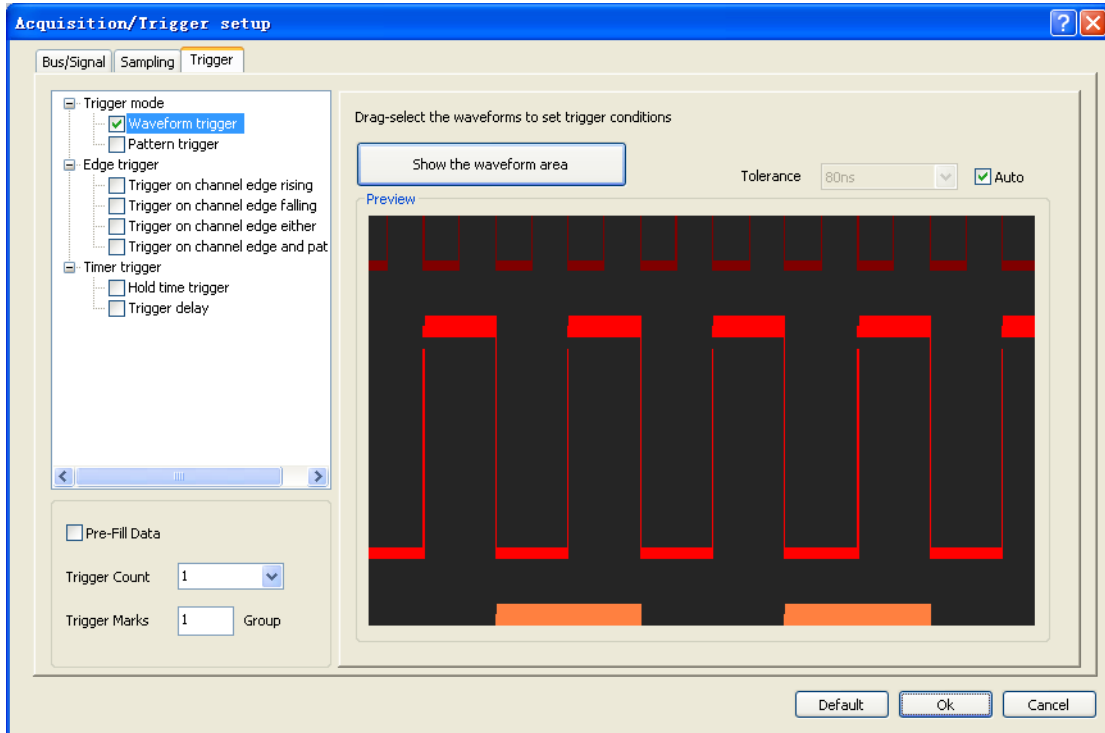


Figure 4-28 Waveform trigger preview dialog box

Select the triggered wave to trigger the wave in which high and low levels are in tolerance, the levels are shown:

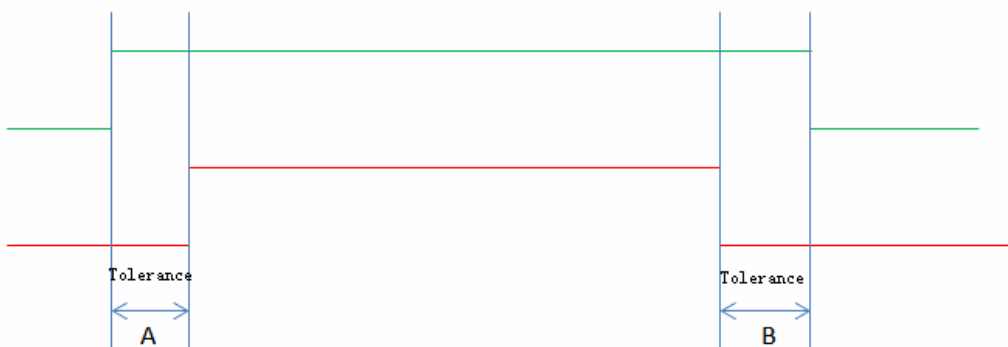


Figure 4-29 Levels with tolerance example

➤ *Pattern trigger*

In the UI of Pattern trigger, there can set the condition of Interval, Width, Wait for Bus or Signal shown as Figure 4-33 , Click "Go To" can start Trigger or Next Pattern shown as Figure 4-31 .

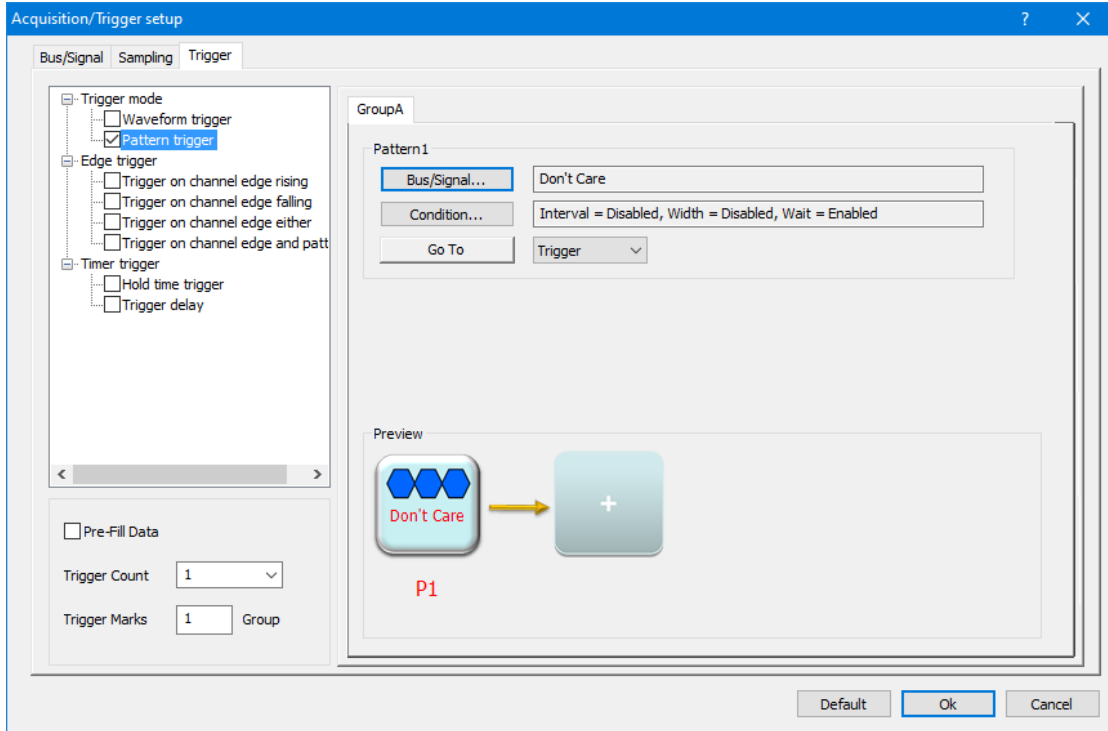


Figure 4-30 Pattern trigger dialog box

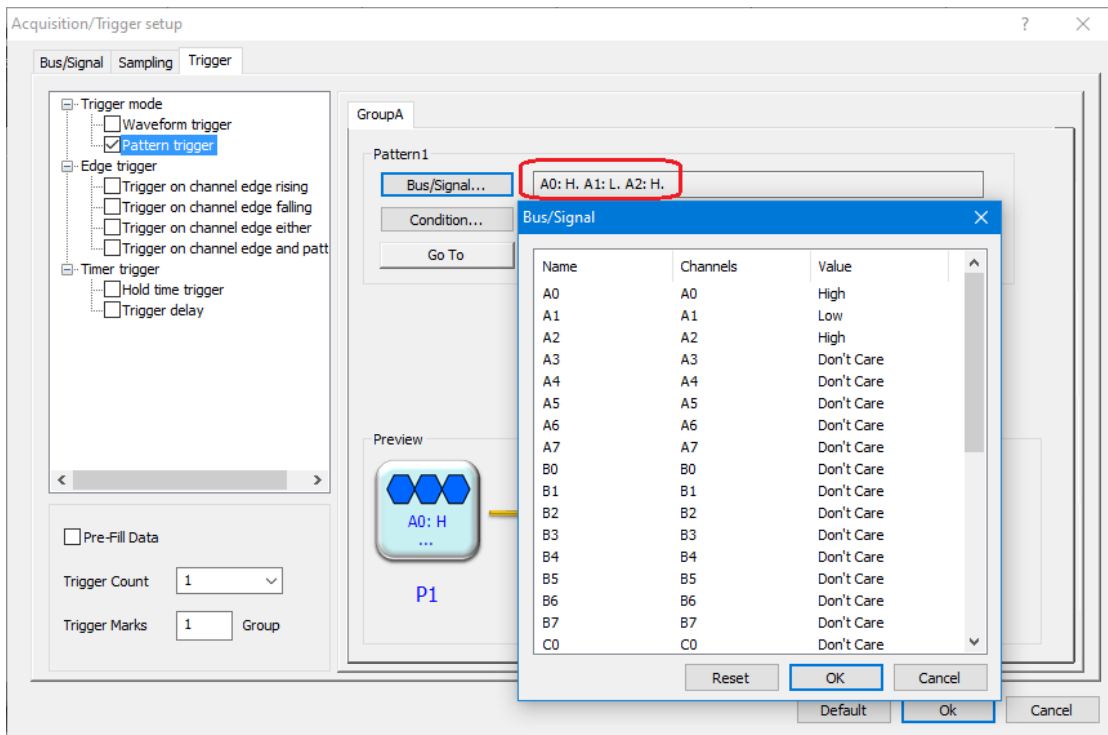


Figure 4-31 Bus/Signal dialog box

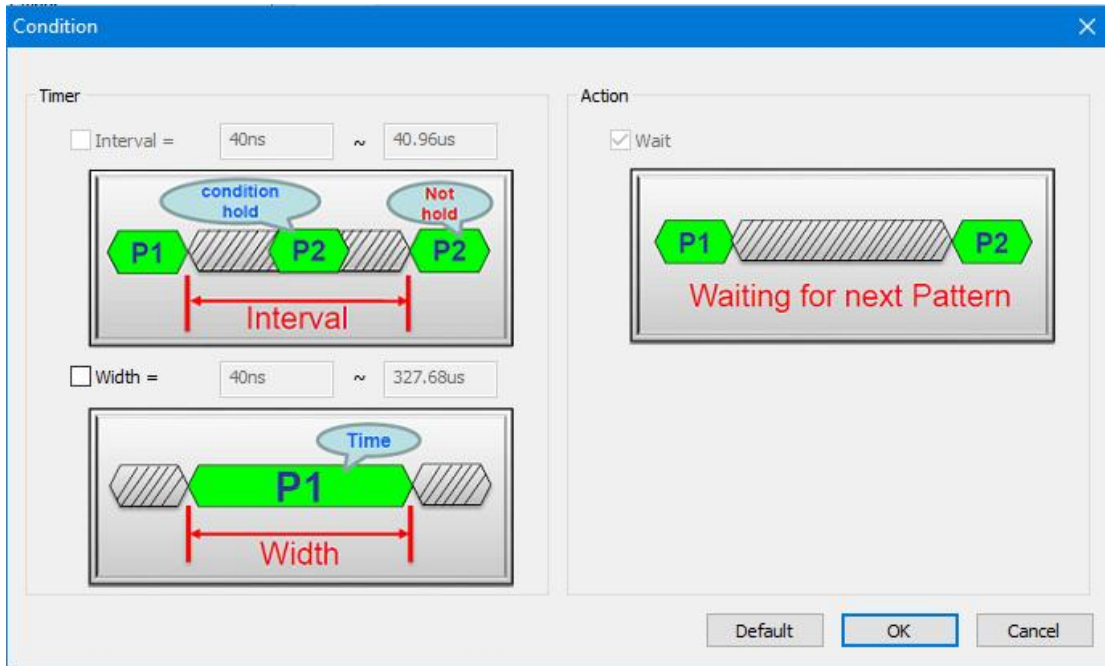


Figure 4-32 Condition dialog box

4.18.2. Edge trigger

Edge trigger have Trigger on channel edge rising, Trigger on channel edge falling, Trigger on channel edge either, and Trigger on channel edge and pattern.

➤ *Trigger on channel edge rising*

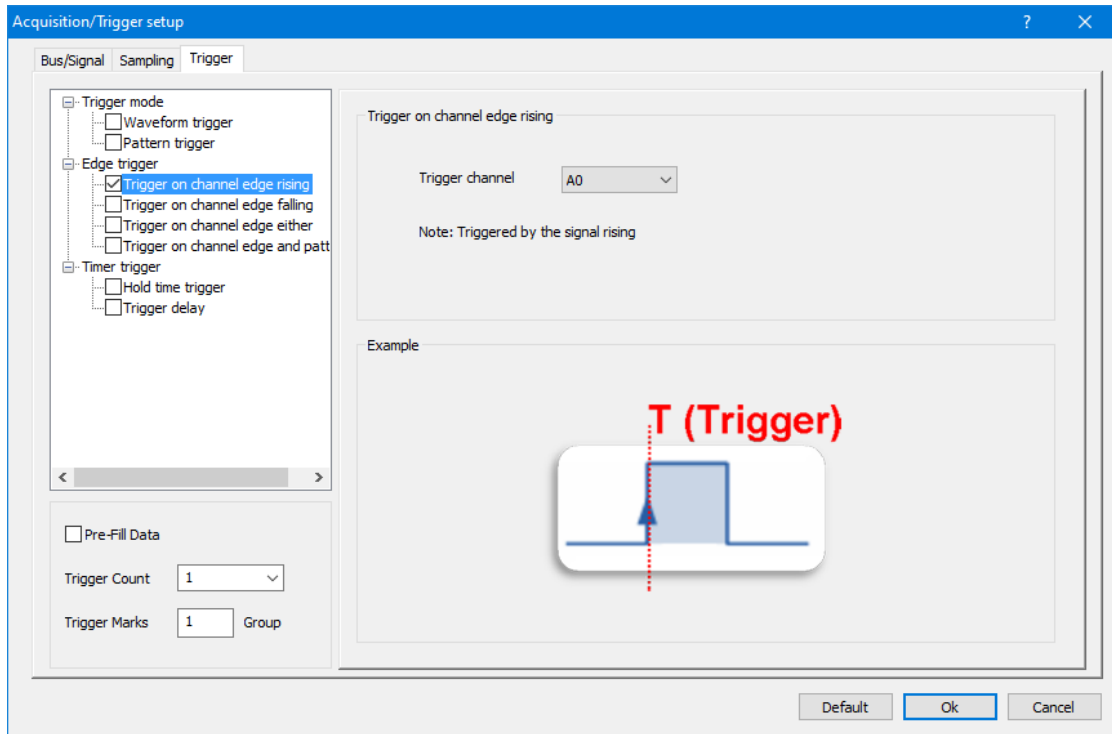


Figure 4-33 Trigger on channel edge rising dialog box

➤ *Trigger on channel edge falling*

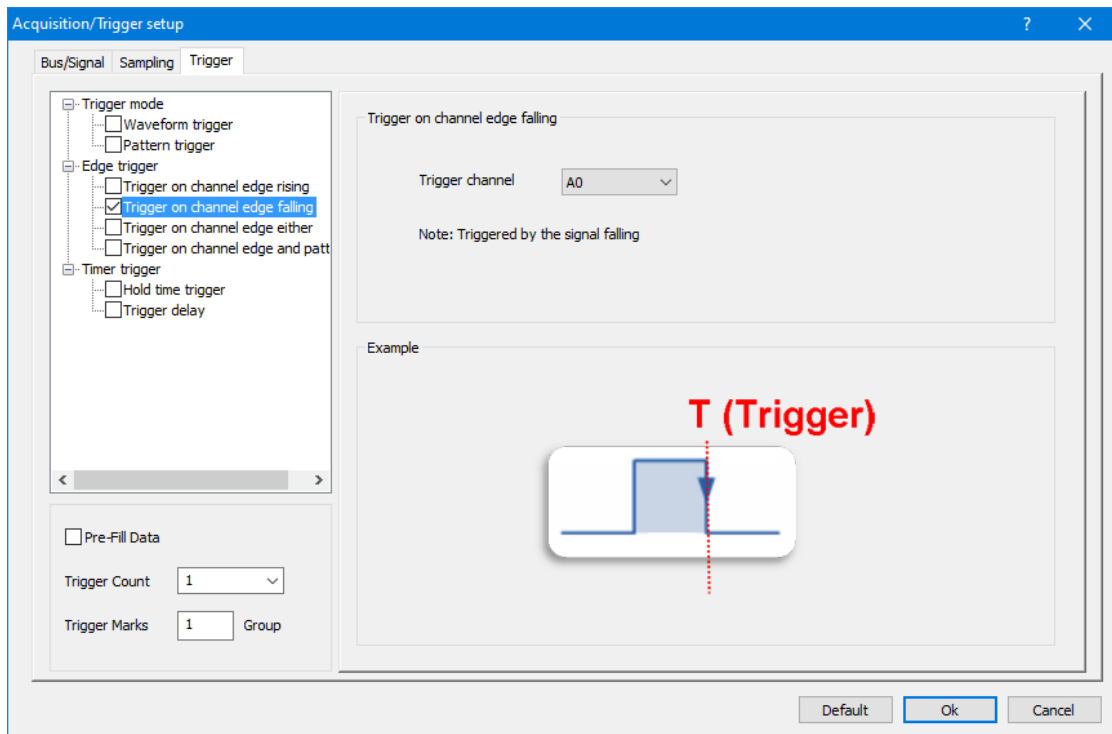


Figure 4-34 Trigger on channel edge falling dialog box



➤ *Trigger on channel edge either*

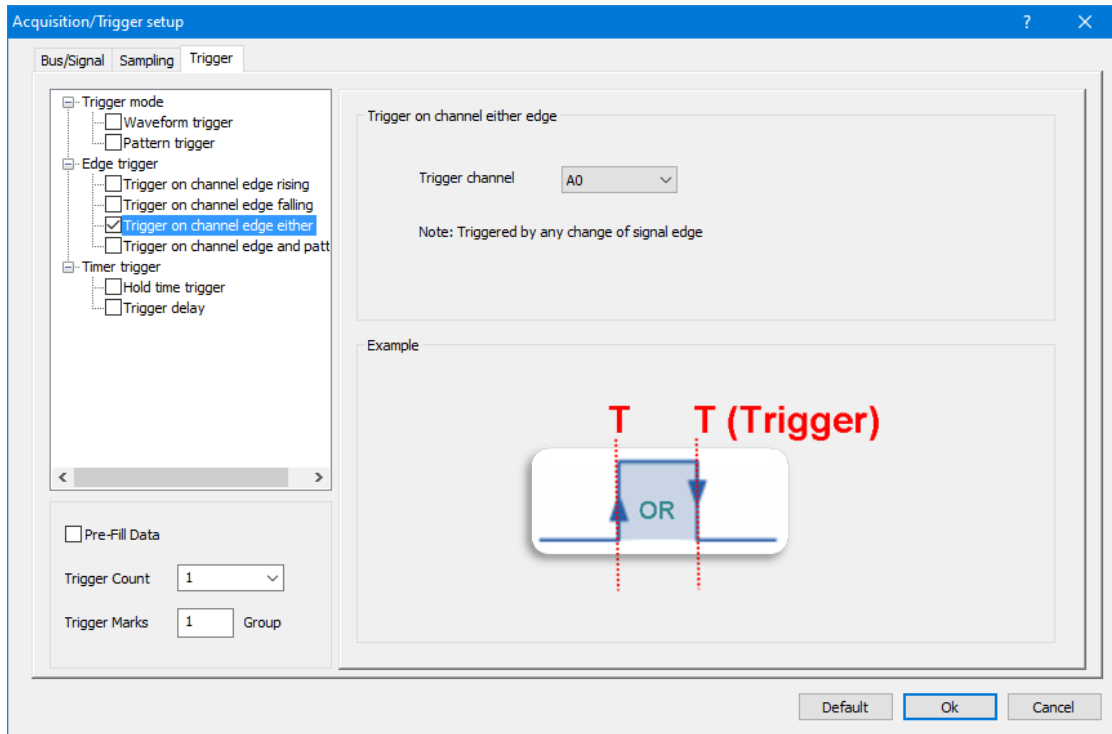


Figure 4-35 Trigger on channel edge either dialog box

➤ *Trigger on channel edge and pattern*

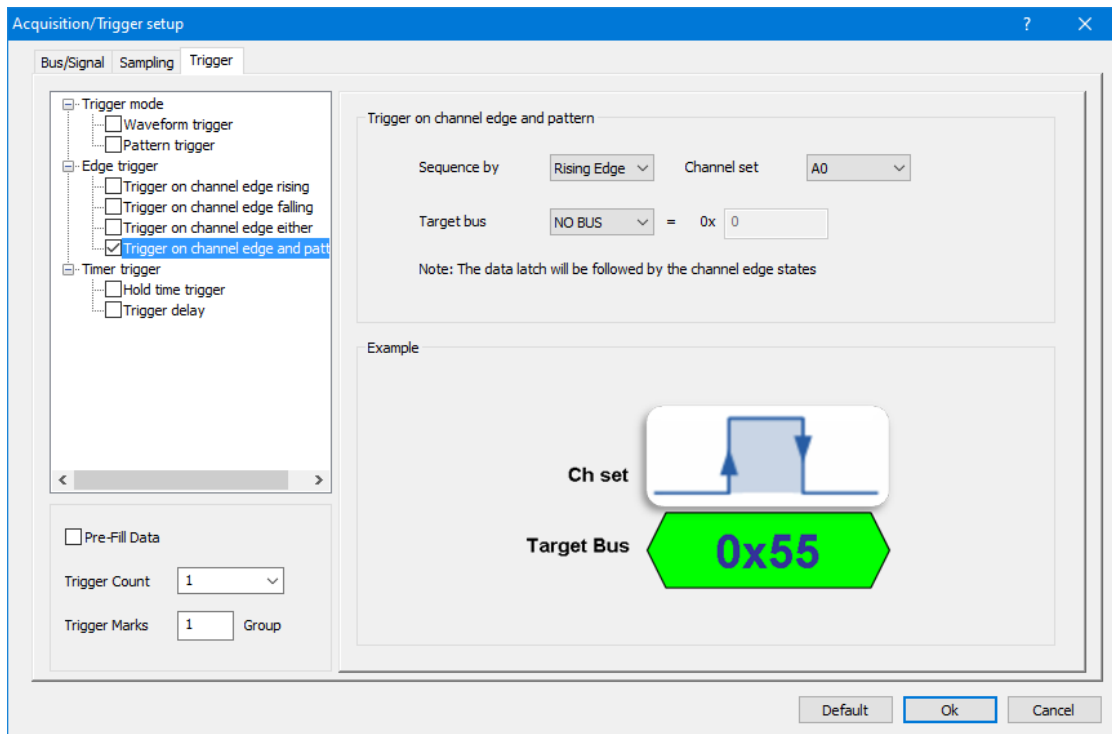


Figure 4-36 Trigger on channel edge and pattern dialog box



4.18.3. Timer trigger

Time trigger have Hold time trigger and Trigger delay.

➤ *Hold time trigger*

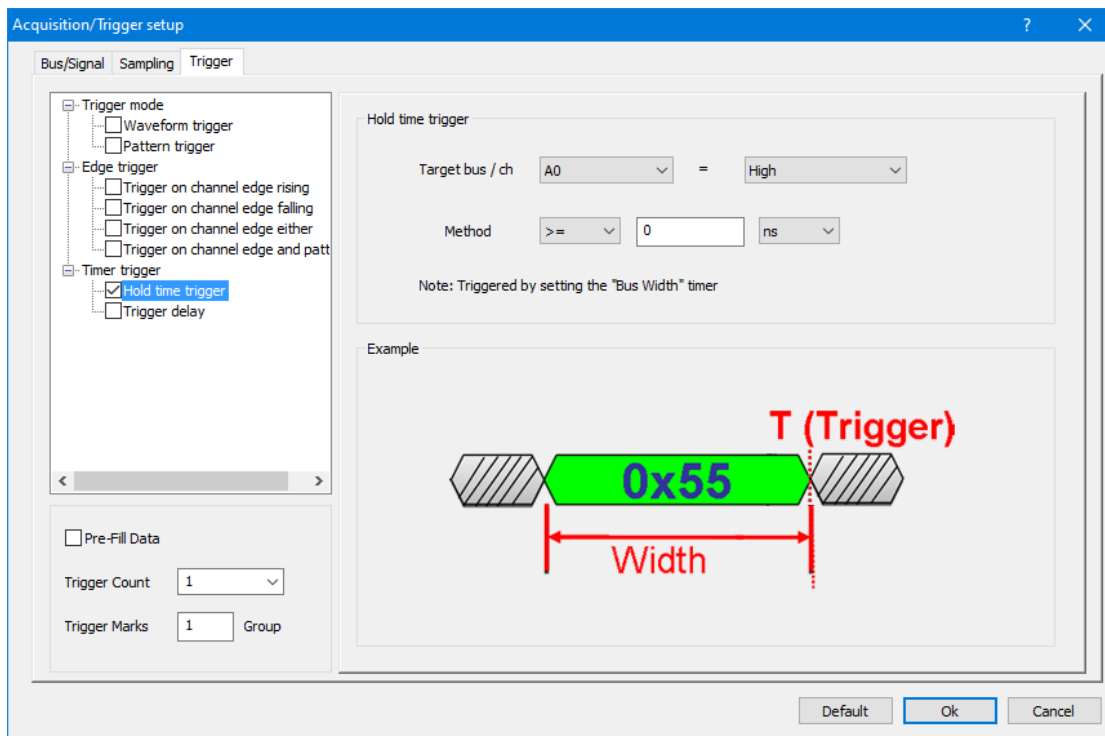


Figure 4-37 Hold time trigger dialog box

➤ Trigger delay

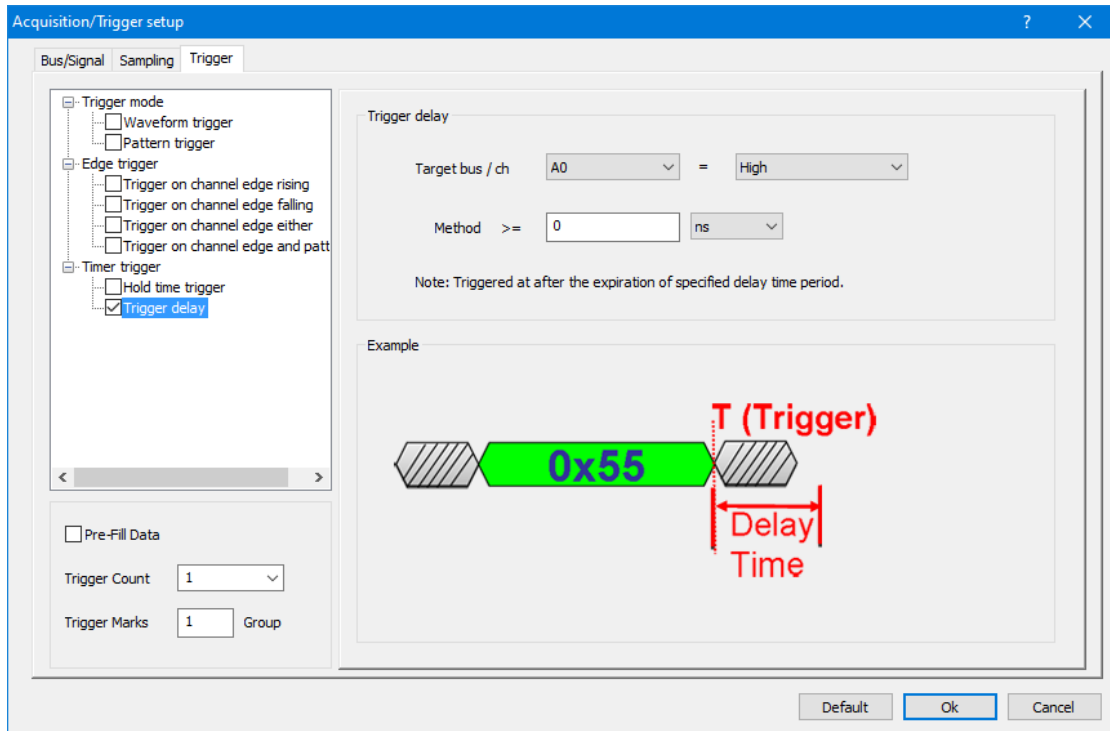


Figure 4-38 Trigger delay dialog box

| Item | Description |
|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trigger Mode | |
| Waveform trigger | |
| Error Tolerance | |
| Pattern trigger | |
| Group A and Group B | Group A: LAP – C Pro A0 - A15, B0 - B15. Group B: LAP – C Pro C0 - C15, D0 - D15. |
| Bus/Signal | 40 channels LAP-C Pro model all ports from channel C8 to D15 are disabled. For LAP-C Pro trigger conditions can only be set for 32 channels at a time. However; there exists an OR relationship between the Group A and Group B; this OR condition is automatically enabled if the user sets trigger conditions in both of the groups. |
| | The bus set point to hexadecimal. Channel can choose five kinds of trigger mode: High Level (1), Low Level (0), Rising Edge (transition from low to high), Falling Edge (transition from high to |



| | |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | low) and Either Edge (Rising or Falling Edge). |
| Condition | To set the Interval, width and trigger the Wait functions. |
| Interval | The scope of input interval value. Interval triggering can be activated when there are at least 2 levels. |
| width | Enter the width of the range value of the time. Pulse-width conditions can be set for High/Low trigger conditions. |
| Wait | Wait is used for multilevel triggering with High/Low conditions. Ex: You want to set up a Rising (R), Rising, High (H) trigger where the High event satisfies a certain pulse-width (PW). When an RRH event is found, the LAP-C Pro will check if the High satisfies the PW condition. If that is not the case, the LAP-C Pro will either keep looking for an H that satisfies the condition and trigger when it finds it (Wait is enabled), or it will restart the search and look for a new RRH pattern that satisfies the PW condition (Wait is disabled; default option). |

| | |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Go To | Trigger or the next Setup. |
| Preview | According to the Trigger Level. Add or delete operation can be performed. There are 256 Trigger Levels. When the conditions of P1 are satisfied the LAP-C Pro looks for an event that satisfies the conditions of P2. When an event satisfying the last active trigger level is found the LAP-C Pro triggers. |

Edge trigger

| | |
|-------------------------------------|-------------------------------------------------------------|
| Trigger on channel edge rising | Triggered by the signal rising. |
| Trigger on channel edge falling | Triggered by the signal falling. |
| Trigger on channel edge either | Triggered by any change of signal edge. |
| Trigger on channel edge and pattern | The data latch will be followed by the channel edge states. |

Timer trigger

| | |
|-------------------|---------------------------------------------------------------------------------------------------------------------------------|
| Hold time trigger | Triggered by setting the "Bus Width" timer. |
| Trigger delay | Triggered at after the expiration of specified delay time period. |
| Pre-Fill Data | The Trigger Position combined with the Sample Depth determines how many bits of pre-trigger data should be stored. The Pre-Fill |



| | |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | Data determines the ZP-Logic's behavior if the trigger event occurs before the pre-trigger data requirement has been fulfilled. If unchecked (default option) the LAP-C Pro will override the Trigger Position/Sample Depth requirement and start storing data when the trigger event occurs. If checked, triggering will be postponed until the pre-trigger data requirement has been fulfilled. |
| Trigger Count | Trigger on the Xth event that satisfies the trigger conditions; at the default value of 1 the LAP-C Pro will trigger on the first event. |
| Trigger Mark | Place a vertical bar on all samples that meet the trigger conditions. By default, only one trigger bar is shown (the T-bar), but there can be up to 256 trigger bars. These are numbered T0, T1, T2 etc. (Trigger Marks are sometimes referred to as Cursors or Auxiliary Cursors). |

Table 4:22 Acquisition/Trigger Setup dialog box description

4.19. Trigger Setup (manual)

Trigger Setup (manual) offers settings as the following figure with multiple levels triggering, trigger wait, trigger delay and so on. logic analyzer would be triggered at first position meet conditions.

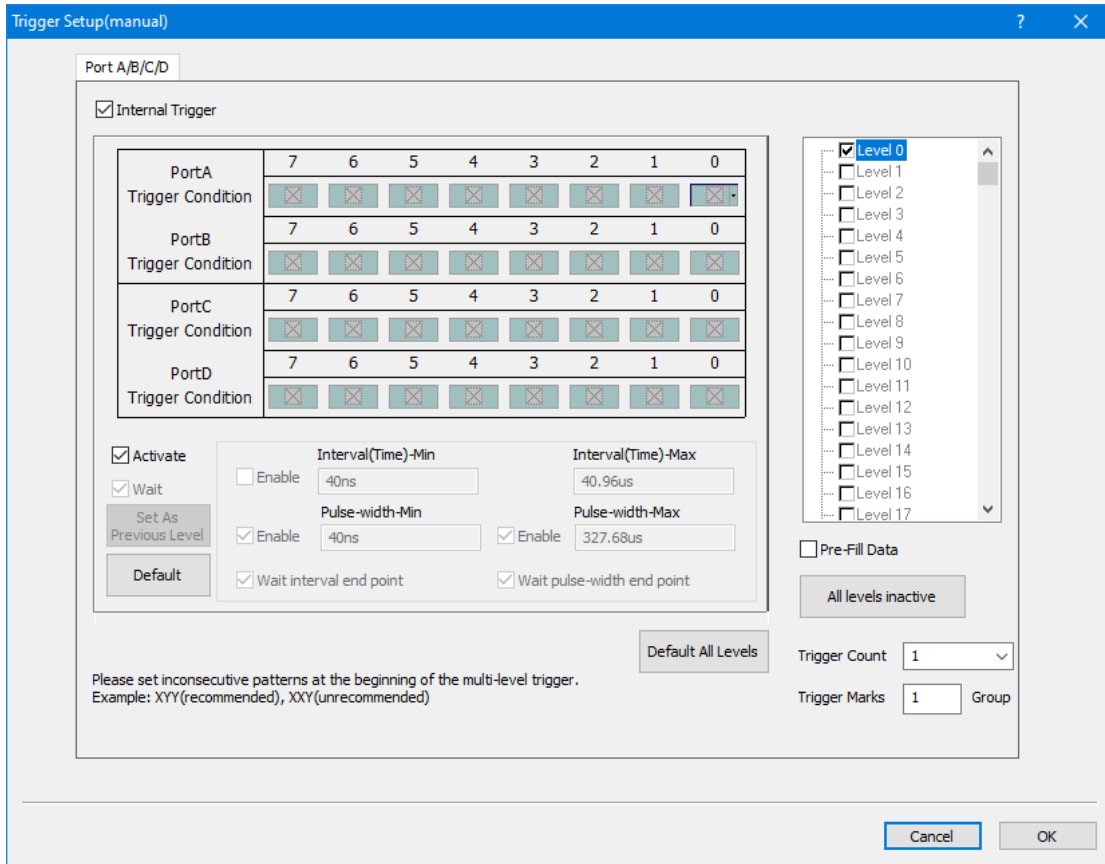


Figure 4-39 Trigger Setup(manual) dialog box

| Item | Description |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Group 0 (Port A/B) | The first 16 channels are sampled by ports A0-15 (Group A), the and |
| Group 1 (Port C/D) | next 16 in ports B0-15 (Group B) etc. For the 40 channel LAP-F1 model all ports from channel C9 to D15 are disabled. For LAP-F2, A,B,C,D Port, each Port has 8 ports. For LAP-F1 trigger conditions can only be set for 32 channels at a time. However; there exists an OR relationship between the Group 0 and Group 1; this OR condition is automatically enabled if the user sets trigger conditions in both of the groups. |

Trigger Mode

| | |
|-------------------|---------------------------------------------------------------------------|
| Internal Trigger | Fulfillment of a condition set makes the LAP-C Pro emit a trigger signal. |
| Trigger Condition | 5 trigger conditions are available: High Level (1), Low Level (0), |



| | |
|-----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | Rising Edge (transition from low to high), Falling Edge (transition from high to low) and Either Edge (Rising or Falling Edge). |
| Activate | Enable the trigger setup; this is done on a level-to-level basis |
| Wait | Wait is used for multilevel triggering with High/Low conditions. Ex: You want to set up a Rising (R), Rising, High (H) trigger where the High event satisfies a certain pulse-width (PW). When an RRH event is found, the LAP-C Pro will check if the High satisfies the PW condition. If that is not the case, the LAP-C Pro will either keep looking for an H that satisfies the condition and trigger when it finds it (Wait is enabled), or it will restart the search and look for a new RRH pattern that satisfies the PW condition (Wait is disabled; default option). |
| Set As Previous Level | Copy the trigger conditions from the previous level. |
| Default | Reset the level to default. |

Pulse-widths and Intervals

| | |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Enable Interval (Time) | Interval triggering can be activated when there are at least 2 levels. |
| Interval (Time) – Min | When Interval is enabled, for the condition set to be satisfied there needs to be a certain distance in time from trigger level X to trigger level X-1; the default min and max values are 180 and 8,192 clocks. |
| Enable Pulse-width | Pulse-width conditions can be set for High/Low trigger conditions. |
| Pulse-width – Min | Set the length of periods – be it High or Low- as a trigger condition. |
| Wait Interval end point | When an Interval condition is set and this option is enabled, the LAP-C Pro will not trigger immediately (i.e. when the H/L event being looked for changes state) upon finding an event that satisfies the Interval condition, but wait until the Interval Max number of samples is reached and then trigger. The Interval Max is counted from the beginning of the H/L event in question. |
| Wait Pulse-width end point | When a pulse-width condition is set and this option is enabled, the LAP-C Pro will not trigger immediately (i.e. when the H/L event being looked for changes state) upon finding an event that satisfies the pulse-width condition, but wait until the Pulse-width Max number of samples is reached and then trigger. The Pulse-width |



Max is counted from the beginning of the H/L event in question.

Trigger Levels

| | |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trigger Level | There are 256 Trigger Levels. When the conditions of Level 1 are satisfied the LAP-C Pro looks for an event that satisfies the conditions of Level 2. When an event satisfying the last active trigger level is found the LAP-C Pro triggers. Note that Level X must be activated before Level X-1 can be activated. |
| Pre-Fill Data | The Trigger Position combined with the Sample Depth determines how many bits of pre-trigger data should be stored. The Pre-Fill Data determines the ZP-Logic's behavior if the trigger event occurs before the pre-trigger data requirement has been fulfilled. If unchecked (default option) the LAP-C Pro will override the Trigger Position/Sample Depth requirement and start storing data when the trigger event occurs. If checked, triggering will be postponed until the pre-trigger data requirement has been fulfilled. |
| All Levels Inactive | Disable all trigger levels. |
| Default All Levels | Set all trigger levels to default. |
| Trigger Count | Trigger on the Xth event that satisfies the trigger conditions; at the default value of 1 the LAP-F1/2 will trigger on the first event. |
| Trigger Mark | Place a vertical bar on all samples that meet the trigger conditions. By default, only one trigger bar is shown (the T-bar), but there can be up to 256 trigger bars. These are numbered T0, T1, T2 etc. (Trigger Marks are sometimes referred to as Cursors or Auxiliary Cursors). |
| Navigation | |
| Back | Go to the Acquisition Setup dialog box. |
| Next | Go to the Trigger Properties dialog box. |
| Cancel | Leave the dialog box without saving the setting. |
| OK | Leave the dialog box and save the settings. |

Table 4:23 Trigger Setup(manual) dialog box description

4.20. Trigger Options

Adjust trigger properties such as Trigger Position and Trigger Delay.

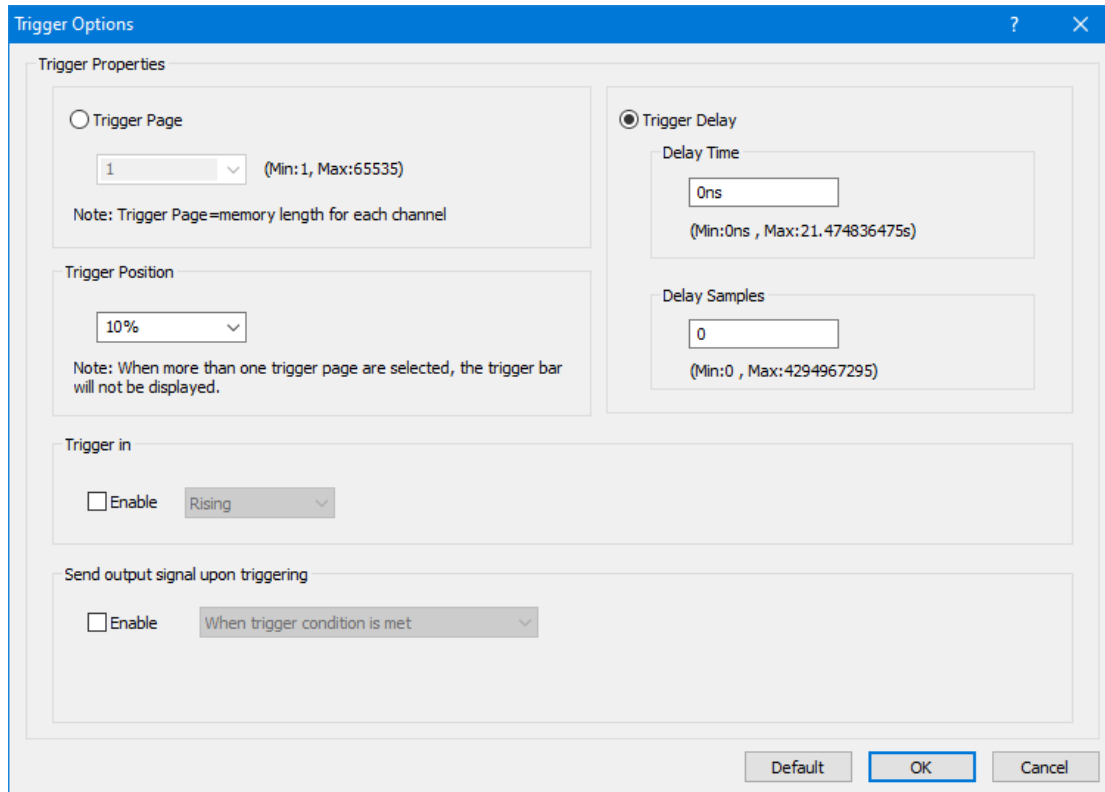


Figure 4-40 Trigger Options dialog box

| Item | Description |
|---------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trigger Properties | |
| Trigger Page | Data Page; Each time acquisition as a page. Input trigger page by case. |
| Trigger Delay | Trigger a certain time or a certain amount of clock cycles after the trigger conditions have been met. The range goes from 0 ns to 687.19 seconds; the default is zero. |
| Trigger Position | |
| | The trigger position determines which samples are stored. At the default 10%, 10% of the available memory is allocated to pre-trigger data and 90% to post-trigger data. |
| Send output signal upon triggering (Trigger Out) | |
| | See chapter 2.3.2; Trigger Out can be sent on the occurrence of 3 different events: |



| | |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| When trigger condition is met | Send the Trigger Out signal when the LAP-C Pro triggers. |
| When clicking Capture | Send the Trigger Out signal when the user clicks Capture. |
| When clicking Stop | Send the Trigger Out signal when the user clicks Stop. |
| Continuously trigger out until | Activate Long-time Record function; set the number of continuous trigger times. User also can check Unlimited number of consecutive trigger output. |
| Trigger and output pulse width | Activate Long-time Record function, set the value of that, 0ns~1.431655765ms. |

Table 4:24 Trigger Options dialog box description

4.21. Trigger Level

See chapter 4.17.2.1.

4.22. Protocol Trigger

The Protocol Triggers are sophisticated hardware triggers specially designed for certain protocols. These triggers open a well of triggering opportunities; for the supported protocols it is possible to trigger on packets, read/write conditions, addresses etc. The triggers are hardware based, i.e. everything happens in the instrument. The logic analyzer comes with 6 protocol triggers:

- I2C
- I2S
- SPI
- SVID
- UART
- CAN2.0B



See the dialog box in figure 4-42 for an example of the dialog box for the I2C trigger.

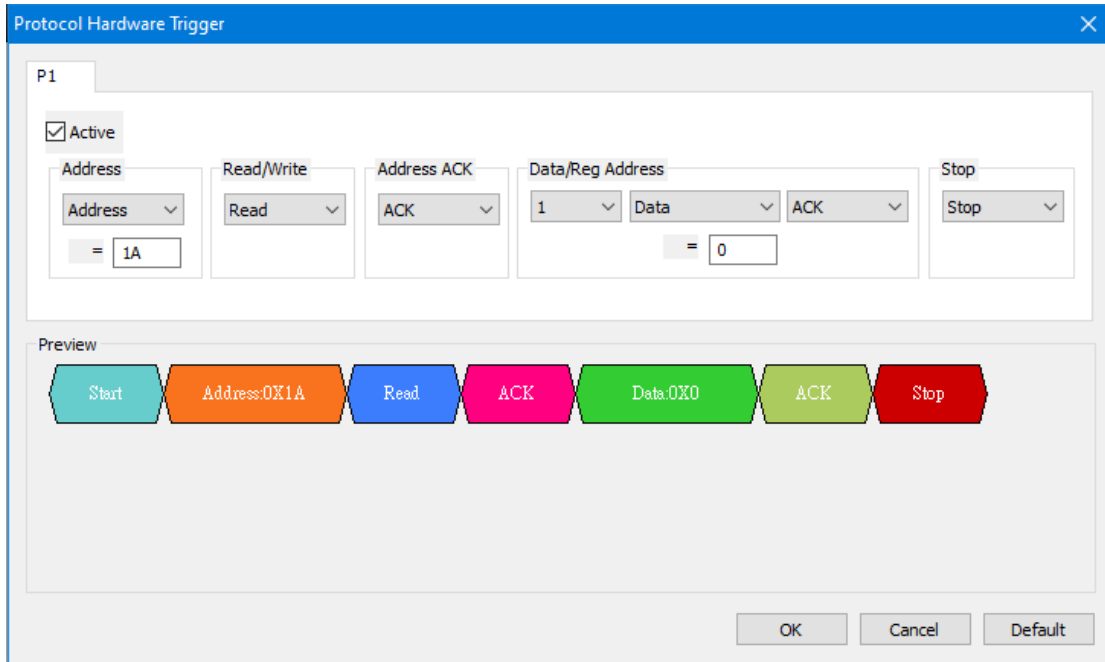


Figure 4-41 Protocol Trigger dialog box for I2C

| Item | Description |
|------------|---------------------------------------------------------------|
| Active | Activate the protocol trigger. |
| Conditions | Select the data pattern that is to be triggered on. |
| Preview | See a visual representation of the constructed condition set. |

Table 4:25 Protocol Trigger dialog box for I2C description

4.23. Single Capture

Capture samples one time using the current Acquisition Settings and Trigger Conditions.

Hot Key: F5.

4.24. Repeated Capture

Repeated Capture is used to restart acquisition periodically until a Stop Condition is met. The Stop Condition can either be a function of number of triggers (trigger X times then stop) or of time (trigger periodically for X seconds then stop); see figure 4-43.

Hot Key: CTRL + F5.

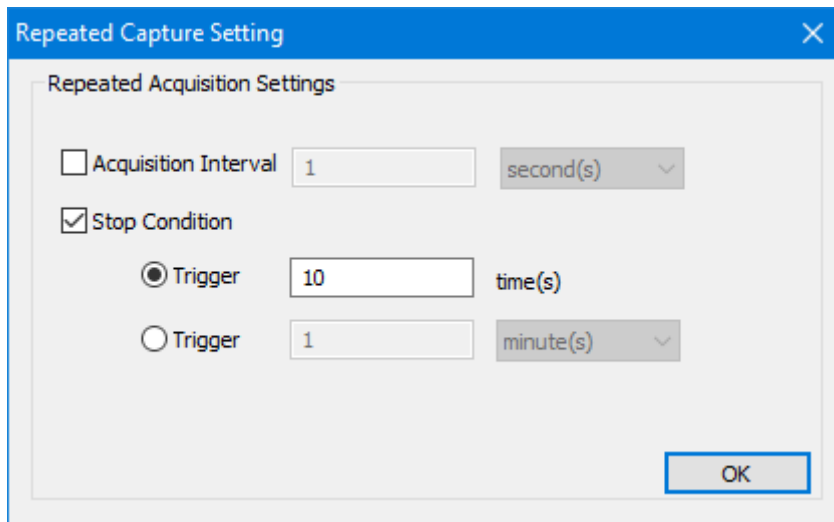


Figure 4-42 Repeated Capture dialog box

| Item | Description |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Acquisition Interval | Choose how often acquisition should restart. The available intervals are: 1-2,592,000 seconds, 1-43,200 minutes, 1-720 hours or 1-30 days; it is 1 second by default. |
| Stop Condition | |
| (Number of times) | Choose the number of times the acquisition should be restarted. LAP-C Pro will then restart acquisitions until the limit is reached. 1-65,536 times is available; 10 times is the default option. |
| (Time) | Choose how long (in time) the acquisitions should be restarted. LAP-C Pro will then restart acquisitions until the limit is reached. The available time limits are: 1-2,592,000 seconds, 1-43,200 minutes, 1-720 hours and 1-30 days. |

Table 4:26 Repeated Capture dialog box description



4.25. Stop

Stop an ongoing acquisition. The user can choose between two different software behaviors when pressing Stop.

- Show the previous (complete) acquisition
- Show the newly acquired data

Switch between the two alternatives in the General Settings.

4.26. Autocapture

The Autocapture is similar to the Single Capture (chapter 4.23), but the optimal sample rate is auto detected by the software.

Analysis

Press ALT + D to open this Main Menu item with the keyboard.

4.27. Menu Layout

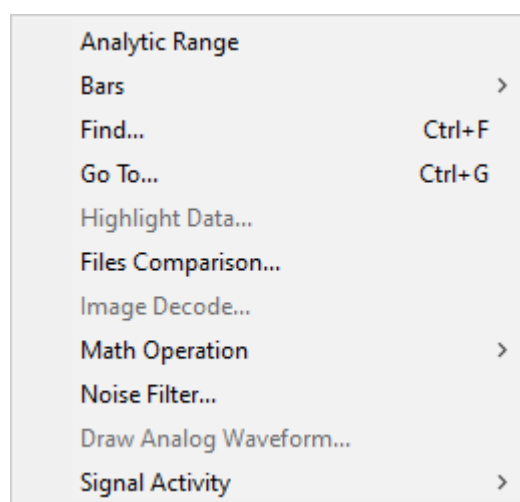


Figure 4-43 Analysis drop-down menu



4.28. Active Range

Adjust the analysis range by adjusting the position of the so-called Ds and Dp bars. The Ds-bar marks the beginning of the active range and the Dp-bar marks the end. The Active Range is used to reduce the size of acquisitions by hiding parts of the acquired data. This can be useful for navigation, reducing file sizes etc. These bars are locked whenever the user has not entered the Active Range.

NOTE Adjusting the Active Range will hide – not delete – data.

4.29. Bars

The ZP-Logic Waveform / State List areas come with 5 standard bars (these are sometimes referred to as Cursors). The bars delimit the analysis range and facilitate navigation and observation. The five standard bars are described in Table 4:2728.

| Bar | Description |
|--------|--------------------------------------------------------------------------------------------------------------------------------------|
| Ds bar | Demarks the beginning of the buffer data area; use the Active Range function to adjust its position. |
| Dp bar | Demarks the end of the buffer data area; use the Active Range function to adjust its position. |
| T-bar | The T-bar marks the trigger event. Press T to center the waveform view on the T-bar. |
| A-bar | Default bar intended for navigation and measurement that the user can move freely. Press A to center the waveform view on the A-bar. |
| B-bar | Default bar intended for navigation and measurement that the user can move freely. Press B to center the waveform view on the B-bar. |

Table 4:27 Description of the five standard bars

4.29.1. Add

Users can insert up to 250 additional bars. When adding a bar the user can select color and where it should be positioned (in time). The bars will automatically be named A0-A9, B0-B9 etc. User comments can be added to the bars after addition; see Figure 4-77.



Note that there is a second way to add bars: In pointer mode (see 4.44.1), move the cursor to the very left part of the waveform. The pointer will convert to a plus symbol and when left-clicking a bar will be added.

4.29.2. Reposition

Move a bar; the bar's new position will depend on how the user enters the reposition dialog box:

- If the user accesses the function from the Main Menu, the chosen bar will be placed at the center of the waveform area.
- If the user accesses the reposition dialog box by right-clicking in the waveform area, the chosen bar will be moved to where the user clicked.

NOTE The T-bar cannot be moved and the Ds- and Dp-bars can only be moved using the Active Range function; see chapter 4.28.

NOTE Users can also center the waveform on a bar by means of keyboard shortcuts. This is not the same as repositioning the bar. To center the display on the T-bar press T and correspondingly for the A- and B-bars. To focus on user defined bars use the number keys. To focus on for example the D1-bar, press 1 four time.

4.29.3. Delete

Any bar that is not a standard bar can be deleted.

4.30. Find

Post acquisition, Find is used to look up events that satisfy a set of user-defined conditions. There are Advanced Find and Easy Find. Find the data in the Find Results Windows. see Figure 4-45 or see chapter 4.57.

Hot Key: CTRL + F.

Press **CTRL + →** to move to the next event that satisfies the Find conditions and **CTRL + ←** move to the previous event.

➤ **Easy Find**

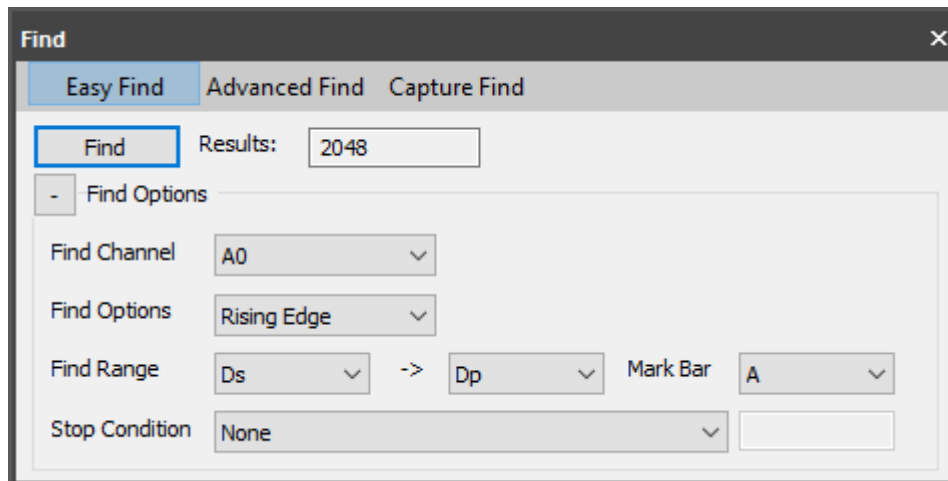


Figure 4-44 Easy Find dialog box

| Item | Description |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Find | |
| Results | Count the number of events within the Find Range that meet the condition set. |
| Easy Find | |
| Find Channel | Choose the need to find the channel, bus or Protocol Decoder. |
| Find Options | Set corresponding bus/channel search conditions, channel choice: Rising Edge and Falling Edge or Either Edge.. Bus condition can choose "None", "=", ">", "<", "Series", select "None" can facilitate statistics the packet number and find specific packets. Choosing "=", ">", "<", edit box to the input value. When choosing condition "Series", users can input continuous data as the find condition. |
| Find Range | Set to find the range of data. |
| Mark Bar | Mark event that meets the Find condition set with a bar; the A-bar is the default bar. |
| Stop Condition | There are three options for stopping the lookup and the current recording when the stop condition is established. None. Stop searching and recording when finding out the specified data. Stop searching and recording after finding out the specified number data. |

Table 4:28 Easy Find dialog box description

➤ *Advanced Find*

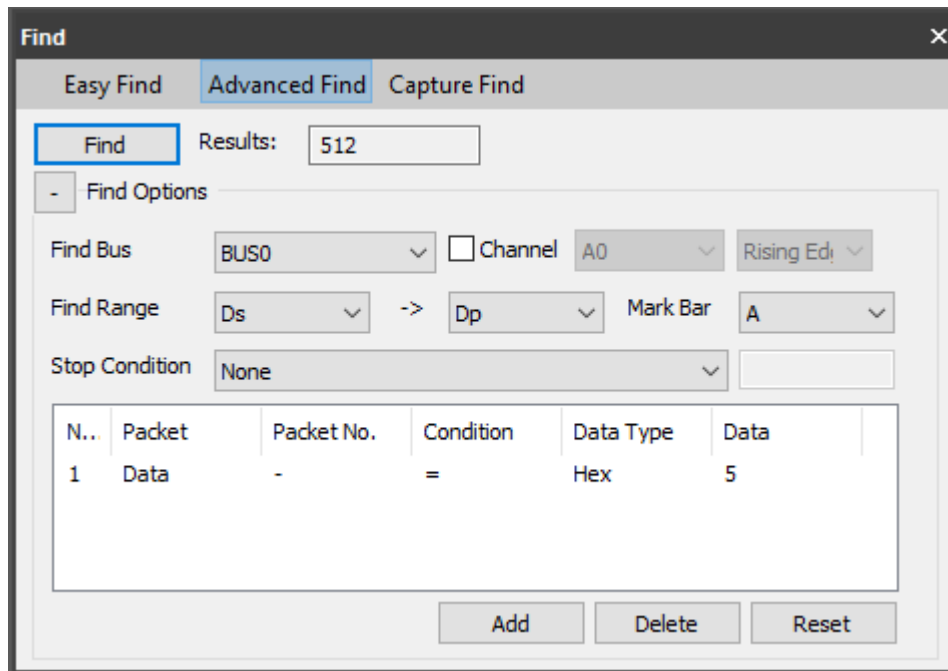


Figure 4-45 Advanced Find dialog box

| Item | Description |
|----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Find | |
| Results | Count the number of events within the Find Range that meet the condition set. |
| Advanced Find | |
| Find Channel | Choose the need to find bus or Protocol Decoder. |
| Find Range | Set to find the range of data. |
| Mark Bar | Mark event that meets the Find condition set with a bar; the A-bar is the default bar. |
| No. | Condition number. Set one or more conditions to find. Meet the conditions in order if two or more conditions. |
| Type | Find type, select “Don’t care” or “Packet”. “Don’t care” will ignore Packet name and other items. “Packet” follows setting items. |
| Packet Name | Select the packet name to find. |
| Packet No. | Input packet number in bus packets of each transmission when Packet Name is the packets of numerical type(e.g. Data). Default “-” with unspecified packet number. For example, Input 5 to packet No., that will find fifth Data packet in each signal. |
| Data Type | Data form to show with “Data”. Hexadecimal or Binary. |



Data Input the value for numerical packets, “x” is for arbitrary value.

Table 4:29 Advanced Find dialog box description

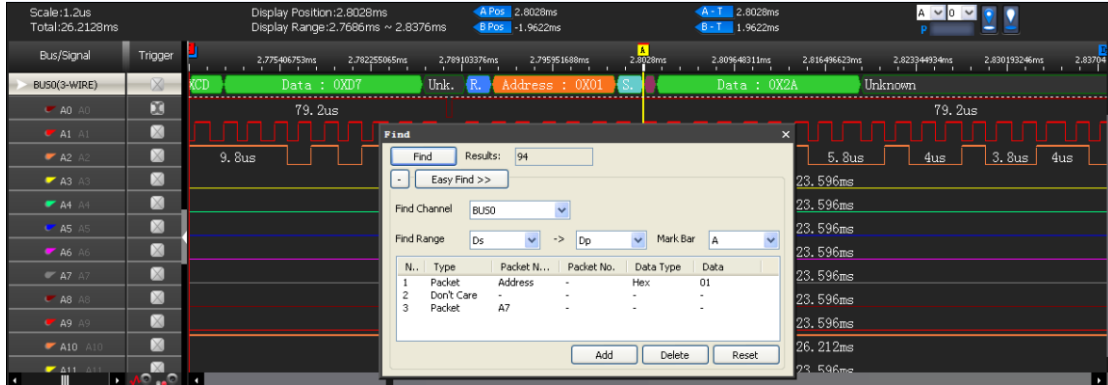


Figure 4-46 Advanced Find examples show

4.31. Go To

The Go To function is used to find and navigate to a bar or a Memory Page; see the dialog box in figure 4-48.

Hot Key: CTRL + G.

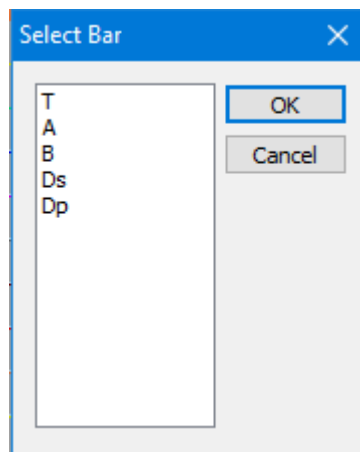


Figure 4-47 Go To dialog box

To go to a bar, select one from the drop-down menu. The waveform area will center on the selected bar. If there are several bars of type A (A0, A1, A2 etc) then click next to move from one bar to the next. The A-bar is the default choice.



It is also possible to go to a page (read about ZP-Logic's pagination in Table 4:6). Input a page number and click Go To to move to the page. In Figure 4-48 the user has used the Go To dialog box to move to page 3 as indicated by the red frame on the page bar in the upper left corner.

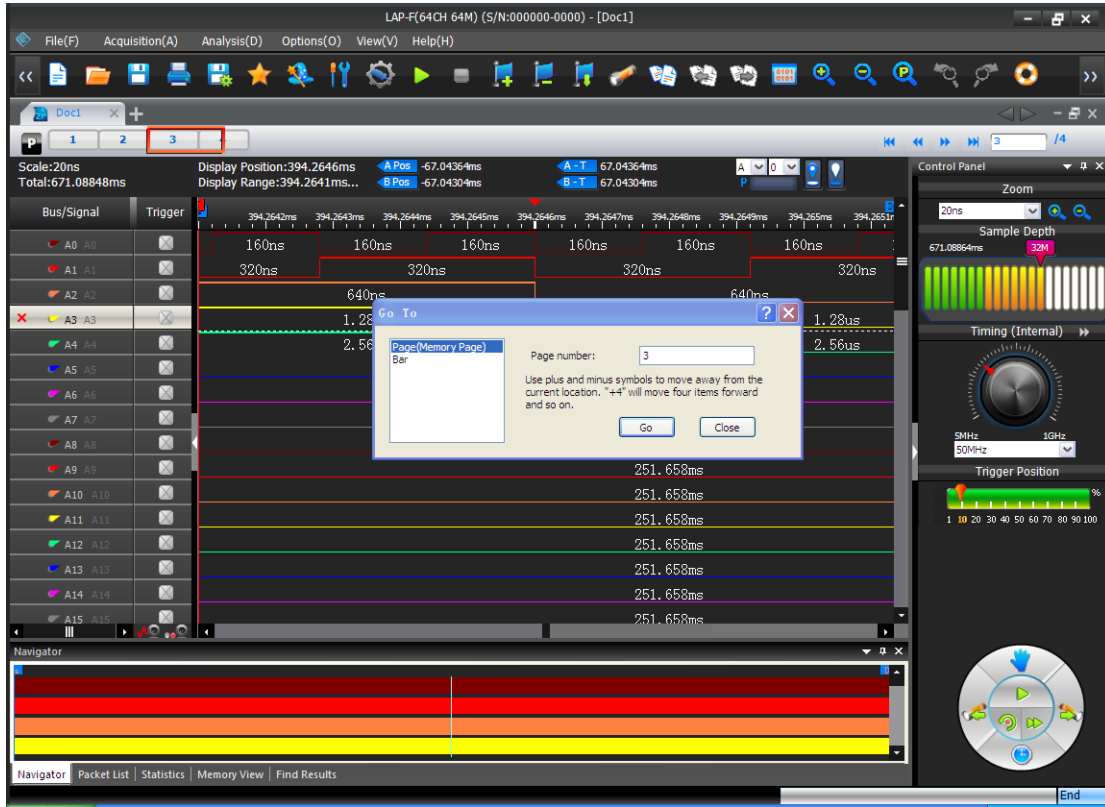


Figure 4-48 Go To example; the File bar shows that page 3 is shown

4.32. Highlight Data

Highlight Data colors data that satisfies a user-defined condition to make them stand out. See the dialog box in Figure 4-49. must be used after the add bus.

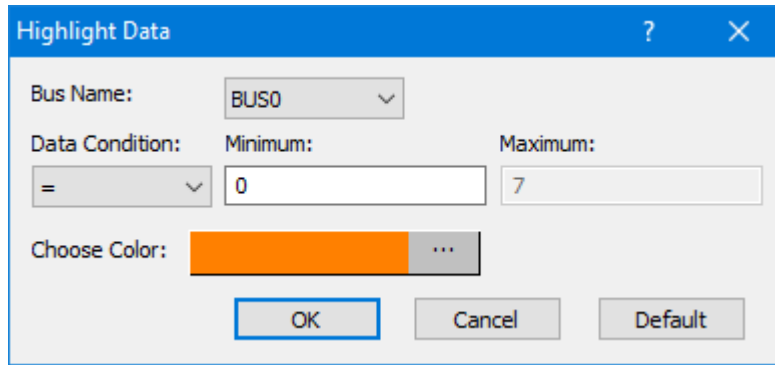


Figure 4-49 Highlight Data dialog box

| Item | Description |
|-----------------|---------------------------------------------------------------------------------------------|
| Bus Name | Select which bus the function should focus on. |
| Condition | Select a condition among =, !=, <i>In Range</i> and <i>Not In Range</i> ; = is the default. |
| Value / Minimum | Input the value that is to be met. |
| Maximum | Input the maximum value (used for <i>Range/Not in range</i> only). |
| Choose Color | Data that meet the condition are highlighted with the selected color. |

Table 4:30 Highlight Data dialog box description

Figure 4-50 shows what how the Highlight Data function works. In the example, the conditions established in Figure 4-49 are used: The data belongs to BUS0 and are equal to zero. This are highlighted with an orange color. Had the function not been used, these data would have had the same white background color as the neighboring 0X1 data.

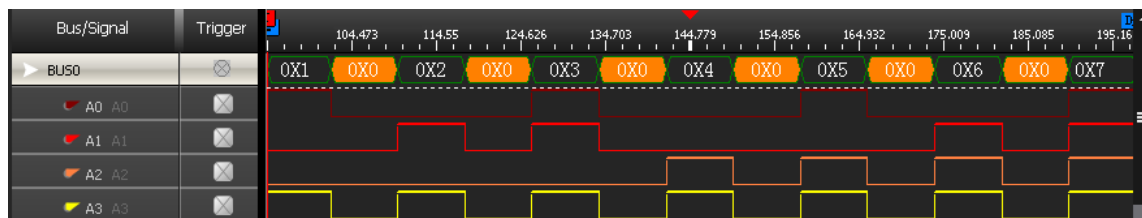


Figure 4-50 Highlight Data example; packets with Data Min = 0 are orange



4.33. Files Comparison

Files Comparison examines how and where two files differ from each other. The number of differences between the two files is listed channel by channel in the dialog box, and new, curly traces in the waveform area evidence where the two signals differ; see an example in figure 4-53.

Figure 4-51 shows the Files Comparison dialog box and the result of a data comparison of two files in table format; the two files display a large number of differences.

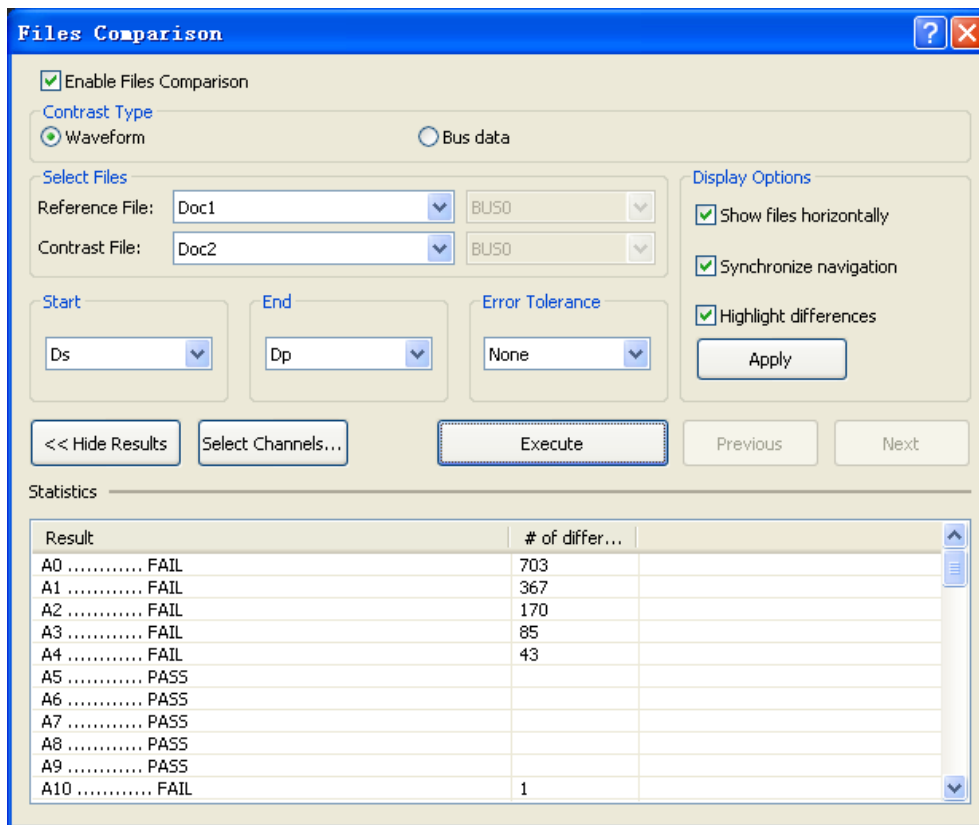


Figure 4-51 Files Comparison dialog box

| Item | Description |
|----------------------|-------------------------------------------------------------------------|
| Contrast Type | |
| Waveform | Contrast the difference of waveform in two files. |
| Bus Data | Contrast the difference of bus data in two files. |
| Select Files | |
| Reference File | Select a file. Note that only open files can be chosen. Only open files |



are available.

Contrast File Select the file that is to be compared to the Reference File. When contrasting with None, the Reference File settings will be used to make an acquisition.

Settings

Start Select where to start the Files Comparison, using the reference file as base. You can also set it to ALL.

End Select where to end the Files Comparison, using the reference file as base.

Error Tolerance Define how many sample points that may differ between the two files before ZP-Logic regards the two files as unequal; 0-10 samples can be chosen (the default is 0).

Display Options

Show files horizontally Display the two files horizontally; unchecked by default.

Synchronize navigation Synchronize panning across the two files. This option is unchecked by default and only available if "Show files horizontally" is checked.

Highlight differences Mark the different waveforms with red wavy lines, the default is not selected.

Apply Make changes effective.

Hide/Unhide Results Hide/Unhide the Results area.

Select Channels Select the channels to be contrasted. At least one must be chosen; by default all are selected.

Execute Perform the Files Comparison. Note that this function needs to pre-process a temporary file; see note in chapter 4.6.

Statistics

Results Display the status of channels contrast, PASS means the data in the channel is identical for the two files and FAIL means the data is different.

of differences The column shows the number of differences between the two files for each channel.

Navigation

Previous Go to the previous difference between the two files.

Next Go to the next difference between the two files.

Table 4:31 Files Comparison dialog box description

The reference file and the contrast file are displayed horizontally in the waveform area. New, orange, wavy traces ~~~~~ (one for each channel) in the lower window show where the two files differ. The orange waves marking the differences can be discerned in the lower waveform area in figure 4-53.



Figure 4-52 Files Comparison ex; differences marked in the lower window

4.34. Image Decode

The Image Decode function is specially designed for display type protocols such as CMOS Image, 7-SEGMENT LED, LCD12864, LCD1602 etc. Captured data that are decoded with one of the supported protocols are decoded and displayed as the original picture. This makes for a painless and straightforward verification of the data being correct or not. See figure 4-54 for an example of the function's output.

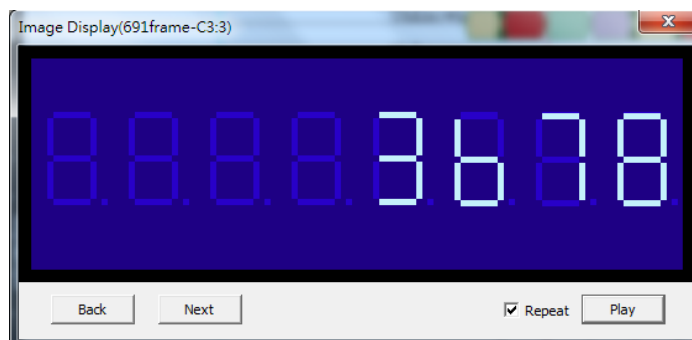


Figure 4-53 Image Decode for 7-Segment LED



The Image Decode function supports the following protocols:

- 7-Segment LED
- CCIR
- CMOS Image
- DM114/115
- DMX512
- LCD12864
- LCD1602
- LED Pitch Array
- LG4572
- CCIR601

Note that it's necessary to focus on the correct bus for the Image Decode function to be unlocked.

4.35. Math Operations

Create a new trace by performing a mathematical operation on two existing signals.

4.35.1. Arithmetic Operation

Using the Arithmetic operation function users can create a new signal through one the following arithmetic operations: Add, Subtract, Multiply or Divide.

ZP-Logic only accepts the creation of one arithmetic trace at a time.

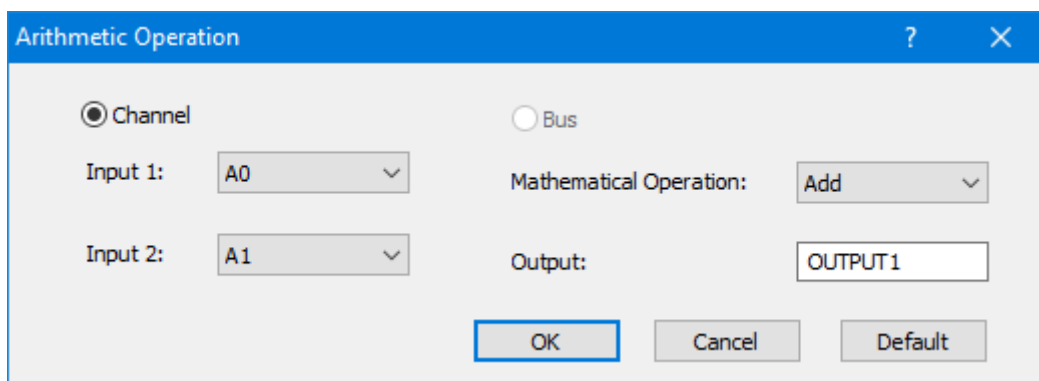


Figure 4-54 Arithmetic operation dialog box

| Item | Description |
|-------------|--------------------------------------------------------------------------|
| Channel/Bus | Choose to perform the operation on signals or buses (at least two buses) |

| | |
|-------------|--------------------------------------------------------------------------------|
| | must exist for this option to open). |
| Input 1 | Select a signal. |
| Input 2 | Select a signal to be joined with the first one using the arithmetic operator. |
| Operation | The available arithmetic operations are: Add, Subtract, Multiply and Divide. |
| Output Name | Input a name for the resulting trace. |

Table 4:32 Arithmetic operation dialog box description

Figure 4-55 shows the resulting trace from an ADD operation on signals A0 and A1.

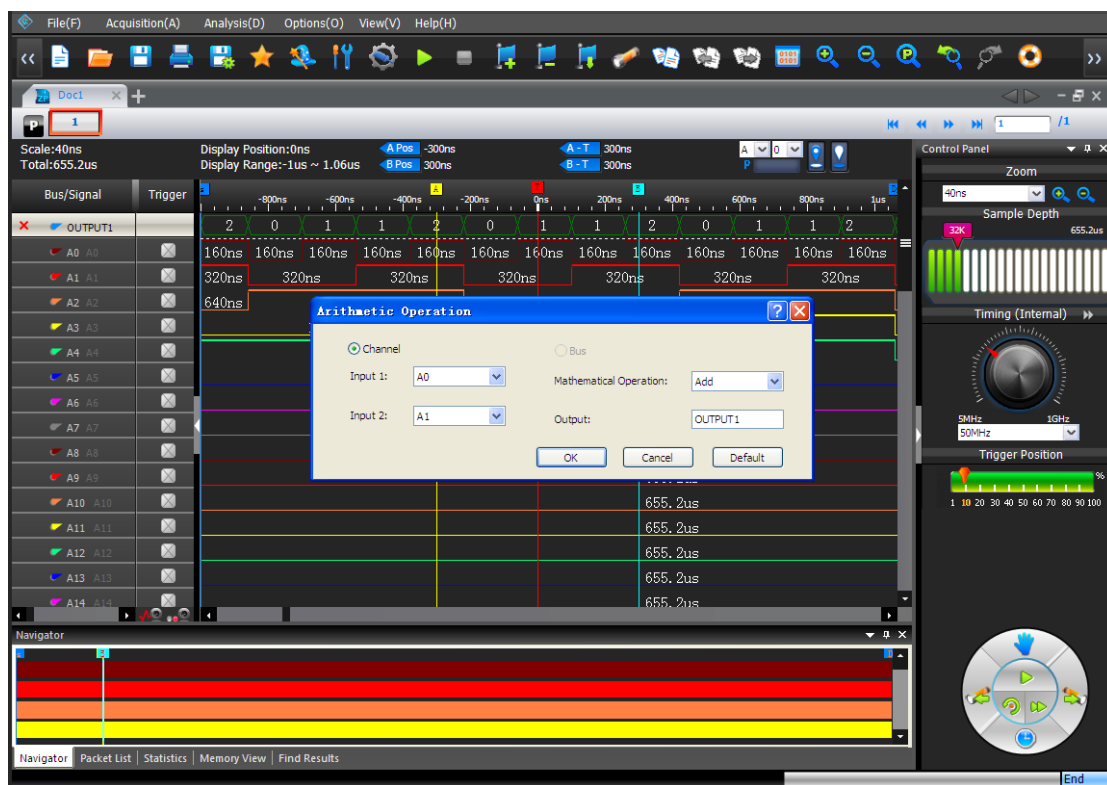


Figure 4-55 Arithmetic operation example; ADD A0 and A1

4.35.2. Boolean Operation

With the Boolean operation, users can create a new signal using one of the Boolean operators; see Figure 4-56.

Note that an Arithmetic operation can also be performed on buses, granted that at least two buses have been created. However, ZP-Logic only accepts the creation of one Boolean trace at a time.

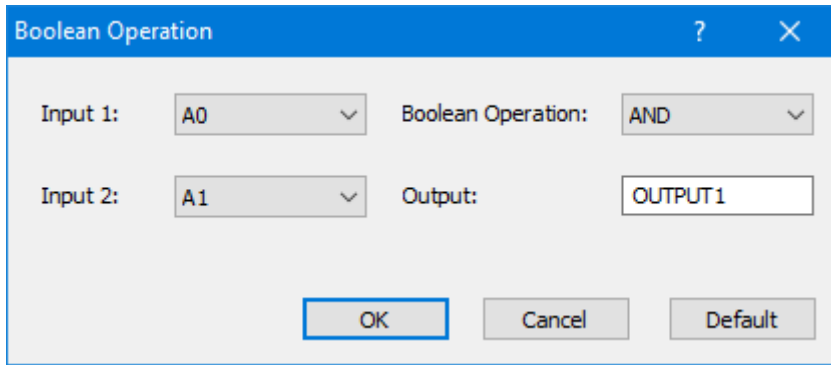


Figure 4-56 Boolean Operation dialog box

| Item | Description |
|------------------|-------------------------------------------------------------------------------------------------------------------------|
| Input 1 | Select a signal. |
| Input 2 | Select as second signal to be XX to the first one. |
| Boolean Operator | The available Boolean operators are: AND, OR, NAND, NOR, XOR, XNOR and NOT. NOT takes only one argument and inverts it. |
| Output Name | Input a name for the resulting trace. |

Table 4:33 Boolean Operation dialog box description

Figure 4-57 shows a trace created from signals A0 and A1 using the Boolean operator AND.

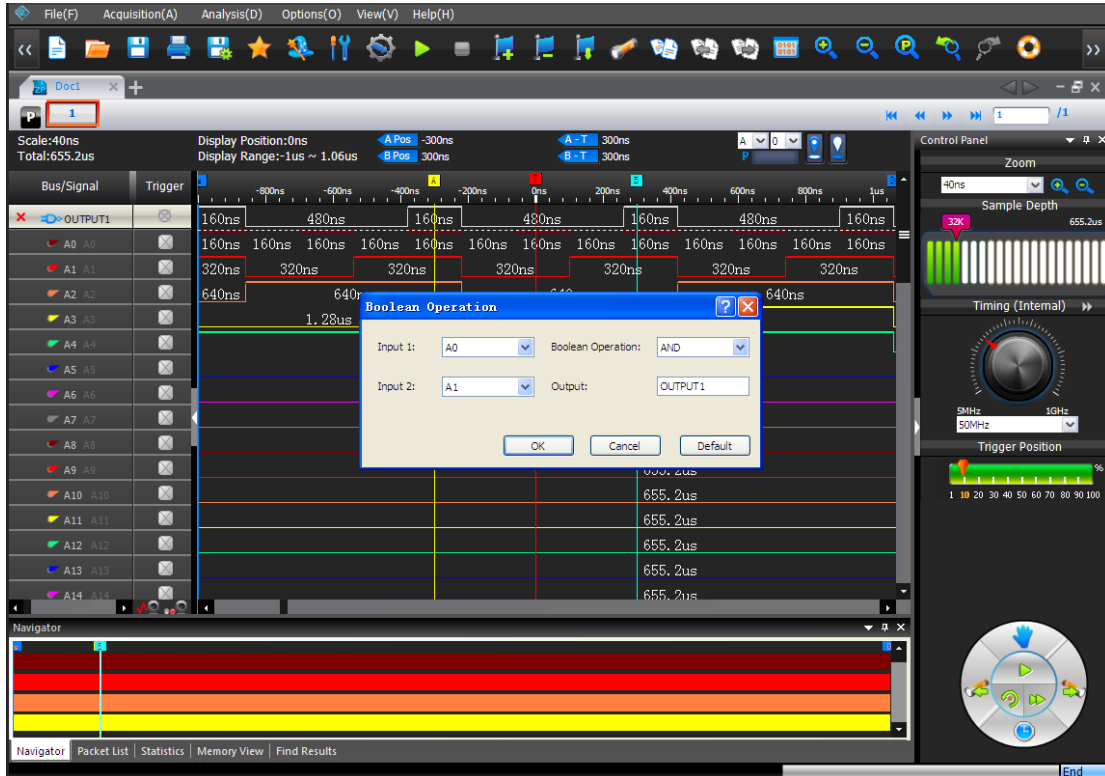


Figure 4-57 Boolean waveform example: A0 AND A1

4.36. Noise Filter

The Noise Filter is used to filter out short-lasting pulses or dips in signals that the user considers to be noise; see the dialog box in Figure 4-58.

After activating the Noise Filter, users select one or more channels to be filtered and move them to the right column using the right-pointing arrows. To select two or more channels at the same time, use the CTRL and SHIFT keys.

Once a channel is in the right column, the user can choose just how short pulses/dips in the signal of that channel have to be to be filtered out. Lengths are measured in sample points or time.

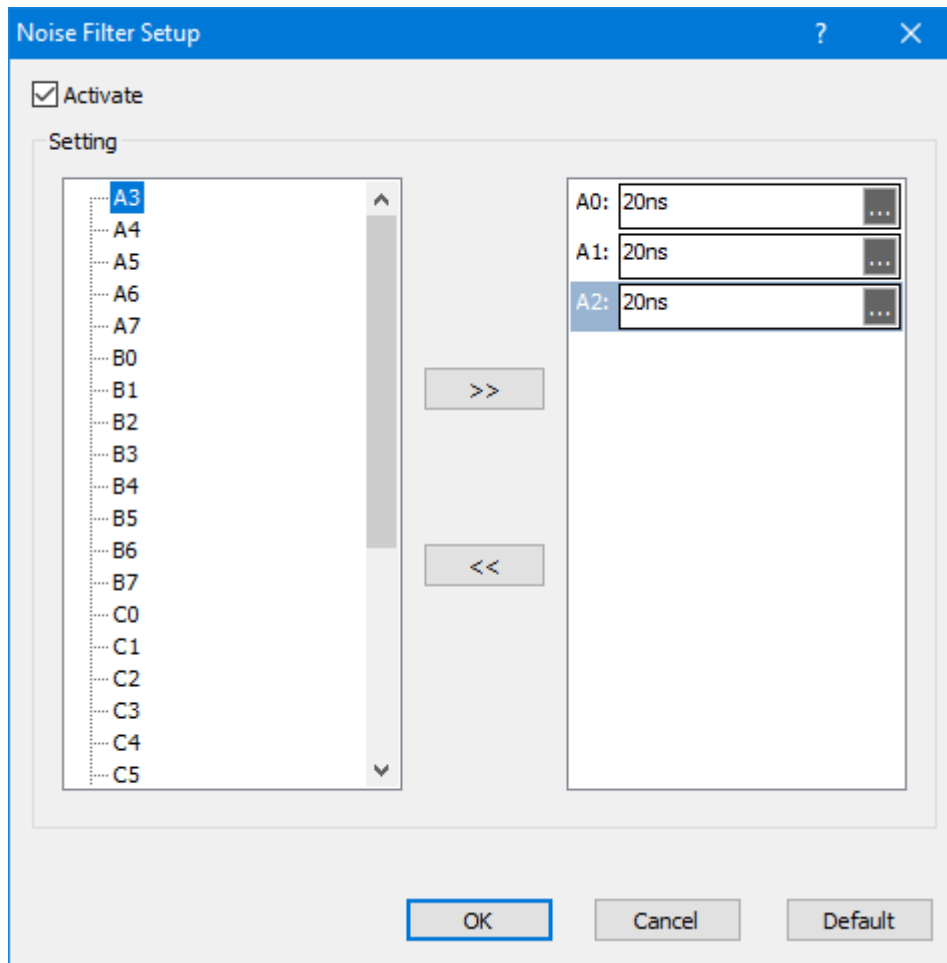


Figure 4-58 Noise Filter dialog box

4.37. Draw Analog Waveform

The Draw Analog Waveform function is used to plot traces based on the value of bus data. It is especially useful for data that can be conveniently displayed visually, such as an ADC output represented by a sine wave. The function is available for simple buses (no packets); see the setup dialog box in Figure 4-59.

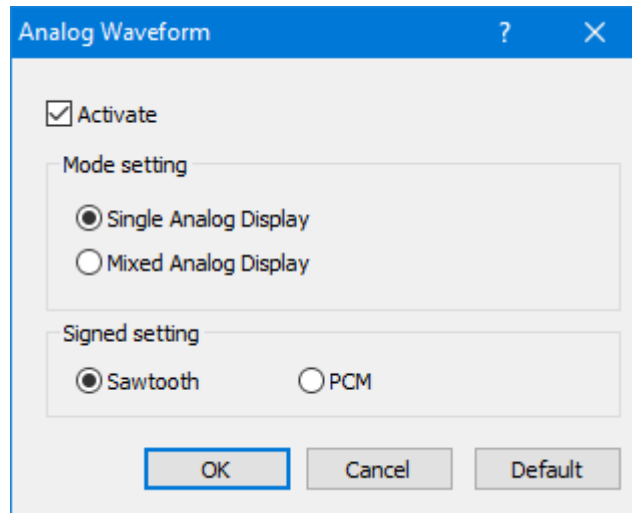


Figure 4-59 Draw Analog Waveform dialog box

| Item | Description |
|-----------------------|------------------------------------------------------------------|
| Mode Setting | |
| Single Analog Display | Draw the analog waveform on a dedicated channel; default option. |
| Mixed Analog Display | Show the drawing on top of the traces its based on. |
| Signed Setting | |
| Unsigned | Binary data are read as unsigned; default option. |
| Signed | Binary data are read as signed. |

Table 4:34 Draw Analog Waveform dialog box description

Figure 4-60 shows a simple example output based on four signals changing state on regular intervals (signals A0 in dark red to A4 in green are used in the example).

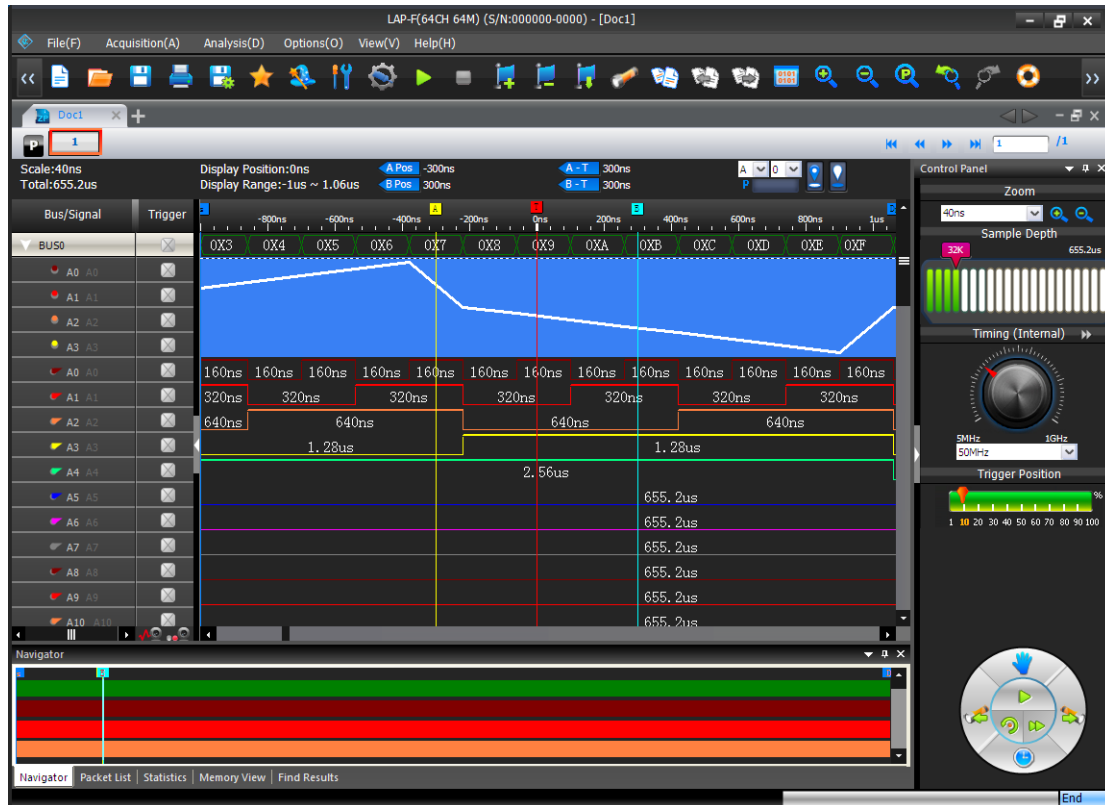


Figure 4-60 Draw Analog Waveform example

4.38. Signal Activity

Signal Activity offers the user real-time views of what the probes are seeing. Two modes are available; Real-time Frequencies and Signal Status. By means of these functions the LAP-F1 monitors signal frequencies and states, thus assuming the function of a frequency counter and that of a logic pen.

4.38.1. Real-time Frequencies

Real-time frequencies of all channels as measured by the probes are shown; see Figure 4-61. The frequencies are updated twice per second.

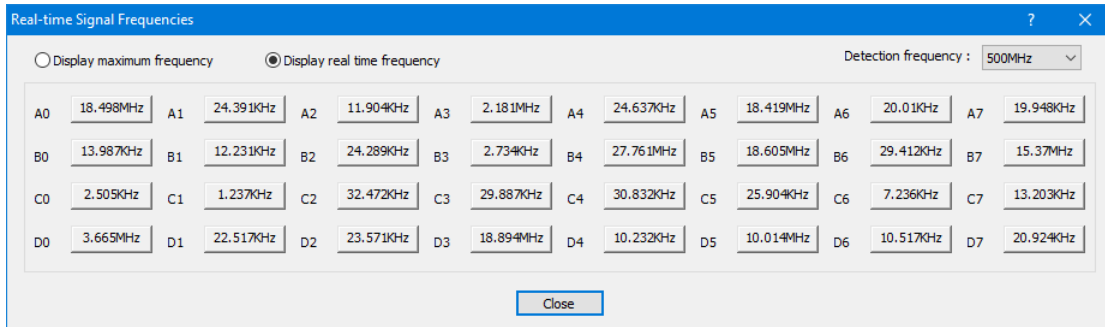


Figure 4-61 Real-time frequencies window

NOTE Other operations cannot be performed when the Real-time Frequencies window is open. Also, at least two periods must be captured for the function to work.

4.38.2. Signal Statuses

The Signal Statuses window shows another view of the probe activity; traffic lights indicate if channel signals are High (green light), Low (red) or transitioning (yellow); see Figure 4-62.

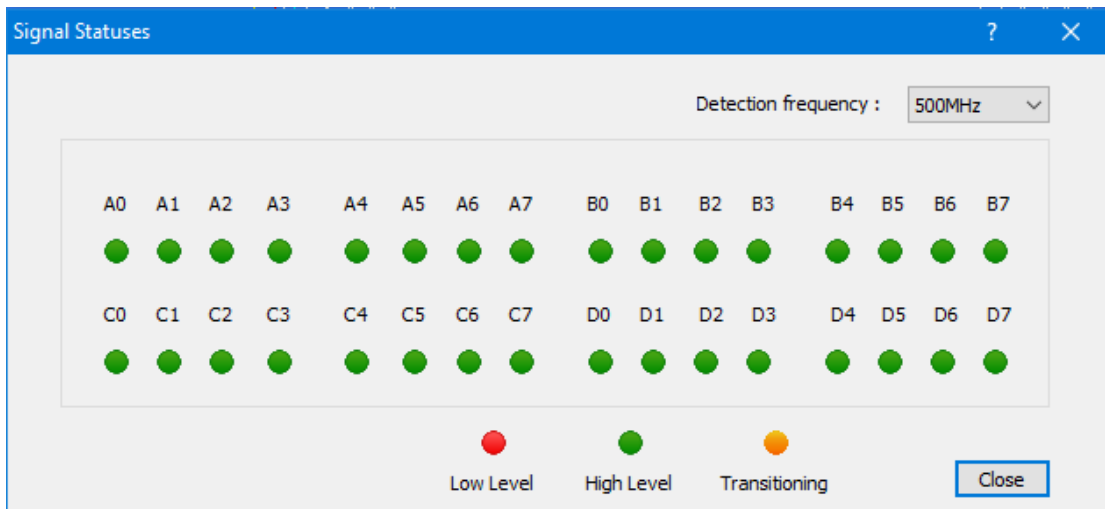


Figure 4-62 Signal Statuses window



Options

Press ALT + O to open this Main Menu item with the keyboard.

4.39. Menu Layout

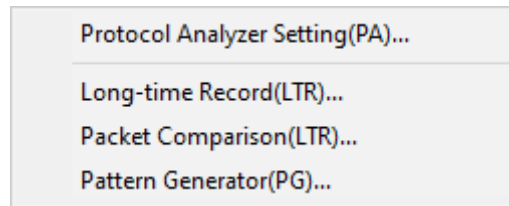


Figure 4-63 Options drop-down menu

4.40. Protocol Analyzer Setting

This optional function is available for the LAP-C Pro.

The Protocol Analyzer Setting (PA) function lets the user stream data directly to the computer over USB3.0, thus allowing much longer acquisitions than during normal operations when the samples are stored in the LAP-C Pro's internal memory. The PA function is perfect for, as an example, burn-in tests. The maximum length of the acquisition depends on the acquisition rate, the number of channel sampled, and the available memory. Post acquisition, the user can search for patterns in the acquired data.

A relatively powerful PC is required to run the PA function flawlessly. See Table 4:38 for the recommended PC setup.

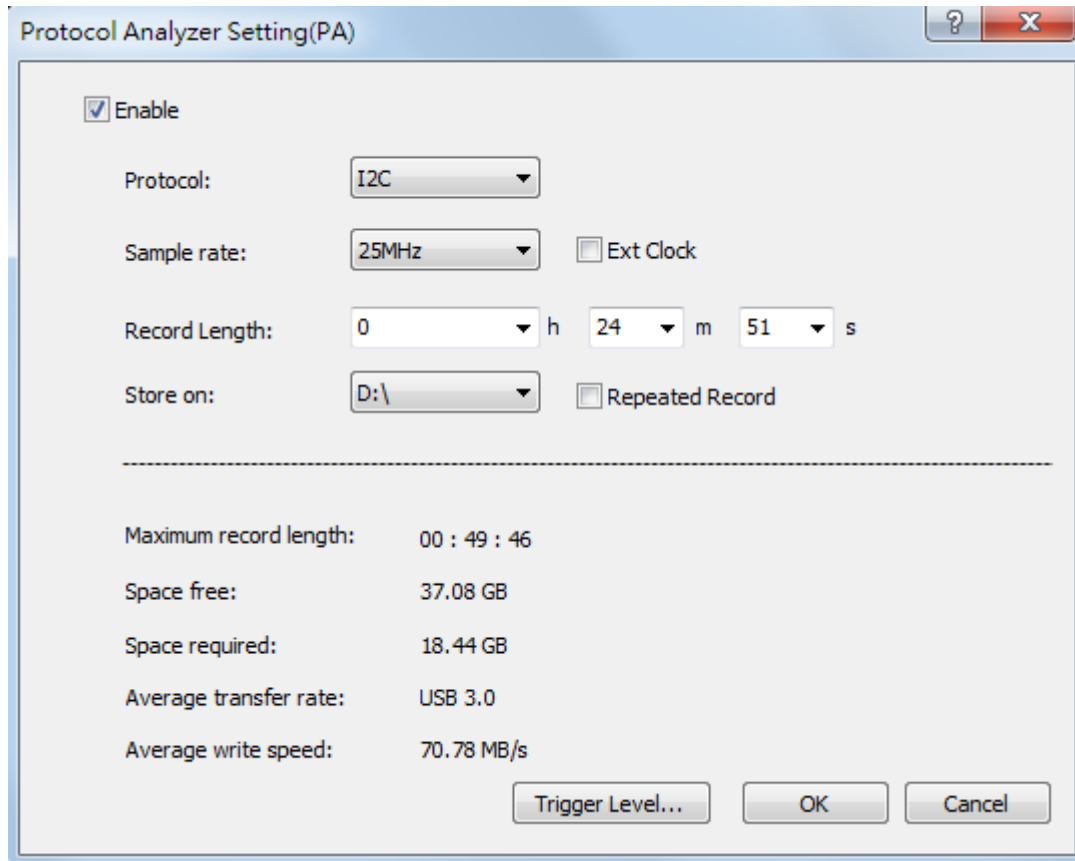


Figure 4-64 Protocol Analyzer dialog box

| Item | Description |
|-----------------------|------------------------------------------------------------------------------------------|
| Protocol | Choose I2C, SPI, UART. |
| Sample rate | How often samples are acquired. |
| Record Length | How long the Logic analyzer should acquire data. |
| Store on | Location of stored samples. |
| Repeated Record | Acquire repeatedly data until press cancel. |
| Maximum record length | It is calculated by the number of channel, sampling frequency and disk space. |
| Space free | Show the remaining space to record for selected disk. |
| Space required | Estimate the disk space required for the recording. |
| Average transfer rate | Connected with Logic analyzer and enable LTR, check the USB transfer rate automatically. |
| Average write speed | Enable LTR and change the recorded disk, check the speed of writing disk. |

Table 4:35 Protocol Analyzer dialog box

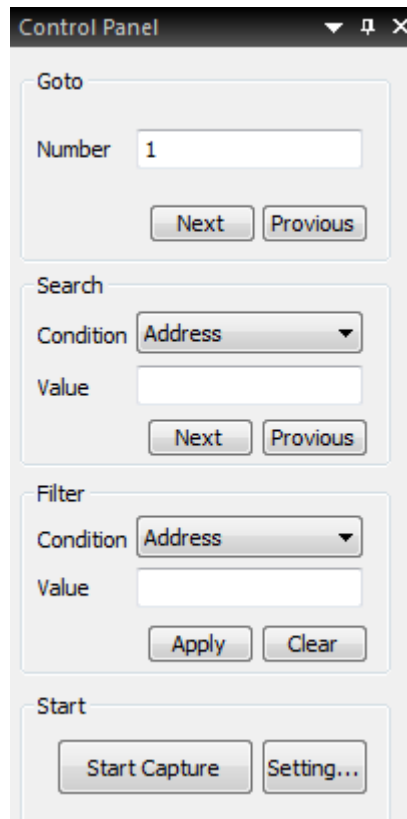


Figure 4-65 Protocol Analyzer Control Panel

| Item | Description |
|---------------|-----------------------------------------------------|
| Goto | Jump to the packet row of the set value. |
| Search | Calculate the number equal to the condition value. |
| Filter | Only display packets with the same condition value. |
| Start Capture | Start recording. |
| Setting | Protocol decoding settings. |

Table 4:36 Protocol Analyzer Control Panel description

4.41. Long-time Record

This optional function is available for the LAP-C Pro.

The Long-time Record (LTR) function lets the user stream data directly to the computer over USB3.0, thus allowing much longer acquisitions than during normal operations when the samples are stored in the LAP-C Pro's internal memory. The LTR function is perfect for, as an example, burn-in tests. The maximum length of the acquisition depends on the acquisition rate, the number of channel sampled, and

the available memory. Post acquisition, the user can search for patterns in the acquired data.

A relatively powerful PC is required to run the LTR function flawlessly. See Table 4:38 for the recommended PC setup.

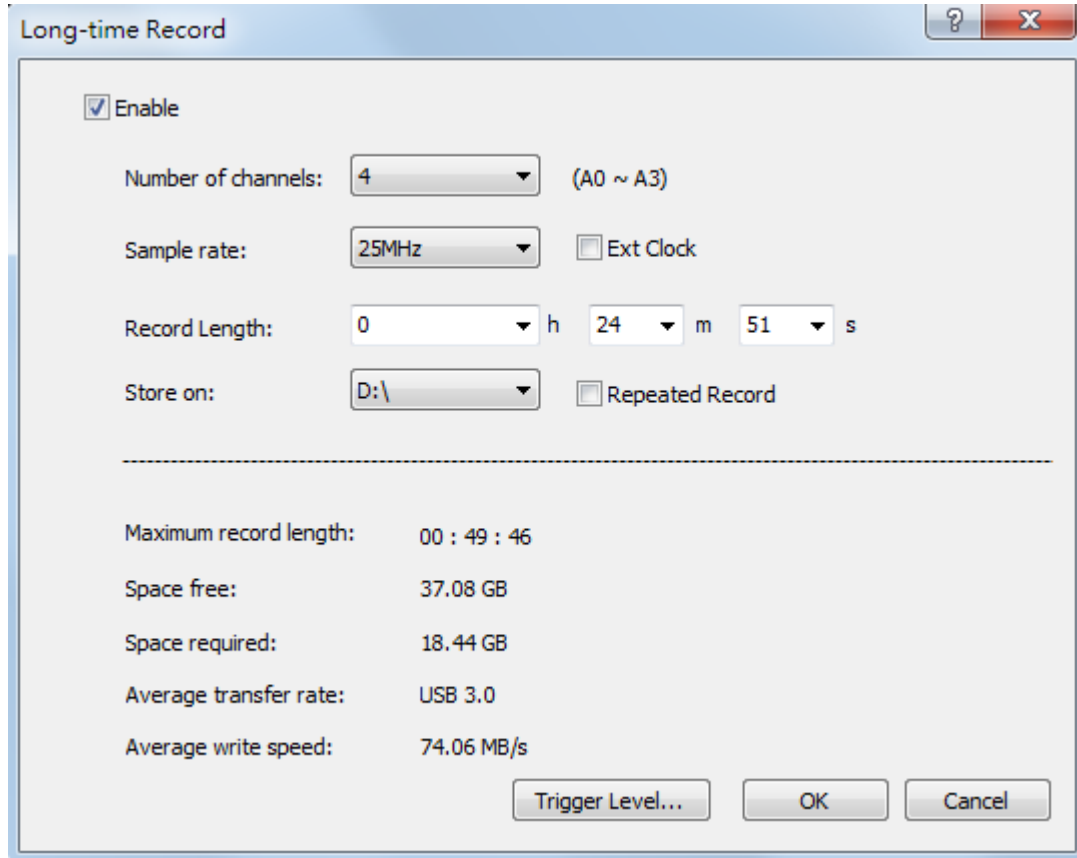


Figure 4-66 Long-time Record dialog box

| Item | Description |
|-----------------------|-------------------------------------------------------------------------------|
| Number of channels | Signals to be acquired. |
| Sample rate | How often samples are acquired. |
| Record Length | How long the Logic analyzer should acquire data. |
| Store on | Location of stored samples. |
| Repeated Record | Acquire repeatedly data until press cancel. |
| Maximum record length | It is calculated by the number of channel, sampling frequency and disk space. |
| Space free | Show the remaining space to record for selected disk. |
| Space required | Estimate the disk space required for the recording. |
| Average transfer rate | Connected with Logic analyzer and enable LTR, check |



the USB transfer rate automatically.

Average write speed

Enable LTR and change the recorded disk, check the speed of writing disk.

Table 4:37 Long-time Record dialog box

| Item | Description |
|-------------|------------------------------------------------|
| Motherboard | MSI H97M-E35 |
| CPU | Intel i5-4460 3.2g |
| RAM | Kingston KVR16N11/8 |
| HDD | Toshiba DT01ACA100 * 1, Toshiba DT01ACA200 * 4 |
| DVD | ASUS DRW-24D3ST |
| Power | Cooltek 400 YM-ATX400 |

Table 4:38 Standard PC requirements for the LTR function

NOTE While running the LTR function it is recommended that the PC is not used for anything else.

Enable LTR, software add the button “Go to the timestamp”, click the button in the red box as followed figure, and bring up the setting dialog can input the timestamp need to go to.

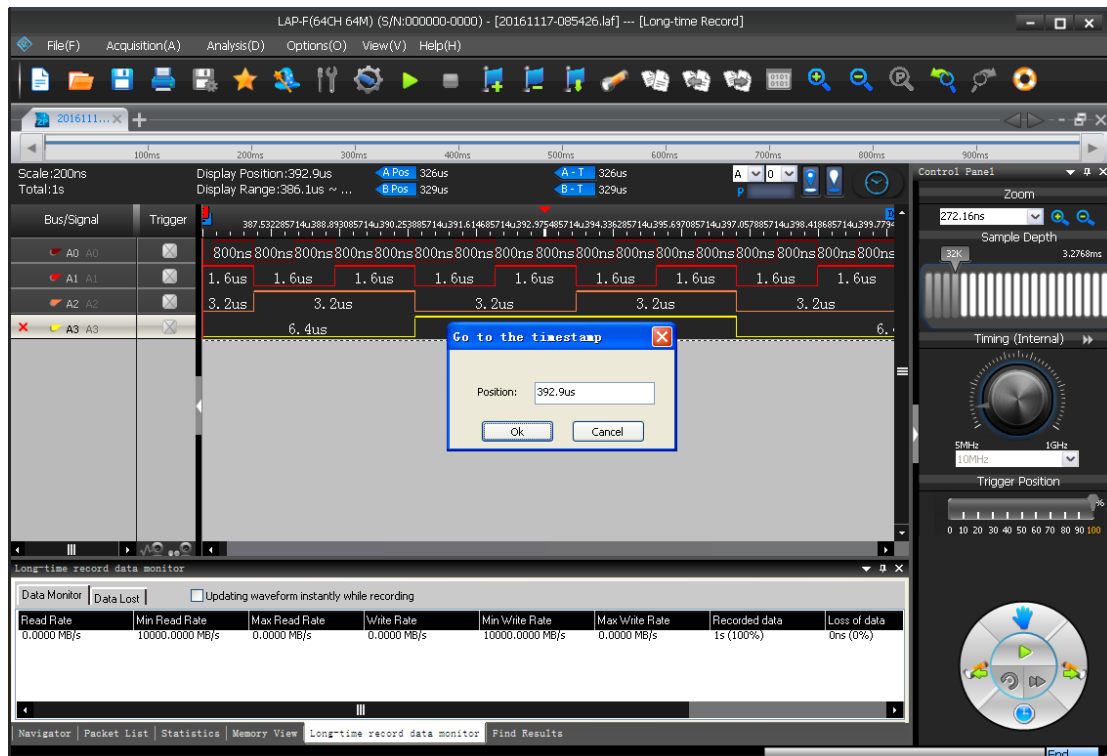


Figure 4-67 LTR Go to the timestamp dialog box

4.42. Pattern Generator

The signal generator generates digital signals through 4 channels. Support mainstream bus and GPIO such as I2C, SPI, UART, CAN, etc. Need to import the provided Excel file.

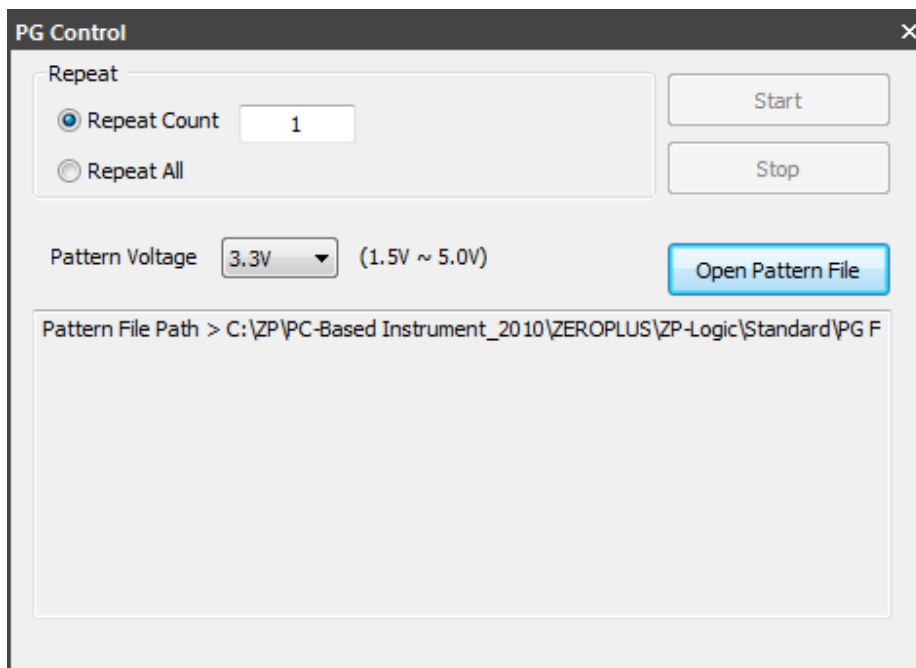


Figure 4-68 Pattern Generator dialog box

| Item | Description |
|-------------------|--------------------------------------------------------------------------------------|
| Repeat Count | Set generation times. |
| Repeat All | Continuously repeated. |
| Pattern Voltage | There are 8 levels of voltage to choose from. 1.5, 1.8, 2.1, 2.5, 2.8, 3.0, 3.3, 5V. |
| Open Pattern File | Open PG dedicated Excel file. |
| Pattern File Path | Example file path link. |

Table 4:39 Pattern Generator dialog box description



View

Press ALT + V to open this Main Menu item with the keyboard.

4.43. Menu Layout

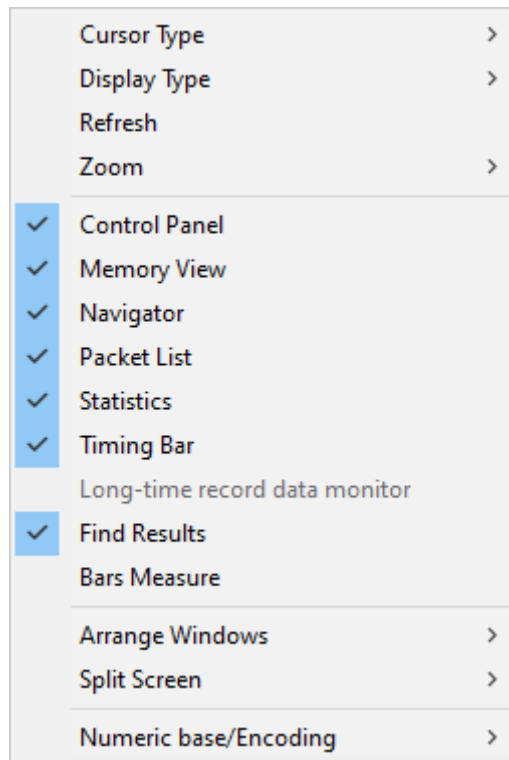


Figure 4-69 View drop-down menu

4.44. Cursor Type

The user can choose between two cursor types. Note that for both types, left/right movement in the waveform is achieved with the mouse wheel.

Hot Key: SPACE (the cursor mode changes temporarily when the user presses and holds the SPACE bar).

4.44.1. Pointer

In Pointer mode, the left mouse button is used for zooming; click and drag squares with the pointer to zoom in.



- To zoom in; form squares by dragging downwards/leftwards. The area covered by the square will be amplified to occupy the entire waveform area. In other words, form small squares to zoom in quickly.
- Zooming out is achieved by doing the opposite of zooming in; drag squares upwards/rightwards. The larger the square, the faster the zoom-out.
- To move a bar, left click on the bar name and drag sideways.

4.44.2. Hand

In Hand mode, the left mouse button is used for panning; click and hold the left mouse button to move left and write in the waveform area.

To move a bar, left click on the bar name and drag sideways.

4.45. Display Type

The menus that appear when right-clicking in the interface are found in these subchapters.

4.45.1. Waveform

In Waveform view, the state of each channel is shown as a trace that changes between high and low depending on the state of the signal. This is the default view mode.

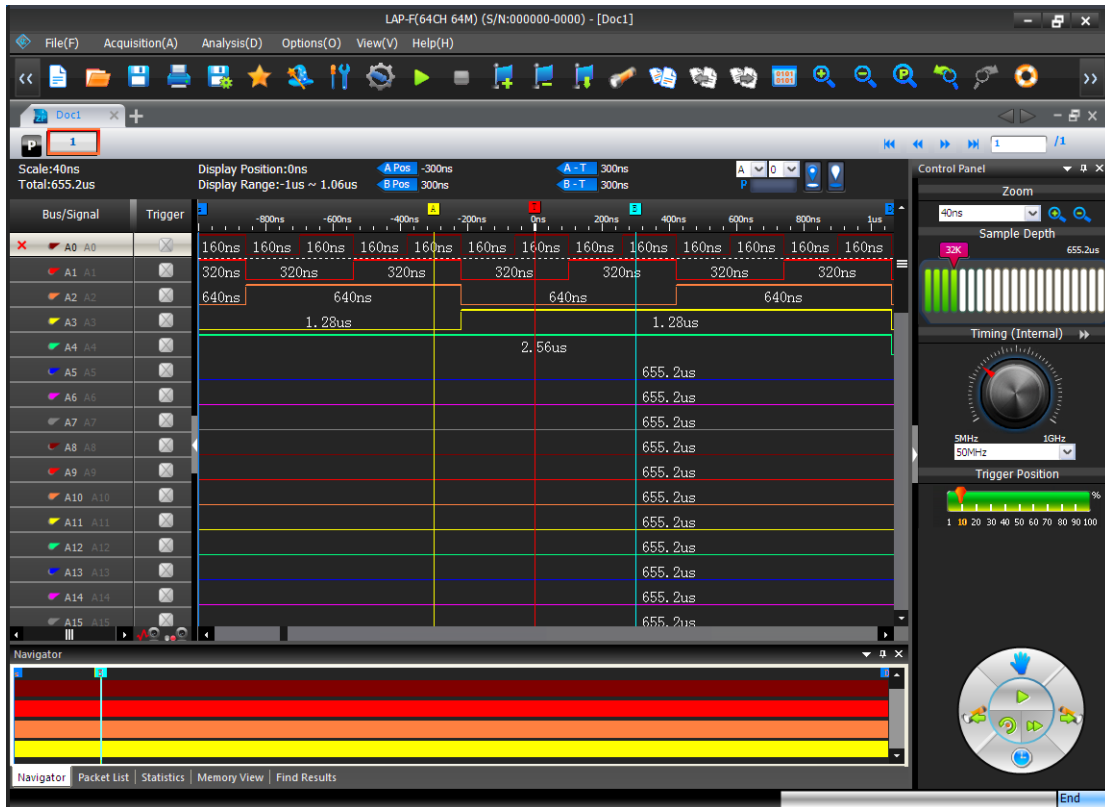


Figure 4-70 Waveform view

Figure 4-71 is shown when the user right-clicks in the trace area in Waveform View.

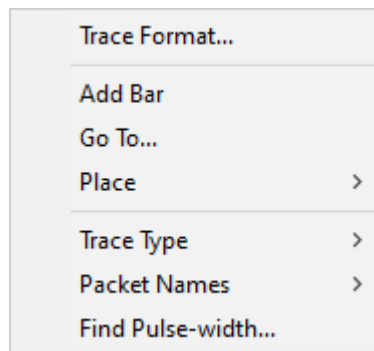


Figure 4-71 Waveform area; right-click menu

| Item | Description |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Trace Format | Change the appearance of traces, bus outlines and analog waveforms by altering their color and width. In Figure 4-80, trace A1 (in red) has been given triple weight. Notice that when right-clicking in the waveform a dotted horizontal line appear and a channel is highlighted in the channel column. This points to which trace will be modified. |

| | |
|-------------------|----------------------------------------------------------------------------------------|
| Add Bar | Add a bar; see chapter 4.29.1. |
| Go To | Go to the memory page or bar. |
| Reposition | |
| A-bar | Reposition the A-bar to the cursor location. Hot Key: SHIFT + A. |
| B-bar | Reposition the B-bar to the cursor location. Hot Key: SHIFT + B. |
| Ds-bar | Reposition the Ds-bar to the cursor location (available when Active Range is enabled). |
| Dp-bar | Reposition the Dp-bar to the cursor location (available when Active Range is enabled). |
| More Bars | Reposition other bars to the cursor location, including new added bars. |
| Trace Type | |
| Square | Display traces with vertical edges; this is the default option. |
| Sawtooth | Display traces with gradually ascending/descending edges. |
| Packet Name | Display abbreviated (initials) or full packet name. |
| Find | Find the pulse-width of a signal. |
| Pulse-width | |

Table 4:40 Waveform area; right-click menu description

Select Find Pulse-width in the right-click menu, show as figure 4-74.

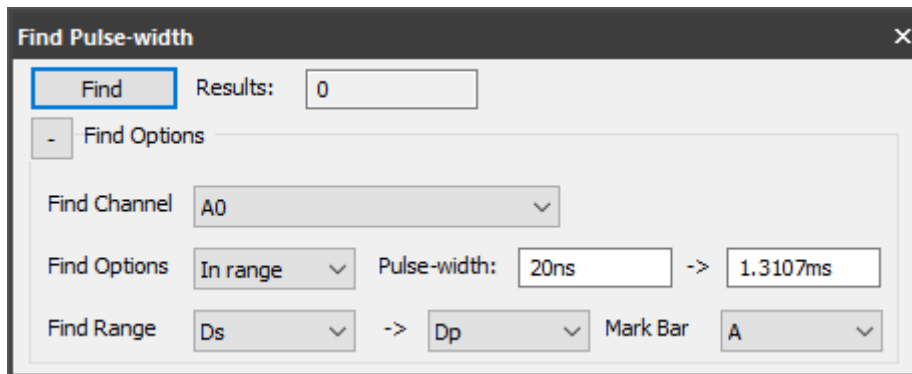


Figure 4-72 Find Pulse-width dialog box

| Item | Description |
|---------|------------------------------------------------------------------------------------------------------------------|
| Find | After setting needed condition, click the button to start searching. |
| Results | Show the number of data that meet the searched condition. The results will be listed in the Find Results window. |

Find Options


Find Channel Select one channel to find pulse width. Bus cannot be selected.



| | |
|--------------|------------------------------------------------------------------------------------|
| Find Options | Set the condition for searching, there are “In range”, “Min value”, “>”, “=”, “<”. |
| Pulse-width | Input the value or range for width. |
| Find Range | Select the search range. |
| Mark Bar | Marked with the bar in the position where pulse width is found. |

Table 4:41 Find Pulse-width dialog box description

Figure 4-73 is shown when the user right-clicks in the Channel Column in Waveform View.

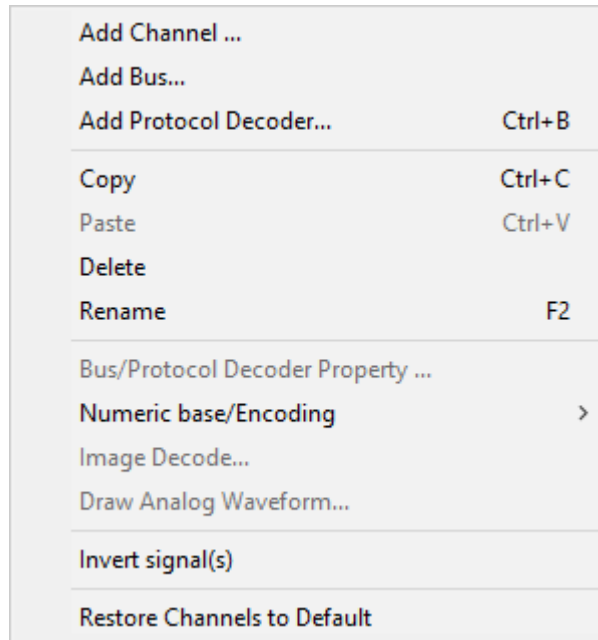**Figure 4-73 Channel/Bus column; right-click menu**

| Item | Description |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Add Element | |
| Add Channel | Add a channel; see chapter 4.14. |
| Add Bus | Add a bus; see chapter 4.15. |
| Add Protocol Decoder | Add a protocol decoder; see chapter 4.16. |
| Clipboard / Format | |
| Copy | Copy the selected channel or bus. Left-click with the mouse can be combined with pressing and holding SHIFT to select several channels or with CTRL to select a range of channels. |



| | |
|--------|-----------------------------------------------------------------------------------------------------------------------------|
| | Hot Key: CTRL + C. |
| Paste | Paste the copied channel(s) or bus(es). Hot Key: CTRL + V. |
| Delete | Delete the selected channel(s) or bus(es). Hot Key: DELETE. |
| Rename | Rename the selected channel or bus. This option is not available when multiple channels or buses are selected. Hot Key: F2. |

Functions

| | |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Bus/Protocol Decoder Properties | Access the bus or protocol decoder properties; see chapter 4.15 and 4.16. This item is only available when right-clicking on a bus and which menu is opened depends on whether a protocol decoder is assigned or not to the bus. |
| Numeric Base / Encoding | Change the data format; see chapter 4.58. |
| Image Decode | Display the data as an image; see chapter 4.34. |
| Draw Analog Waveform | Draw an analog waveform to indicate the change of state; see chapter 4.37. |
| Invert | For traces, display high levels as low and vice versa. Inverted traces are drawn with dotted lines and a horizontal, blue bar is shown above the channel name. All channels can be inverted independently. See Figure 4-74. |
| Restore Channels to Default | Restore all Bus/Channels settings to default. |

Table 4:42 Channel column; right-click menu description

NOTE Move the cursor to the bottom line of channel, the cursor will turn into an icon showing a two-sided arrow cut horizontally by a bar. Click and hold the left key and drag to adjust the height of trace.

Figure 4-74 shows an inverted signal. Note that the trace has become dotted and that a blue bar appears above the channel name (A3).

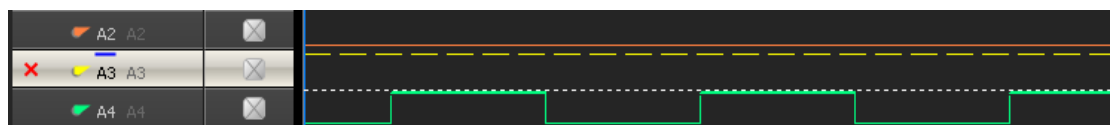


Figure 4-74 Signal inversion example; signal A3 is inverted

When right-clicking in the trigger column, the menu from Figure 4-75 is shown. The menu is used to set the channel's trigger condition as an alternative to clicking through the trigger box for the right condition.

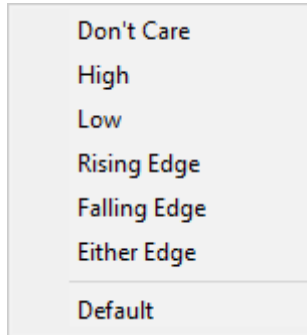


Figure 4-75 Trigger column; right-click on channel menu

| Item | Description |
|--------------|------------------------------------------------------------------------------------------------------------|
| Don't Care | No trigger condition. |
| High | Trigger on a high level, i.e. the state of the signal is 1. |
| Low | Trigger on a low level, i.e. the state of the signal is 0. |
| Rising Edge | Trigger on a change of state of the signal from 0 to 1 (low to high). |
| Falling Edge | Trigger on a change of state of the signal from 1 to 0 (high to low). |
| Either Edge | Trigger on a change of state of the signal; either from 0 to 1 (low to high) or from 1 to 0 (high to low). |
| Default | Reset the trigger conditions of all channels. |

Table 4:43 Trigger column; right-click on channel menu description

Figure 4-76 shows the trigger dialog box that is shown when right-clicking on a bus in the Trigger Column.

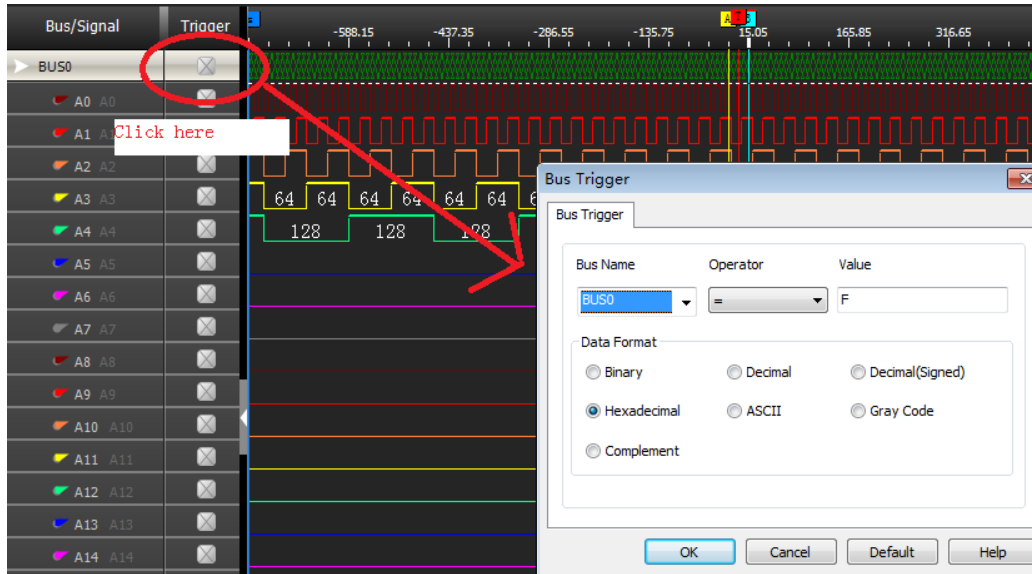


Figure 4-76 Trigger column; right-click on bus menu

| Item | Description |
|-------------|------------------------------------------------------------------------------------|
| Bus Name | Select one bus to trigger. |
| Operator | Select “=” or “Don’t Care”. |
| Value | Input one value when the operator selects “=”. The value range depends on the bus. |
| Data Format | Binary, Decimal, Decimal (Signed), Hexadecimal, ASCII, Gray Code, Complement. |

Table 4:44 Bus Trigger dialog box description

When right-clicking on a bar, the menu from Figure 4-77 is shown.

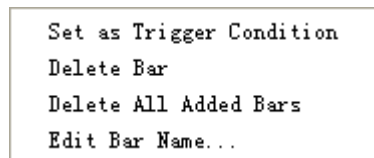


Figure 4-77 Bar; right-click menu

| Item | Description |
|--------------------------|--------------------------------------------------------------------------------------------------------------------------|
| Set As Trigger Condition | Set the trigger condition of each channel to equal the state (or edge) of the channel where the selected bar is located. |
| Delete Bar | Delete the selected bar. |
| Delete All Added Bars | Delete all added bars. |

Edit Bar Comments For user-added bars: Add a comment after the bar name. Ex: Add START to bar A2 to display the name as A2 (START). Comments can be maximum 10 characters long.

Table 4:45 Bar; right-click menu description

NOTE The T-bar has no right-click menu.

NOTE The A-bar, B-bar, Ds-bar and Dp-bar cannot hold comments or be deleted.

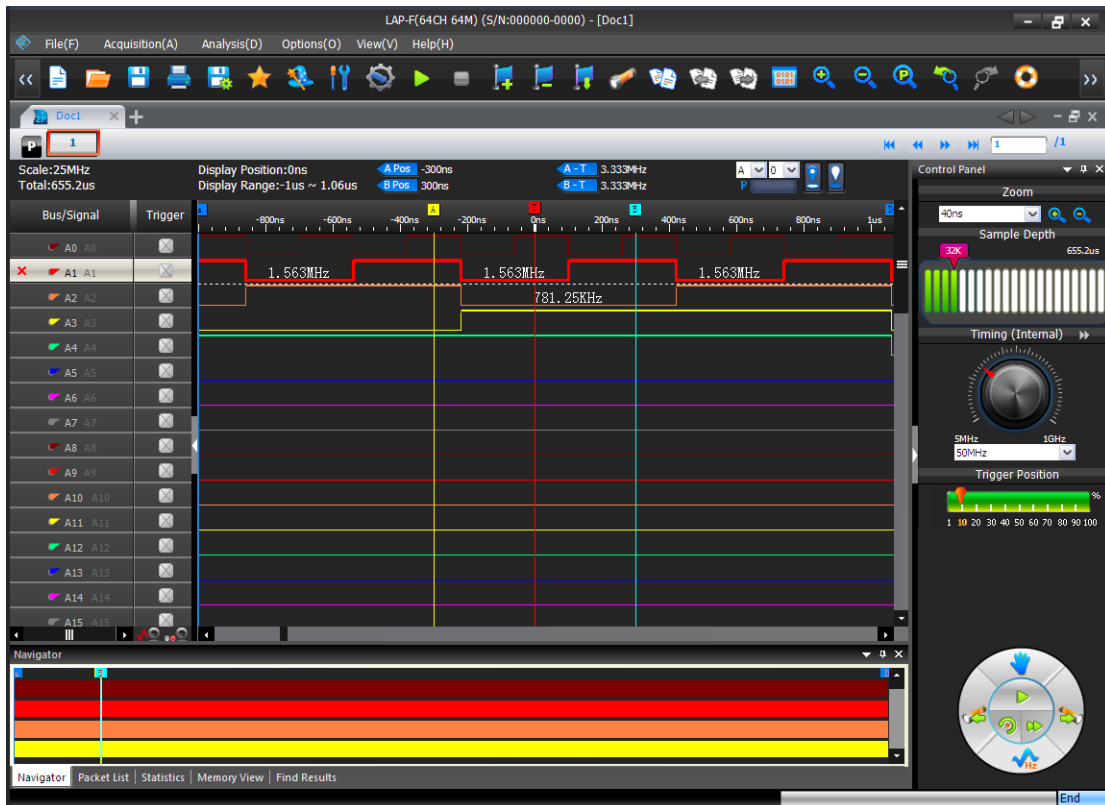


Figure 4-78 Example of trace formatting (ch. A1 has 3pt thickness)

4.45.2. State List

State List is a numeric view of the samples. As an alternative to the waveform traces, the State List shows all samples as digits. If the logic state of a signal is low then “0” is shown and if it is high then “1” is shown. Unknown states are shown as “U”. Each column shows the samples of one channel and the leftmost column shows the sampling time. The State List view is shown in Figure 4-79.

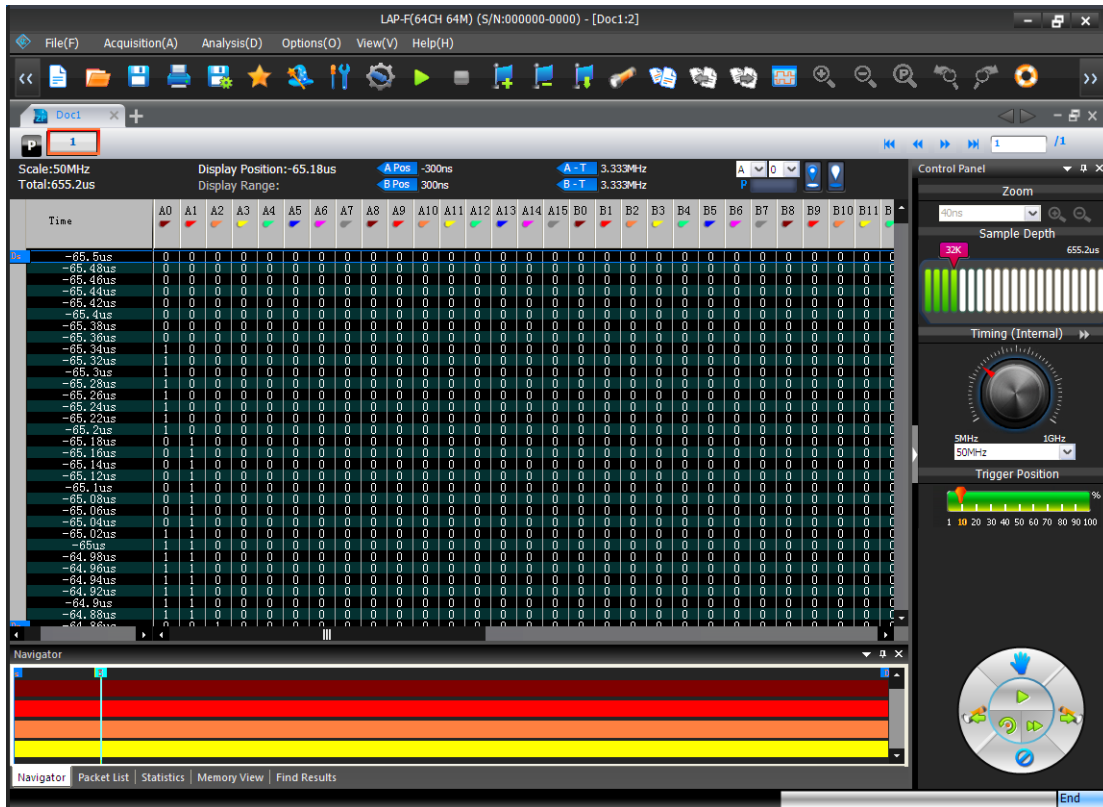


Figure 4-79 State List view

Note that there are three main presentations of the samples in the State List. One option is to show all samples. Alternatively, the user can select to display only those samples that include at least one change of state or in data. Table 4:46 shows an example of how this works: Samples #1, #2 and #3 are shown if the user views all samples. If the user chooses to show changes in state only then Sample #2 will be hidden, as all channel states are identical to those of sample #1. The purpose of showing samples with changes in state only is to facilitate observation by reducing the quantity of displayed data. Likewise, the user can choose to only show samples where there has been a change in the data; see an example of this in Figure 4-81.

NOTE No view mode will delete samples, only hide them.

| Timestamp | | ch. A1 | ch. A2 | ch. A3 | ch. A4 |
|-----------|-------------|--------|--------|--------|--------|
| 0 ns | (sample #1) | 1 | 1 | 1 | 1 |
| 5 ns | (sample #2) | 1 | 1 | 1 | 1 |
| 10 ns | (sample #3) | 1 | 0 | 1 | 1 |

Table 4:46 State List example; change of channel state



These presentation modes can be selected from by right-clicking in the State List number area; see Figure 4-80.



Figure 4-80 State List view; right-click menu in the number area

| Item | Description |
|----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Add Bar | Add a new bar to mark a sample in the list. The bar is added to the line where the cursor is placed. Contrary to the waveform bars, bars in the State List are horizontal since each line represents a time stamp. |
| Reposition | |
| A-bar and B-bar | Reposition the A- or B-bar to the cursor position. |
| Ds- and Dp-bar | Reposition the Ds- or Dp-bar to the cursor position. This option is only available if “Active Range” has been activated. |
| More Bars | Reposition another bar to the cursor position. |
| Data Display | |
| All Data | All samples are shown; this is the default display mode. |
| Show changes in state only | Hide samples with timestamp X if no signal has changed state from timestamp X-1 to timestamp X. |
| Show changes in data only | Hide samples with timestamp X if no data has changed from timestamp X-1 to timestamp X (for buses only); see Figure 4-81. |

Table 4:47 State List view; right-click menu in the number area

Figure 4-81 shows an example of the “Show changes in data only” function; had the function not been active there would have been tens of thousands of lines (one per sample) instead of twenty-something.

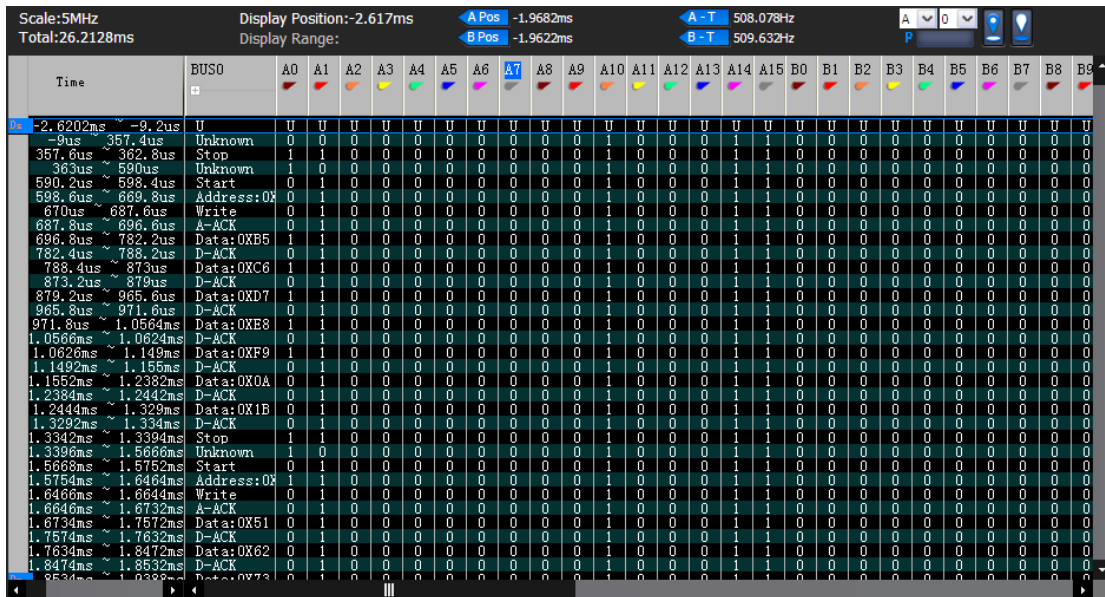


Figure 4-81 Show changes in data only example (I2C)

In State List view, the menu from Figure 4-82 is shown when right-clicking in the channel row above the number area.

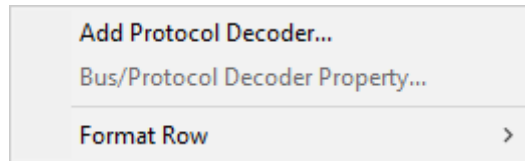


Figure 4-82 Channel/Bus (State List view); right-click menu

| Item | Description |
|-----------------------------|-----------------------------------------------------------------------------------------------------------------|
| Add Protocol Decoder | Add a protocol decoder; see chapter 4.16. |
| Protocol Decoder Properties | Set the protocol decoder properties; see chapter 4.16. This menu item is only available when clicking on a bus. |
| Format Row | Change the channel order or resize the column widths. |

Table 4:48 Channel/Bus (State List view); right-click menu description

4.46. Refresh

After the “Active Range” is activated, users can click it to refresh the selected data.



4.47. Zoom

Zooming can also be achieved using the mouse while holding CTRL; see chapter 4.44. Note also that all zoom functions are unavailable in the State List view.

4.47.1. In

Zoom in the waveform.

Hot Key: Z.

4.47.2. Out

Zoom out the waveform.

Hot Key: SHIFT + Z.

4.47.3. Fit to Screen

Show all data between Ds and Dp in the waveform view area.

Hot Key: CTRL + ALT + P.

4.47.4. Previous

Cancel the last zoom. In other words; go back to the previous zoom level.

Hot Key: CTRL + Z.

4.47.5. Cancel Previous

Undo the previous zoom command.

Hot Key: CTRL + Y.

4.48. Control Panel

The Control Panel provides direct access to important acquisition and triggering settings and thereby helps to speed up the user's interaction with ZP-Logic. An example could be when the user wishes to redo a capture with a higher sample rate.

The Control Panel is located in the rightmost part of the window estate.

See Figure 3-2 for the Control Panel right-click menu.

| Item | Description |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Zoom | Adjust the waveform zoom level; see chapter 4.47. |
| Memory depth | Select the memory depth per channel; see Table 4:16. |
| Sampling Mode | Adjust the sample rate by selecting a value from the pull down menu, inputting a value by hand or by dragging the pointer of knob. Click the grey, double arrows to switch between external and internal acquisition mode; see Table 4:16 for explanations of these. |
| Trigger Position | The trigger position determines which samples are stored. At 10%, 10% of the available memory is allocated to pre-trigger data and 90% to post-trigger data. |
| Action Wheel | See Figure 4-83 and Table 4:50. |

Table 4:49 Control Panel description



Figure 4-83 Action Wheel

| # | Item | Description |
|---|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| A | Cursor type | Switch between cursor types Hand and Pointer; see chapter 4.44. |
| B | Single Capture | Capture once; see chapter 4.23. |
| C | Autocapture | LAP-F1 selects the optimal sample rate and samples; see chapter 4.26. |
| D | Repeated Capture | Capture on regular intervals; see chapter 4.24. |
| E | Trace information | Show information inside the traces (between two edges); see the available information types in Table 4:11. Note that there needs to be sufficient space between the edges for information to be shown. See Figure 4-84 as an example of times being displayed. |

| | | |
|---|----------|-----------------------------------------------------------------------------------------------------|
| F | Previous | Center the display around the previous event that satisfies the Condition Set of the Find function. |
| G | Next | Center the display on the next event that satisfies the Condition Set of the Find function. |

Table 4:50 Action Wheel description

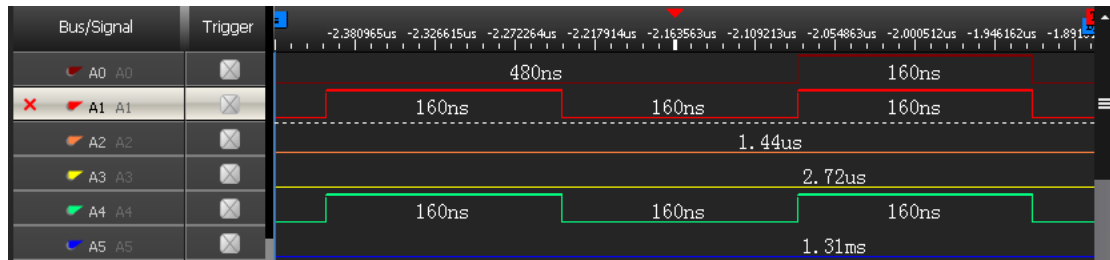


Figure 4-84 Time between two edges is displayed inside the traces

4.49. Memory View

Memory View lets users see what the memory looks like after the signals have been transmitted. By decomposing the packets into basic elements, the relationship between data and addresses in a protocol is clarified. The Memory View window is located in the Secondary Display Area.

Concretely, the Memory View window consist of tables that show which data have been read from- and written to which address in the memory. Write data are written in blue; Read in blue; see an example of read data in Figure 3-1.

Two view modes can be accessed by right-clicking: Compact (default) and Full. The Compact Mode saves space as the information is presented in a matrix form; addresses are found by adding the column number/letter to the end of the row name, and the data located at that address is read directly from the intersection of the row/column.

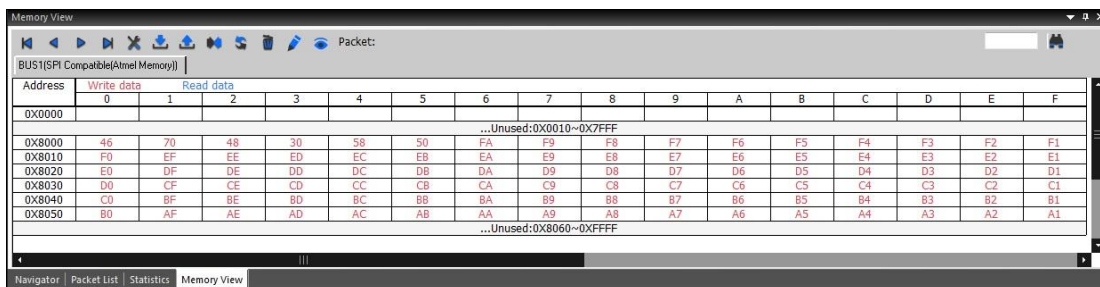


Figure 4-85 Memory View window showing an SPI protocol

| Item | Description |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | Navigation buttons: Move between packets. The packet in focus will be in the middle of the waveform view area and marked by the reaction bar (A-bar by default). The packet data will be displayed in the Memory View window. |
| | Options; See Table 4:52 Memory View options dialog box description |
| | Import/Export/Merge: Users can import, export or merge .txt and .csv file for display in the Memory View or another software. |
| | Refresh. |
| | Reset: Delete the data in the Memory View window. |
| | Write Operation: The last written data will be shown in the cells as red text on white background. If there is incongruence between read and written data to the same address then errors will be shown on yellow background. |
| | Read Operation: The last read data will be shown in the cells as blue text on white background. If there is incongruence between read and written data to the same address then errors will be shown on yellow background. |
| Packet | Show the number of the packet where the reaction bar is located. |
| | Find: Input an address to look it up and highlight it with a blue frame. |

Table 4:51 Memory view description

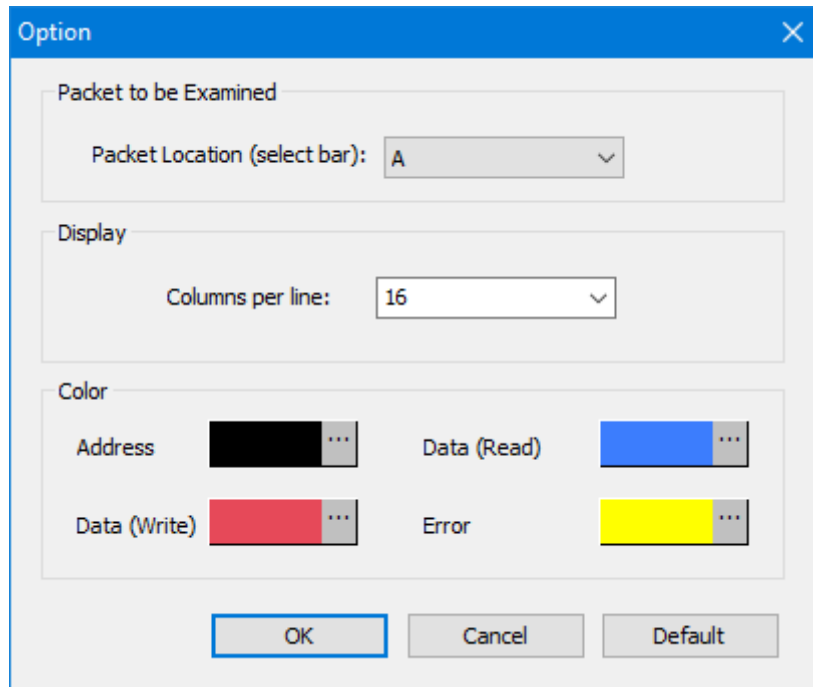


Figure 4-86 Memory View options dialog box

| Item | Description |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Packet Location | The Memory View will analyze the packet that is located under the selected bar; the A-bar is selected by default. Note that the Ds, Dp and T-bars cannot be chosen. |
| Columns per line | Choose how many cells to display per line. 4-100 is the permitted range; 16 is default. |
| Color | Change the color settings. |

Table 4:52 Memory View options dialog box description

4.50. Navigator

The Navigator is a condensed form of the main waveform that is always zoomed to fit the entire capture of the pages in focus. It facilitates waveform navigation by providing an overview of the entire acquisition and a tool for quick movement between distant parts of the acquisition. The Navigator is synchronized with the main waveform so users can shift the waveform focus from one part of the acquisition to another simply by clicking in the Navigator.



A light blue frame (in the left part of Figure 4-87) in the Navigator indicates which part of the waveform that is in focus; this frame naturally changes size when zooming as it is inverse proportional to the zoom rate. Four signals are shown at a time; scroll up or down to focus on other channels.

The Navigator is show by default under the waveform area in the Secondary Display area; see Figure 4-87.

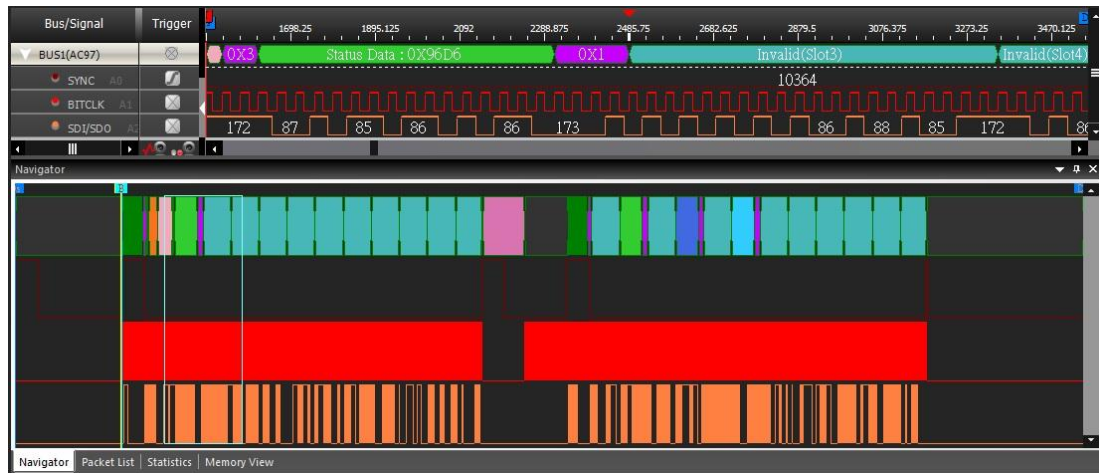


Figure 4-87 Navigator window example showing the AC97 protocol

4.51. Packet List

The Packet List shows all the acquired packets in their decomposed form. By presenting the packets in list form, the Packet List facilitates observation and analysis of all packets and their relation. Only packets under a protocol decoder can be displayed. The Packet List is located in the Secondary Display area; see Figure 4-880.

If packet in the Packet List is double-clicked, the waveform display focuses shifts focus to the location of that packet. On the contrary, double-click the waveform of a packet, the packet list also jumped to the location of the packet, and with the red box prompts, its packet guild grey light show. Mobile waveform window, the packet list will also synchronously mobile display packet, on the other hand, the mobile packet in the packet list, waveform window will not be shown synchronously move.

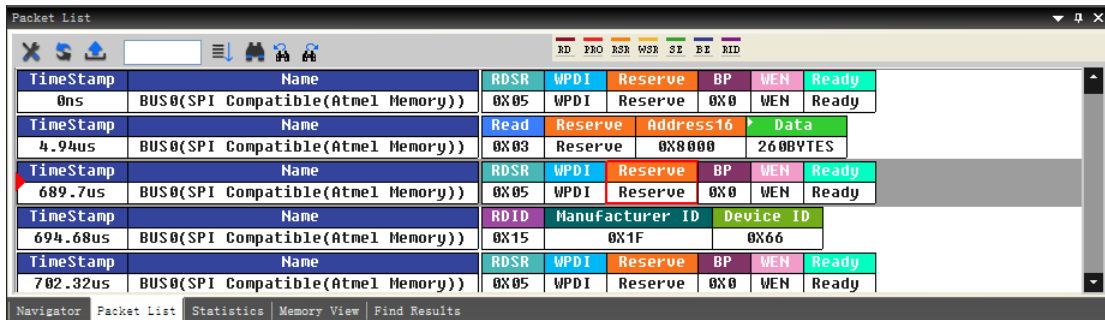


Figure 4-88 Packet List window example showing an SPI protocol

| Item | Description |
|------|-------------|
|------|-------------|

Menu Bar

| | |
|----------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| | Settings; Open the Packet List Settings dialog box; see Figure 4-90. |
| | Refresh the content. |
| | Export: Export the packet list; see chapter 4.7.1. |
| <input type="text"/> | Find a particular packet and display at the top of the Packet List. The data is highlighted with a red frame when found; see Figure 4-89. |
| | This also can search string. Input a string to find and it would be displayed the first packet of String at the top. For strings. |
| | Go to the previous or next packet that satisfies the Find condition. |

Display Area

| | |
|-----------|-------------------------------------------------------|
| TimeStamp | The start time ranks the packets by ZP-Logic. |
| Name | The packet name. |
| Data | The data in the packet. |
| Length | The length between the start point and the end point. |

Table 4:53 Packet List Items description

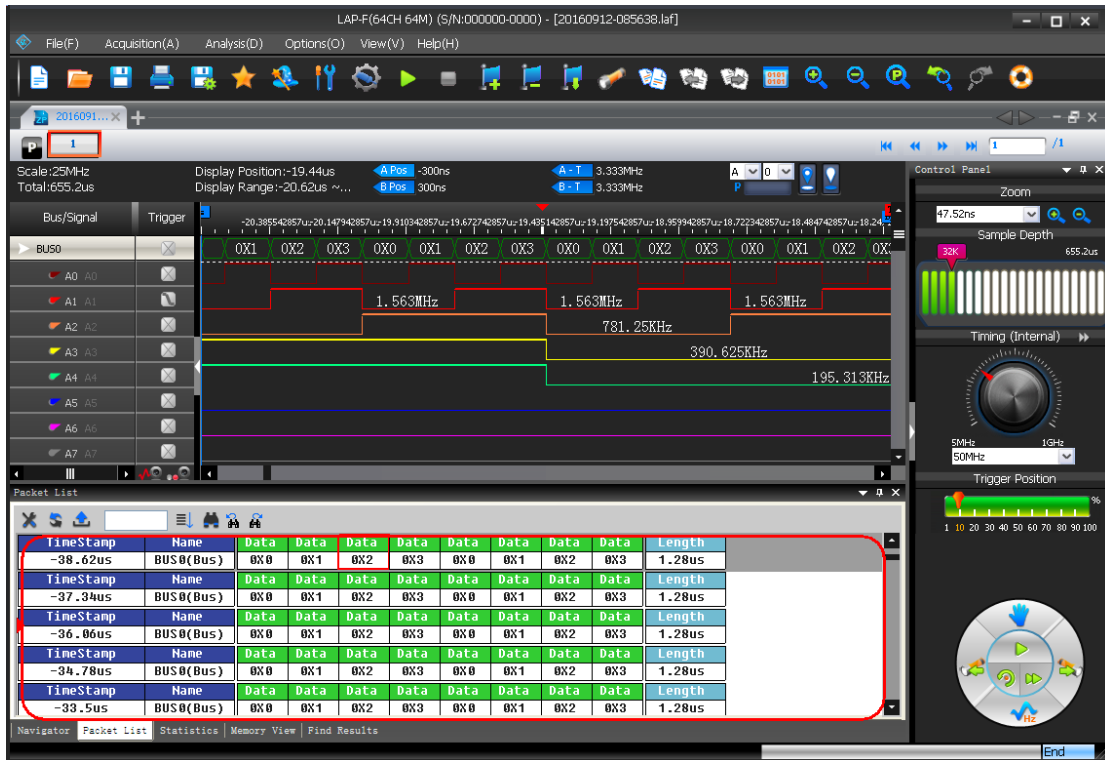


Figure 4-89 Packet List / Found item highlighted

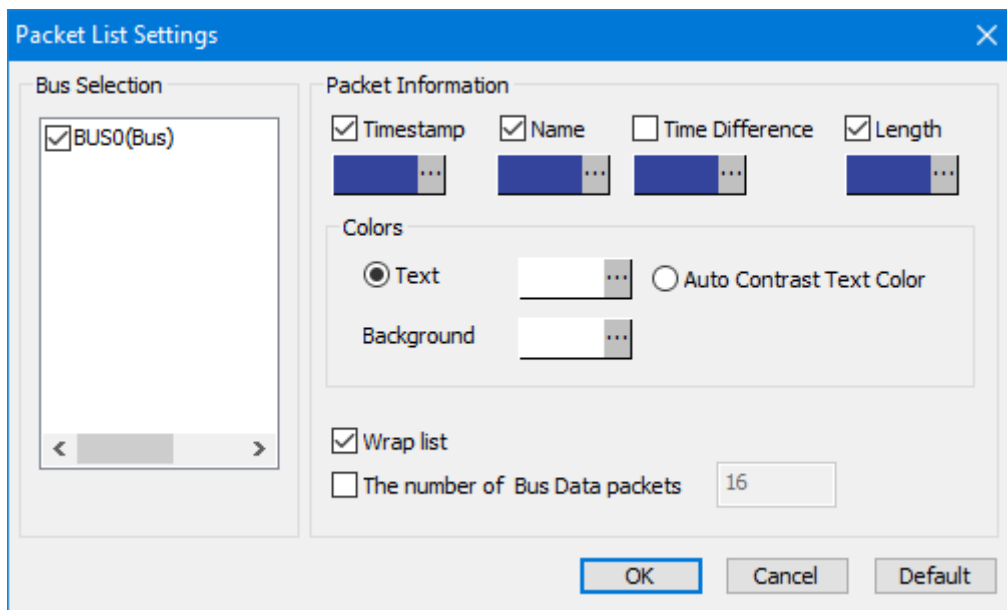


Figure 4-90 Packet List Settings

| Item | Description |
|---------------|---------------------------------------------------------------------|
| Bus Selection | Select the buses to be displayed. Multiple bus, can only choose one |

Packet Information


| | |
|-----------|---------------------------------------------------------|
| TimeStamp | Select the Packet start time to be displayed and color. |
|-----------|---------------------------------------------------------|



| | |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| Name | Include the names of the packets. |
| Time Difference | Time difference from packet X to packet X-1. |
| Length | Time between start packet and end packet. |
| Colors | |
| Text | Change the text color; by default it's white. |
| Auto Contrast Text Color | Automatically select text colors that contrast their background colors. |
| Background | Change the Packet List background color. |
| Wrap list | If a packet contains too much data for all to be shown on one line, it is shown over two or more lines; selected by default. |
| The number of Bus Data packets | When Wrap List is enabled, select how much data packets to be shown per line (between 1 and 64); applies to Data only. |

Table 4:54 Packet List Settings description

Figure 4-91 shows the menu that is shown when right-clicking in the Packet List.

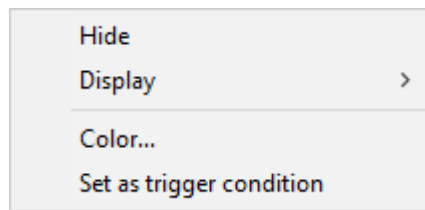**Figure 4-91 Packet List Right-click menu**

| Item | Description |
|--------------------------|--------------------------------------------------------------------------|
| Hide | Hide the current selection of packets. |
| Display | Display the hidden packets. |
| Color | Change the packet color. |
| Set as Trigger Condition | Set the particular data as the trigger condition; see Figure 4-92 below. |

Table 4:55 Packet List Right-click menu description

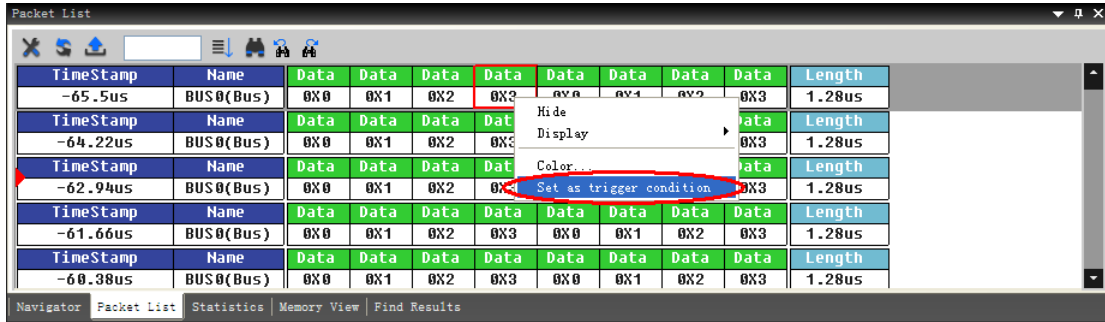


Figure 4-92 Packet List / Set as trigger condition

NOTE When Data packet list more than 64, the user needs to click on the arrow left upper corner of the Data, according to the content of the hidden will bring up the dialog displays all the Data.

4.52. Statistics

Statistics Window is under the waveform view area after activated; it displays the quantity of positive and negative periods in a specific time range.

The Statistics window facilitates counting of signal transitions for each channel. Specifically, *Full*-, *Positive*- and *Negative periods* are all counted. *Conditional* counters are also shown; these count all periods that are shorter or longer than a set of user defined conditions. Finally, it is also possible to adjust the data range, i.e. to only count activity within a certain range of the total acquisition.

The Statistics window is shown in Figure 4-93; it is open by default and located in the Secondary Display area.

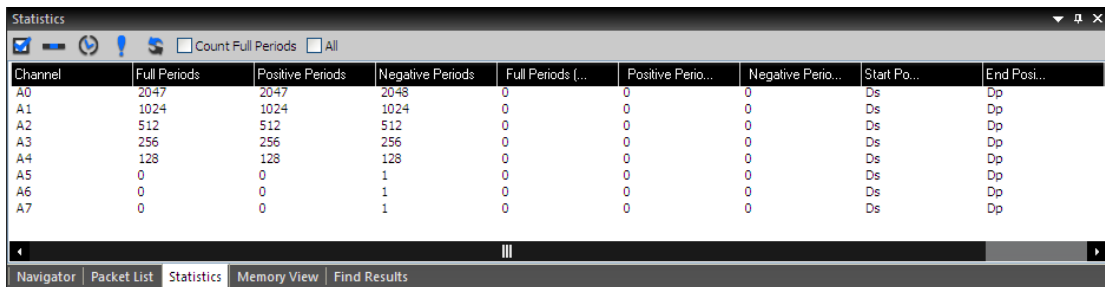


Figure 4-93 Statistics window example showing an SPI protocol








| Item | Description |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
|  | Channel Selection; The default option is A0 - A7.see the dialog box in Figure 4-94. |
|  | Customize; decide which counters to show; except Probe (name) all parameters are selected by default; see the dialog box in Figure 4-95. |
|  | Filter; only count periods that fit the filter conditions. This function is not activated by default; see the dialog box in Figure 4-96. |
|  | Highlight signals; mark channels that don't fit the filter conditions in red; see the dialog box in Figure 4-97. |
|  | Refresh; re-run the counters if there has been any change to the acquisition or the settings. |
| Count full periods only | Periods that don't have both a rising and a falling edge will not be counted. |
| ALL | Consider all the acquired data. This function requires the processing of temporary files. |

Table 4:56 Statistics window description

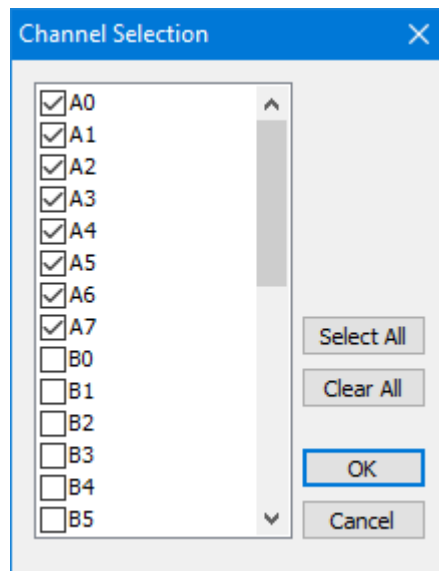


Figure 4-94 Statistics / Channel selection dialog box

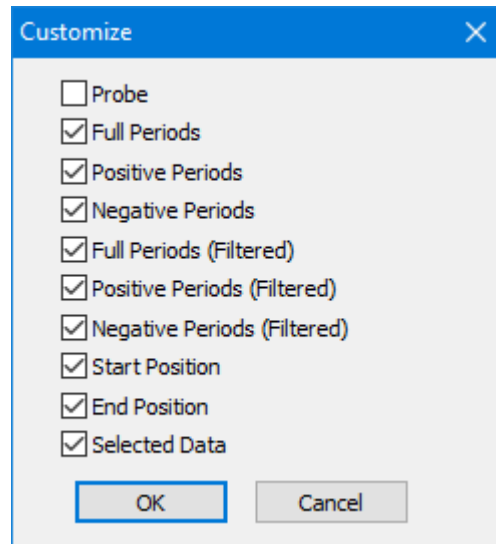


Figure 4-95 Statistics / Customize dialog box

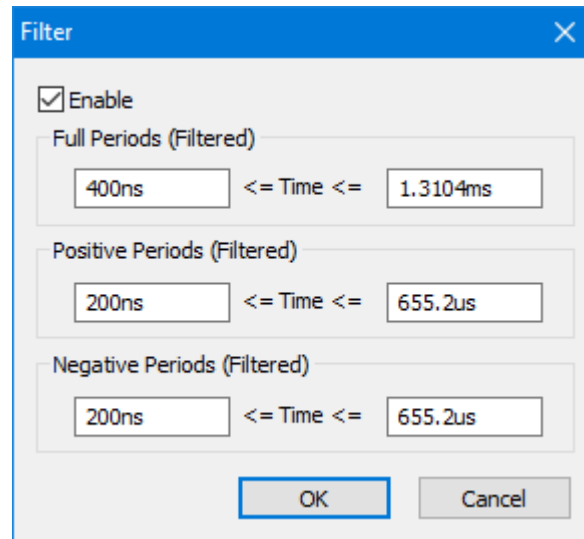


Figure 4-96 Statistics / Filter dialog box

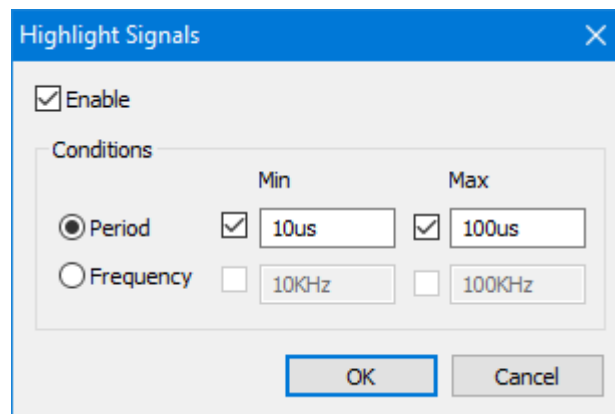


Figure 4-97 Statistics / Highlight signals dialog box

4.53. LTR Monitor

The LTR Monitor window is used to monitor the data transfer between the DUT and the computer when using the Long-term Record function. It is located in the Secondary Display area; see Figure 4-98.

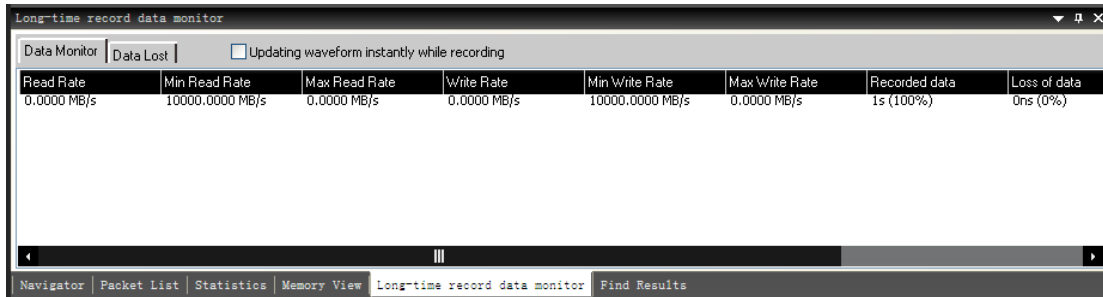


Figure 4-98 TLR Monitor window


NOTE The high Lost Data percentage in the example owes to the screenshot being taken in demo mode.

| Item | Description |
|---------------------------------------------|------------------------------------------------------|
| Read | |
| Read Rate | The current rate at which the LAP-F1 reads data. |
| Min Read Rate | The minimum rate at which the LAP-F1 can read data. |
| Max Read Rate | The maximum rate at which the LAP-F1 can read data. |
| Write | |
| Write Rate | The current rate at which the LAP-F1 writes data. |
| Min Write Rate | The minimum rate at which the LAP-F1 can write data. |
| Max Write Rate | The maximum rate at which the LAP-F1 can write data. |
| Recorded Data | Data quantity currently acquired. |
| Loss of data | Data quantity currently lost. |
| File Save | Location where the acquired data are stored. |
| Data Lost | |
| No. | The number of lost data. |
| TimeStamp | Time of lost data. |
| Width | The width of lost data |
| Updating waveform instantly while recording | While recording, updating waveform instantly. |

Table 4:57 LTR Monitor window dialog box

4.54. Find Results

The Find results function is used to locate events within a certain data range, using a straight-forward interface shown in figure 4-101.

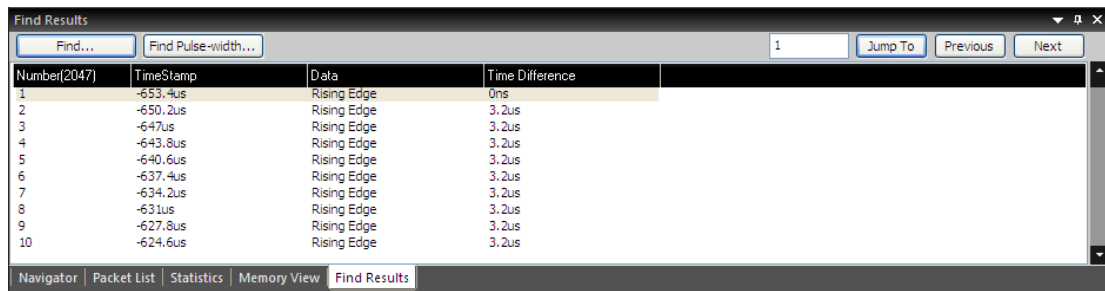
Figure 4-99 Find Results window

| Item | Description |
|------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Find | Bring up the find dialog box, set the need to find the bus/channel and conditions. |
| Find Pulse-width | Set the search condition and search the pulse. |
| Jump To | Input one index value matching statistics condition and click 'Jump To' go to that value in the statistics data and mark it with a bar. |
| Previous | Find the previous data that fitting the condition. |
| Next | Find the next data that fitting the condition. |
| Number | To display the number of eligible, starting from 1 until the last. |
| TimeStamp | To show eligible time pattern. |
| Data | Displays the starting point of the data found. |
| Time Difference | Show the time difference between the previous result and the result. |

Table 4:58 Find Results window description

4.55. Timing Bar


Figure 4-100 Timing Bar



 
 


 
 


| Item | Description |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| Scale | The scale is the inverse of the zoom level. |
| Total | Total acquisition time. |
| Waveform Center | Location of the current center of the waveform. |
| Display Range | Timing information for the part of the waveform currently in view. |
|  | The position of the A-bar; click to select another bar. |
|  | The position of the B-bar; click to select another bar. |
|  | Time difference between the A and T-bars; click to select a different range. |
|  | Time difference between the B and T-bars; click to select a different range. |
|  | Select a bar. |
|  | Memory Page on which the bar is located. |
|  | Go to the selected bar. |
|  | Reposition the selected bar to the current center of the waveform area. |

Table 4:59 Timing Bar description

4.56. Arrange Windows

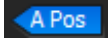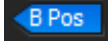The windows showing the files (as waveforms or as lists of states) can be moved around freely.

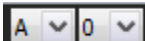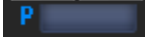4.56.1. Horizontal

Display the open files above each other.

4.56.2. Vertical

Display the open files next to each other.

4.56.3. Reset Window Locations

Reset all windows to their default positions.



4.57. Split Screen

If more than one screen is connected to the computer ZP-Logic is running on, users can choose to show ZP-Logic on either one of the screens or on both.

4.57.1. Show on All

Show ZP-Logic on both detected screens. The waveform area is amplified to show a larger part of the traces.

4.57.2. Show on Primary

Show ZP-Logic on what is defined as the primary screen.

4.57.3. Show on Secondary

Show ZP-Logic on what is defined as the secondary screen.

4.58. Numeric Base / Encoding

Users can choose among seven types of number systems and encodings for the displayed bus data; see Table 4:60. Hexadecimal is the default format.

| Numeric base / Encoding | Description |
|-------------------------|---------------------------------------------------------------------------------------------------------------------|
| Binary | Data are shown using the binary number system. |
| Decimal | Data are shown using the decimal number system. |
| Decimal (Signed) | Data are shown using the signed decimal number system; one bit (the first on the left) is used to specify the sign. |
| Hexadecimal | Data are shown using the hexadecimal number system. |
| ASCII | Data are encoded as ASCII characters; this only works for buses that comprise at least seven signals. |
| Gray Code | Data are encoded as Gray code. |
| Complement | Data are encoded as complements. |

Table 4:60 Available data formats



Help

Press ALT + H to open this Main Menu item with the keyboard.

4.59. Menu Layout

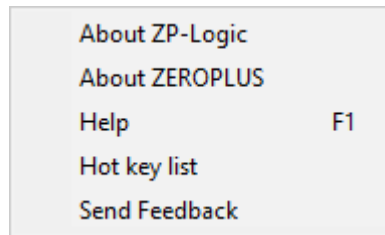


Figure 4-101 Help drop-down menu

4.60. About ZP-Logic

The About ZP-Logic window shows the software version, modification history, the instrument model, serial number and so on; see Figure 4-102. This window is almost identical to the information window shown the first time the ZP-Logic is started.

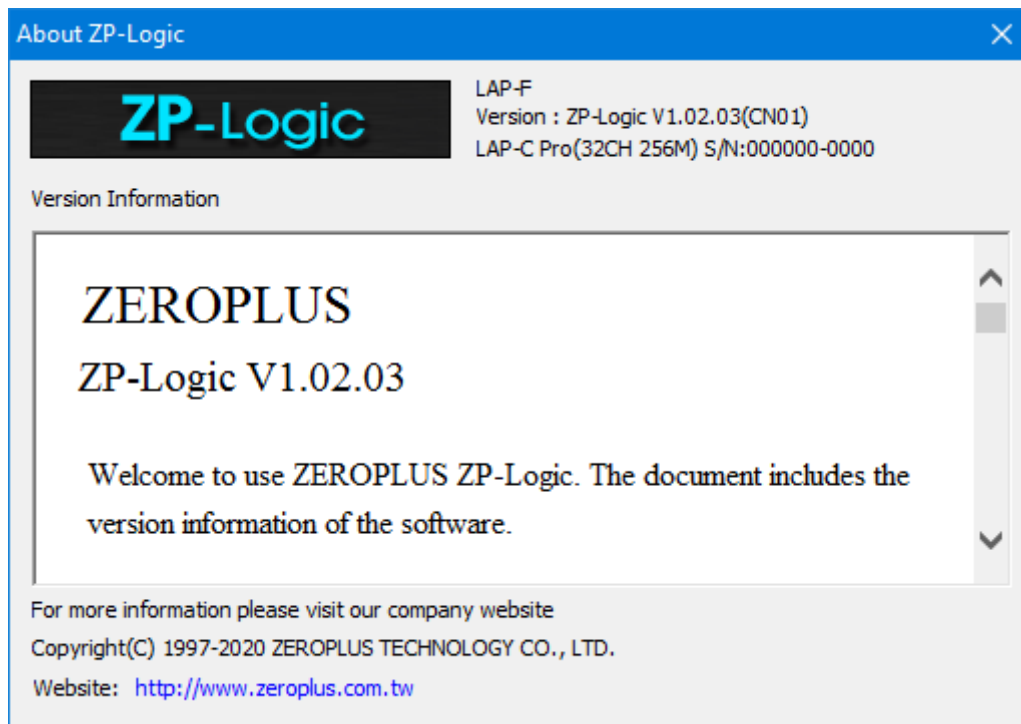


Figure 4-102 About ZP-Logic information window



4.61. About ZeroPlus

The About ZeroPlus item on the menu takes the user to the ZeroPlus website; this is opened in a new tab in the default web browser.

4.62. Help

Click the Help item to open the Help file. The Help file contains descriptions of the installation procedure and of menus and functions, answers to FAQs etc. It is contains a Search function to facilitate lookups.

Hot Key: F1.

4.63. Hot Keys

The Hot Keys item displays a list of all Hot Keys combinations. Hot Keys are keyboard combinations that the user can press to execute an action or a function without having to open a menu or use the mouse. Some Hot Keys require only a single keystroke.

Users can customize the Hot Keys in the Settings menu; see chapter 4.11.6 for descriptions of the dialog box fields.

| Command | Hot Keys | Description |
|--------------------|------------|-------------------------|
| File→New | Ctrl+N | Create a new file. |
| File→Open | Ctrl+O | Open an exit file. |
| File→Close | Ctrl+F4 | Close the current file. |
| File→Save | Ctrl+S | Save the file. |
| File→Print | Ctrl+P | Print the file. |
| File→Print Preview | Ctrl+Alt+I | Preview the printing. |



| | | |
|-------------------------------------|------------|----------------------------------------------------------------------|
| Acquisition→Single Capture | F5 | Capture the signal. |
| Acquisition→Repeated Capture | Ctrl+F5 | Capture the signal continuously. |
| Add depth | Ctrl+U | Increase the sampling depth. |
| Decrease depth | Ctrl+D | Decrease the sampling depth. |
| Analysis→Find | Ctrl+F | Open the Find dialog box to set find conditions. |
| Previous | Ctrl+← | Go to the previous find condition. |
| Next | Ctrl+→ | Go to the next find condition. |
| Acquisition→Add Protocol Decoder | Ctrl+B | Open the Add Protocol Decoder dialog. |
| Analysis→Go To | Ctrl+G | Open the Go To....dialog. |
| View→Cursor Type | Space | Switch between Normal and Hand mode. |
| View→Zoom→Out | Z | Zoom out the waveform. |
| View→Zoom→In | Shift+Z | Zoom in the waveform. |
| Whole page | Ctrl+Alt+P | Whole page mode. |
| Recovery zoom | Ctrl+Z | Return to the last zooming. |
| Cancel zoom | Ctrl+Y | Cancel the last zooming. |
| Help→Help | F1 | Open the operating instructions of ZeroPlus Logic Analyzer. |
| Go to A bar | A | Move A Bar with waveform to the middle of waveform area and lock it. |



| | | |
|---------------|---------------------|----------------------------------------------------------------------|
| Go to B bar | B | Move B Bar with waveform to the middle of waveform area and lock it. |
| Go to T bar | T | Move T Bar with waveform to the middle of waveform area. |
| Reset A bar | Shift+A | Move A Bar to the middle of waveform area. |
| Reset B bar | Shift+B | Move B Bar to the middle of waveform area. |
| Reset T bar | Shift+T | Move T Bar to the middle of waveform area. |
| Change scale | Ctrl+Mouse Wheel | Change the display scale of waveform area. |
| Left | ← | Move the display area/active bar to the left. |
| Right | → | Move the display area/active bar to the right. |
| Up | ↑ | Move the display area upwards. |
| Down | ↓ | Move the display area downwards. |
| Previous page | Ctrl+Page Up | Go to the previous memory page. |
| Next page | Ctrl+Page Down | Go to the next memory page. |
| First page | Ctrl+Home | Go to the first memory page. |
| Last page | Ctrl+End | Go to the last memory page. |
| Previous view | Page Up | Go to the previous visible area. |
| Next view | Page Down | Go to the next visible area. |



| | | |
|------------------|---------------------------------------------|----------------------------------------------------------------------|
| First view | Home | Go to the front end of the current visible area. |
| Last view | End | Go to the tail end of the current visible area. |
| Copy | Ctrl+C | Copy the selected item(s) in the channel area. |
| Paste | Ctrl+V | Paste the copied item (s) in the channel area. |
| Delete | Delete | Delete the selected item. |
| Rename | F2 | Rename the selected item. |
| Select all | Ctrl+A | Select all channels in the channel area. |
| Go to bar | Number Key | Move the corresponding Bar and the waveform to the middle of screen. |
| Move bar | Shift+Number Key in the main keyboard | Move the corresponding Bar only to the middle of screen. |
| Cancel | Esc | Cancel |
| Open menu | Alt+Letter with a baseline | Perform the menu command(or command of other baseline). |
| Show waveform | Wheel | Move the waveform. |
| First channel | Ctrl+ ↑ | Select the first channel. |
| Last channel | Ctrl+ ↓ | Select the last channel. |
| Previous channel | Shift+ ↑ | Select the previous channel.(Multiple-choice) |



| | | |
|--------------|----------|----------------------------------------------|
| Next channel | Shift+ ↓ | Select the next channel.(Multiple-choice) |
|--------------|----------|----------------------------------------------|

Table 4:61 Hot Key descriptions

4.64. Send Feedback

The Send Feedback form can be used to contact our Technical Support if the user runs into a problem. Users are requested to provide contact information and a description of the problem. Attachments can also be uploaded; see Figure 4-103 Send Feedback dialog box



The benefit of using the Send Feedback form to contact the Technical Support is that data and information is automatically added to the communication: file information, instrument model, acquisitions settings, system parameters etc. This information makes it easier for the support team to get to the root of the problem and therefore improves response times.

Users who prefer to contact our Technical Support team by means of regular email should use the following address: service_2@zeroplus.com.tw

Figure 4-103 Send Feedback dialog box

| Item | Description |
|------|-------------|
|------|-------------|

Contact Information



| | |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Company / School Name | Name of the senders company / institution |
| Sender | Name of the sender |
| User Email | Sender's email address |
| Phone | Sender's phone number |
| Subject | Sender's brief description of the issue. |
| Attachment | Relevant files, graphs etc can be attached to the form. |
| Content | Elaborate a written description of the issue. |
| Parameters | ZP-Logic automatically adds information about the instrument type, acquisition settings etc. to the file to facilitate problem solving. |

Table 4:62 Send Feedback dialog box description



5. Contact Us

| Sales Department | |
|------------------|------------------------------------------------------------------|
| Email | sales@zeroplus.com.tw |
| Phone | +886-2-6620-2225 extension #380 |

Table 5:1 Sales department contact info

| Technical Support | |
|-------------------|--------------------------------------------------------------------------|
| Email | service_2@zeroplus.com.tw |

Table 5:2 Technical support contact info